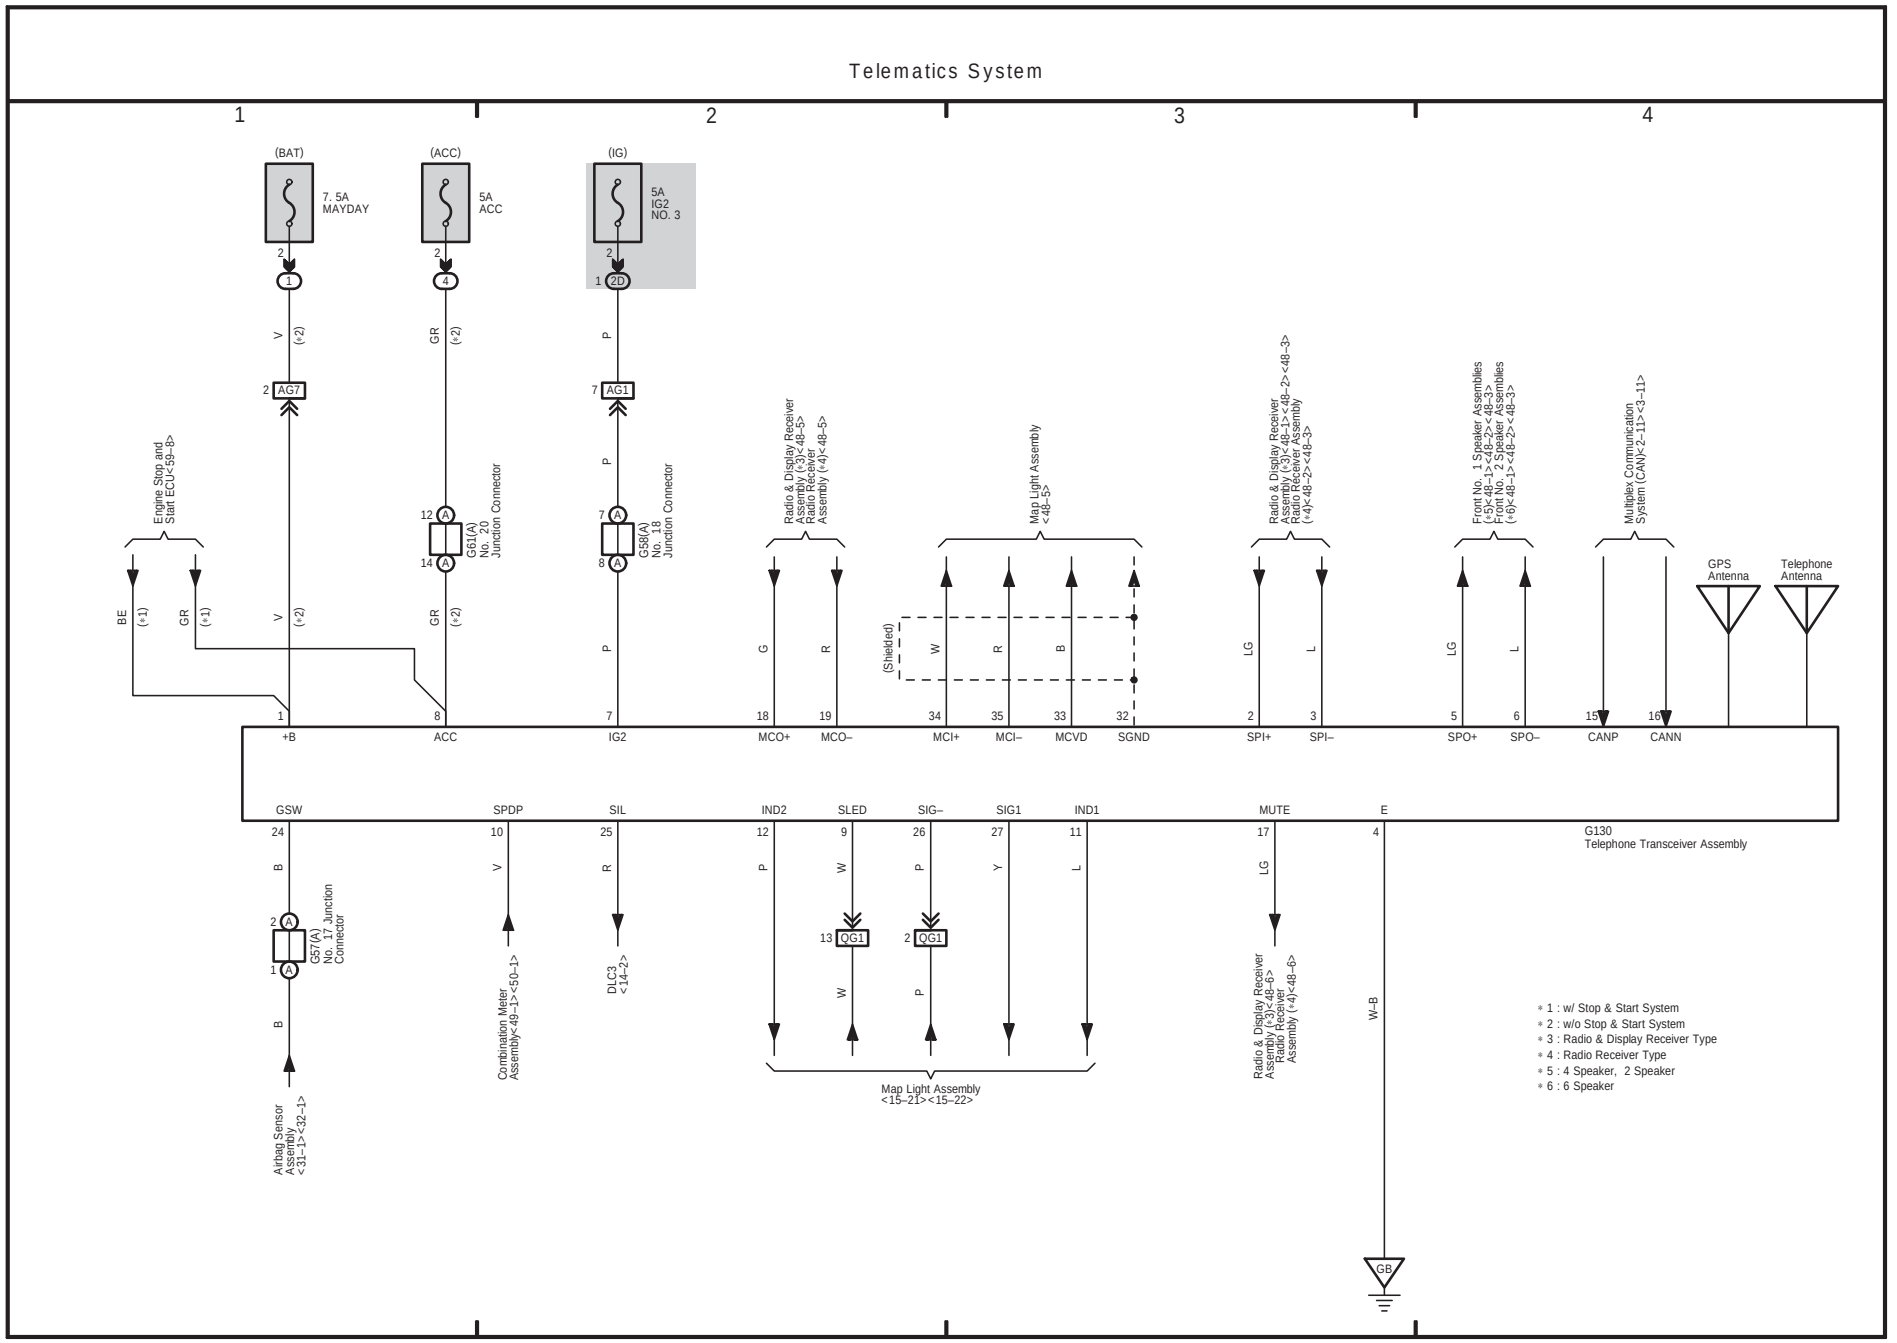

Telematics System
1
2
3
4
(BAT)
7. 5A MAYDAY
(ACC)
5A ACC
(IG)
5A IG2 NO. 3
Engine Stop and Start ECU<59–8>
Junction Connector
Radio & Display Receiver Assembly (*3)<48–5> Radio Receiver Assembly (*4)<48–5>
Map Light Assembly <48–5>
Radio & Display Receiver Assembly (*3)<48–2><48–3> Radio Receiver Assembly (*4)<48–2><48–3>
Front No. 1 Speaker Assemblies (*5)<48–1><48–2><48–3> Front No. 2 Speaker Assemblies (*6)<48–1><48–2><48–3>
Multiplex Communication System (CAN)<2–11><3–11>
GPS Antenna
Telephone Antenna
+B
ACC
IG2
MCO+
MCO–
MCI+
MCI–
MCVD
SGND
SPI+
SPI–
SPO+
SPO–
CANP
CANN
GSW
SPDP
SIL
IND2
SLED
SIG–
SIG1
IND1
MUTE
E
G130
Telephone Transceiver Assembly
Airbag Sensor Assembly <31–1><32–1>
Combination Meter Assembly<49–1><50–1>
DLC3 <14–2>
Map Light Assembly <15–21><15–22>
Radio & Display Receiver Assembly (*3)<48–6> Radio Receiver Assembly (*4)<48–6>
G
W–B
* 1 : w/ Stop & Start System
* 2 : w/o Stop & Start System
* 3 : Radio & Display Receiver Type
* 4 : Radio Receiver Type
* 5 : 4 Speaker, 2 Speaker
* 6 : 6 Speaker