
Connector Joining Wire Harness and Wire Harness

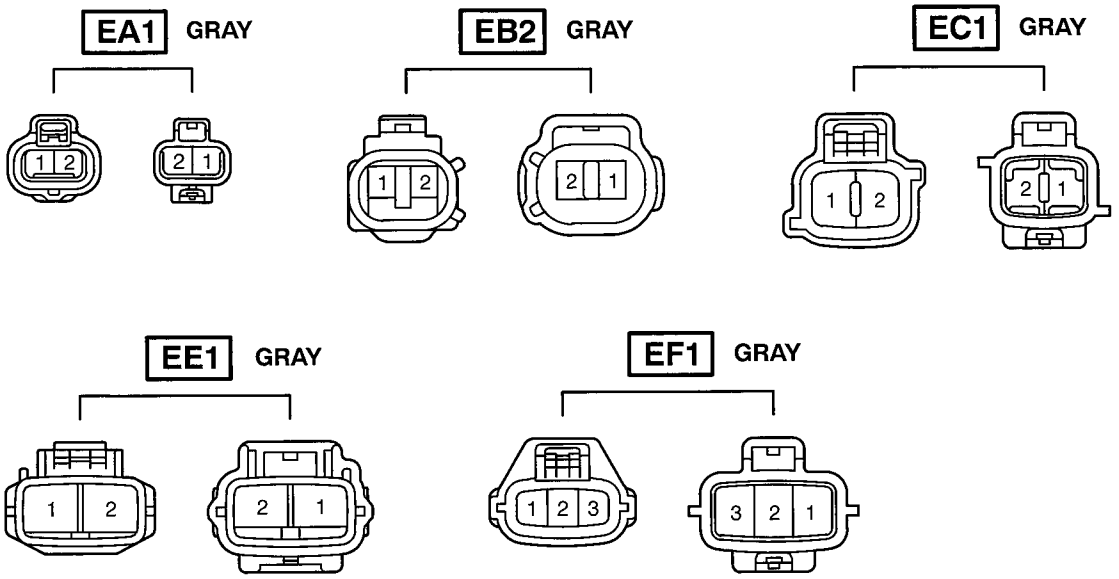

Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Room No. 2 Wire and Engine Room Main Wire (Front Right Fender Apron)
EB2	Engine No. 2 Wire and Engine Room Main Wire (Near the Engine Room R/B)
EC1	Engine No. 2 Wire and Differential Wire (Near the Starter)
EE1	Engine Room Main Wire and Engine Wire (Near the Engine Room R/B)
EF1	Engine Room Main Wire and Engine No. 4 Wire (Near the Alternator)