

Connector Joining Wire Harness and Wire Harness


(Europe) IA1 GRAY

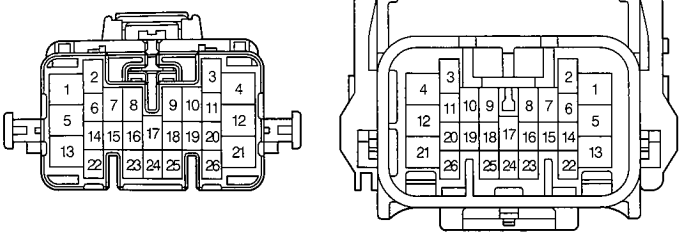


(Except Europe) IA2 GRAY

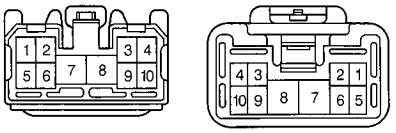


IB1 GREEN




IB2 GREEN

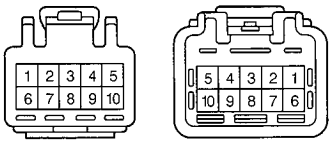


IC1 GRAY

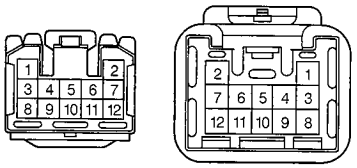


IC2 GRAY




ID1 YELLOW

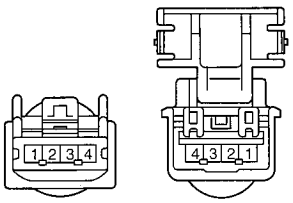


IE1



IF1 YELLOW

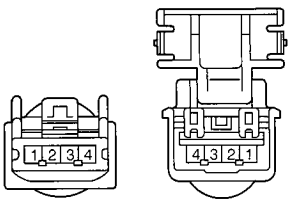

IG1

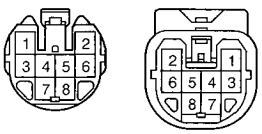

Code	Joining Wire Harness and Wire Harness (Connector Location)
IA1	Engine Room Main Wire and Cowl Wire (Cowl Side Panel LH)
IA2	
IB1	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IB2	
IC1	Cowl Wire and Cowl No. 3 Wire (Left Kick Panel)
IC2	
ID1	Cowl Wire and Cowl No. 4 Wire (Instrument Panel Reinforcement Left)
IE1	Cowl Wire and Roof Wire (Instrument Panel Reinforcement Left)
IF1	Cowl No. 4 Wire and Cowl Wire (Instrument Panel Brace RH)
IG1	Cowl Wire and A/C Sub Wire (Near the A/C Unit)