

Connector Joining Wire Harness and Wire Harness


IH1 GRAY




II1




(Gasoline) IJ1




(Diesel) IJ2

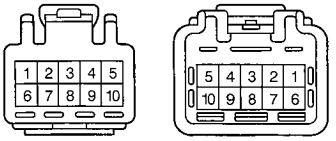


(3RZ-F, 1RZ) IJ3

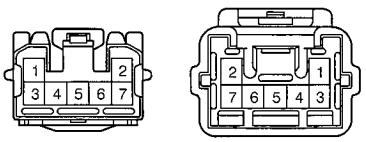


(2RZ-FE, Europe Diesel) IJ4

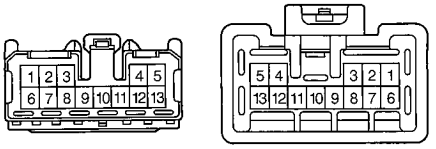


(3RZ-F, 1RZ, Except Europe Diesel) IJ5

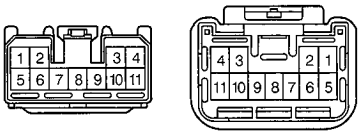


IK1 BLUE



IL1 GREEN



IL2 GREEN

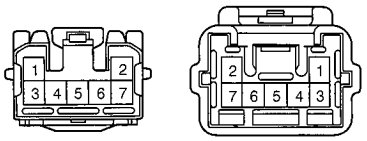

IM1 GRAY



Code	Joining Wire Harness and Wire Harness (Connector Location)
IH1	Cowl Wire and Cowl No. 4 Wire (Instrument Panel Brace RH)
II1	Cowl Wire and Cowl No. 3 Wire (Behind the Ashtray)
IJ1	Engine Wire and Cowl Wire (Behind the Glove Box)
IJ2	
IJ3	
IJ4	
IJ5	
IK1	Engine Room No. 2 Wire and Cowl No. 3 Wire (Behind the Glove Box)
IL1	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IL2	
IM1	Cowl Wire and Cowl No. 3 Wire (Cowl Side Panel RH)