
Connector Joining Wire Harness and Wire Harness

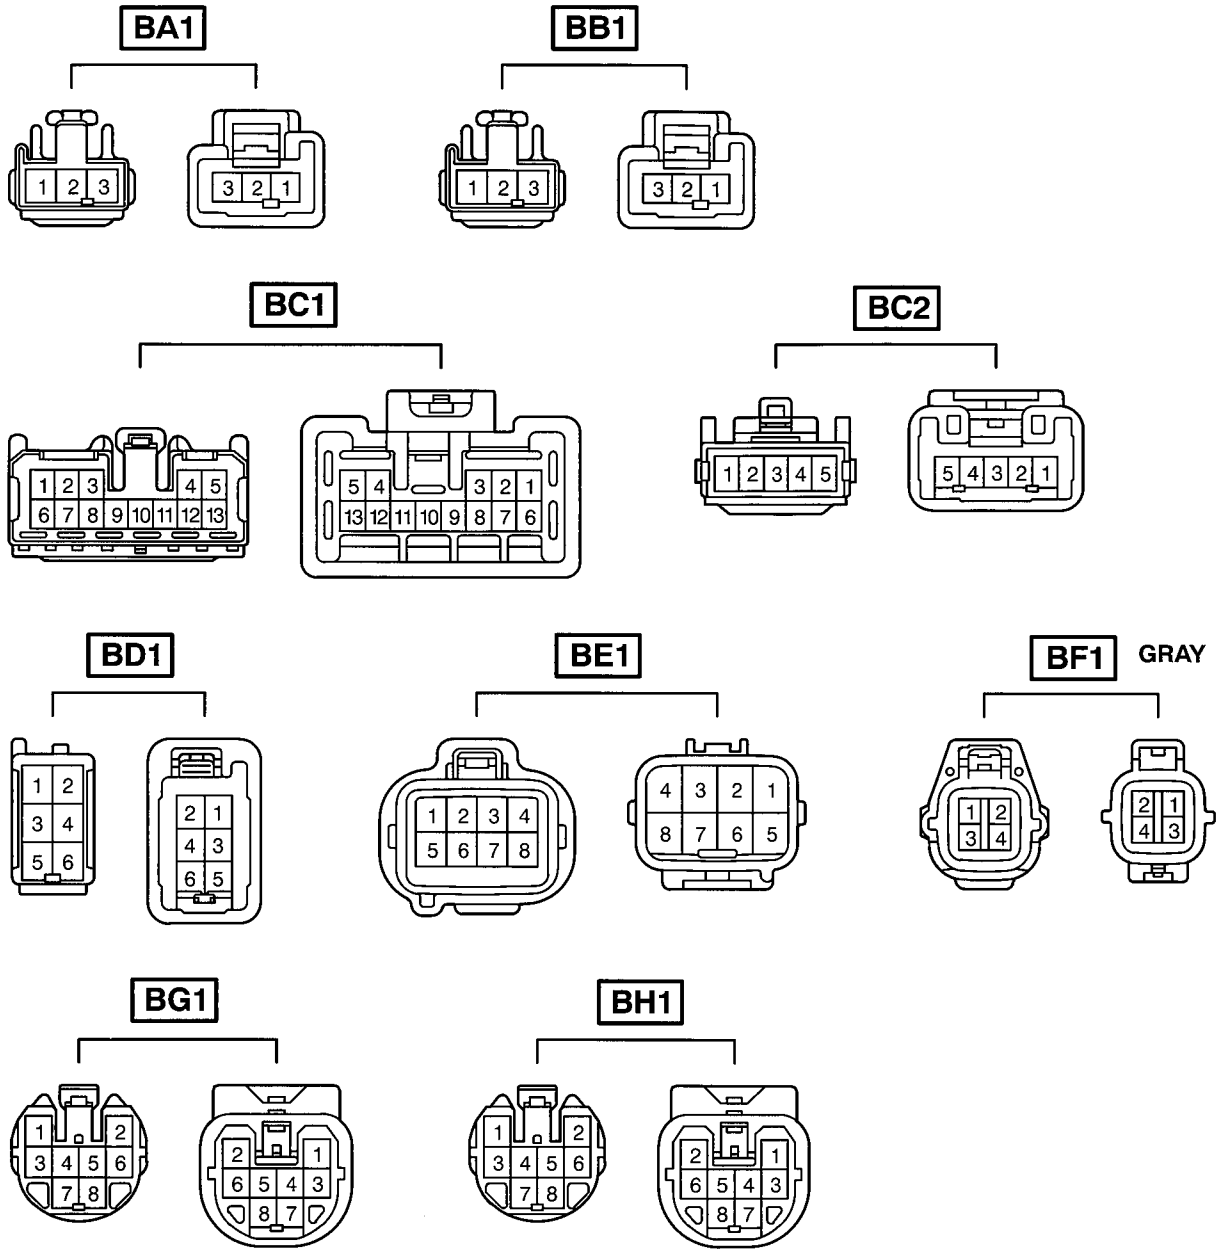

Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Front Door LH Wire and Front Door LH Wire (Front LH Door Inside)
BB1	Front Door RH Wire and Front Door RH Wire (Front RH Door Inside)
BC1	Frame Wire and Cowl Wire (Under the Front Passenger's Seat)
BC2	
BD1	Frame Wire and Cowl No. 3 Wire (Under the Front Passenger's Seat)
BE1	Frame Wire and Differential Wire (Near the No. 5 Cross Member)
BF1	Frame Wire and Speed Sensor Wire (Near the No. 5 Cross Member)
BG1	Rear Door No. 2 Wire and Cowl Wire (Left Center Pillar)
BH1	Rear Door No. 1 Wire and Cowl Wire (Right Center Pillar)