
Connector Joining Wire Harness and Wire Harness

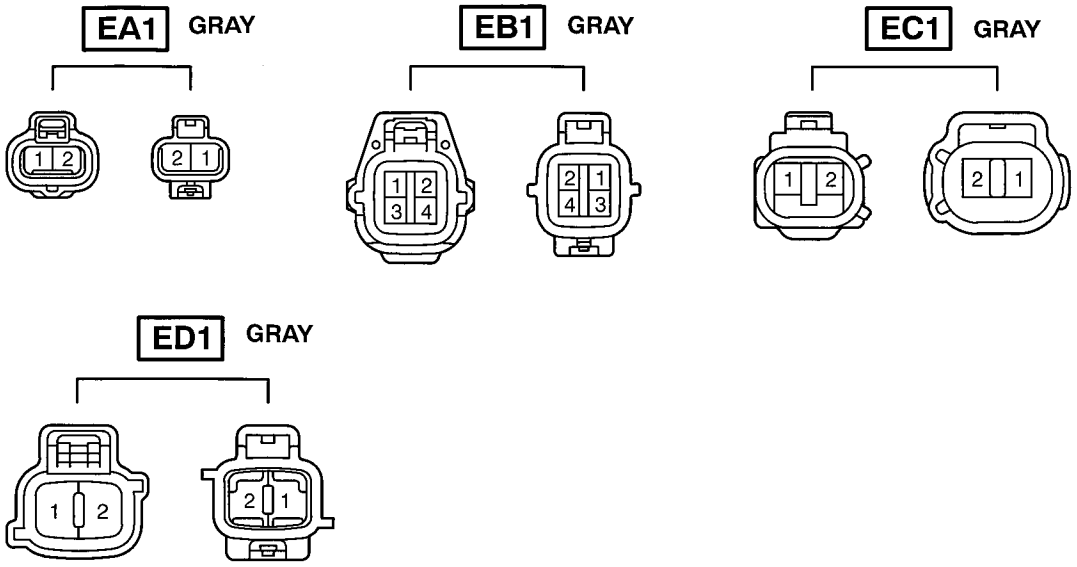

Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Room No. 2 Wire and Engine Room Main Wire (Front Right Fender Apron)
EB1	Engine No. 2 Wire and Engine Room Main Wire (Near the Engine Room R/B)
EC1	Engine No. 2 Wire and Cowl Wire (Near the Engine Room R/B)
ED1	Engine No. 2 Wire and Differential Wire (Near the Starter)