

Connector Joining Wire Harness and Wire Harness


IE1 YELLOW

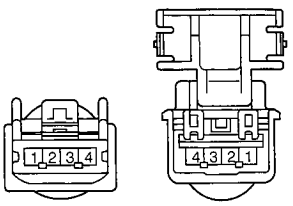


IF1 GRAY

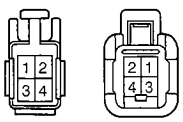


IG1




IH1




II1 YELLOW

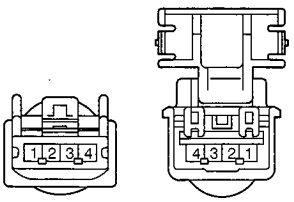


(3RZ-FE, 1RZ-E, 2L-T, Europe 2L) **IJ1** GRAY

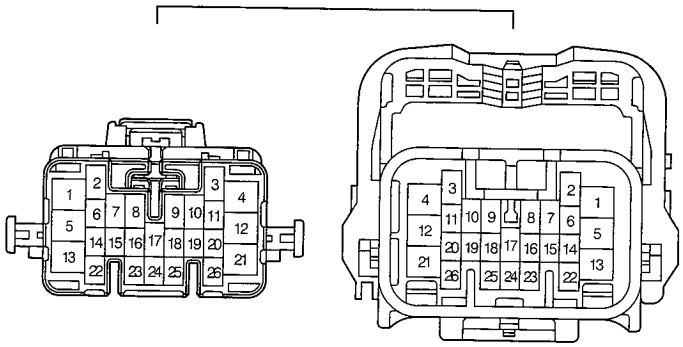


(3RZ-F, 1RZ, 5L, 3L, General 2L) **IJ2** GRAY

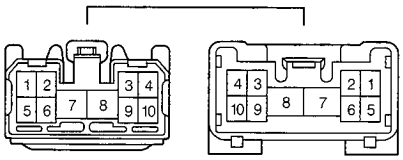


IK1 BLUE

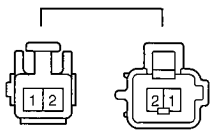


IL1 GRAY



IM1 GREEN

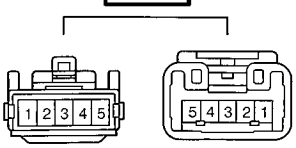

IM2 GREEN

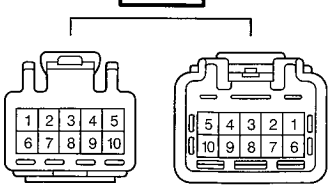

Code	Joining Wire Harness and Wire Harness (Connector Location)
IE1	Cowl No. 4. Wire and Cowl Wire (Instrument Panel Brace LH)
IF1	Cowl Wire and Cowl No. 4 Wire (Instrument Panel Brace LH)
IG1	Cowl Wire and Cowl No. 3 Wire (Behind the Ashtray)
IH1	Cowl Wire and Roof Wire (Instrument Reinforcement Right)
II1	Cowl Wire and Cowl No. 3 Wire (Instrument Reinforcement Right)
IJ1	Engine Room Main Wire and Cowl Wire (Cowl Side Panel RH)
IJ2	
IK1	Engine Room No. 2 Wire and Cowl No. 3 Wire (Cowl Side Panel RH)
IL1	Cowl Wire and Cowl No. 3 Wire (Right Kick Panel)
IM1	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IM2	