
Connector Joining Wire Harness and Wire Harness

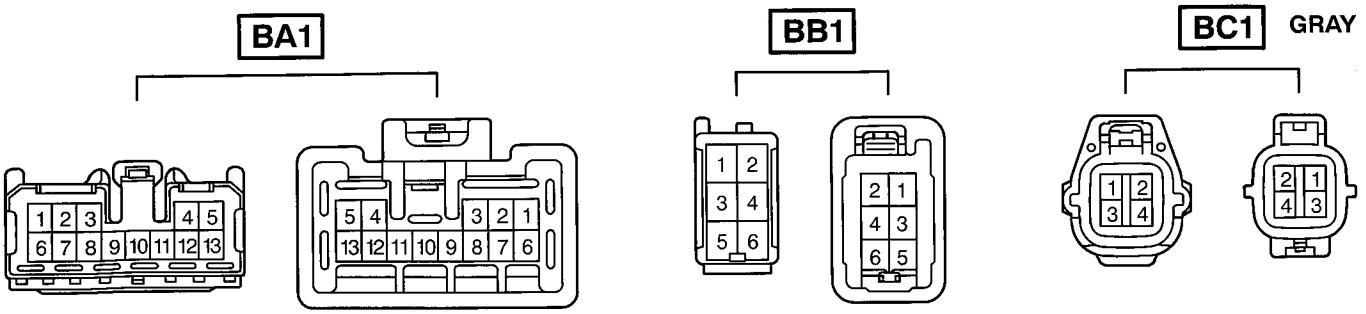

Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Frame Wire and Cowl Wire (Under the Driver's Seat)
BB1	Frame Wire and Cowl No. 3 Wire (Under the Driver's Seat)
BC1	Frame Wire and Speed Sensor Wire (Near the No. 5 Cross Member)