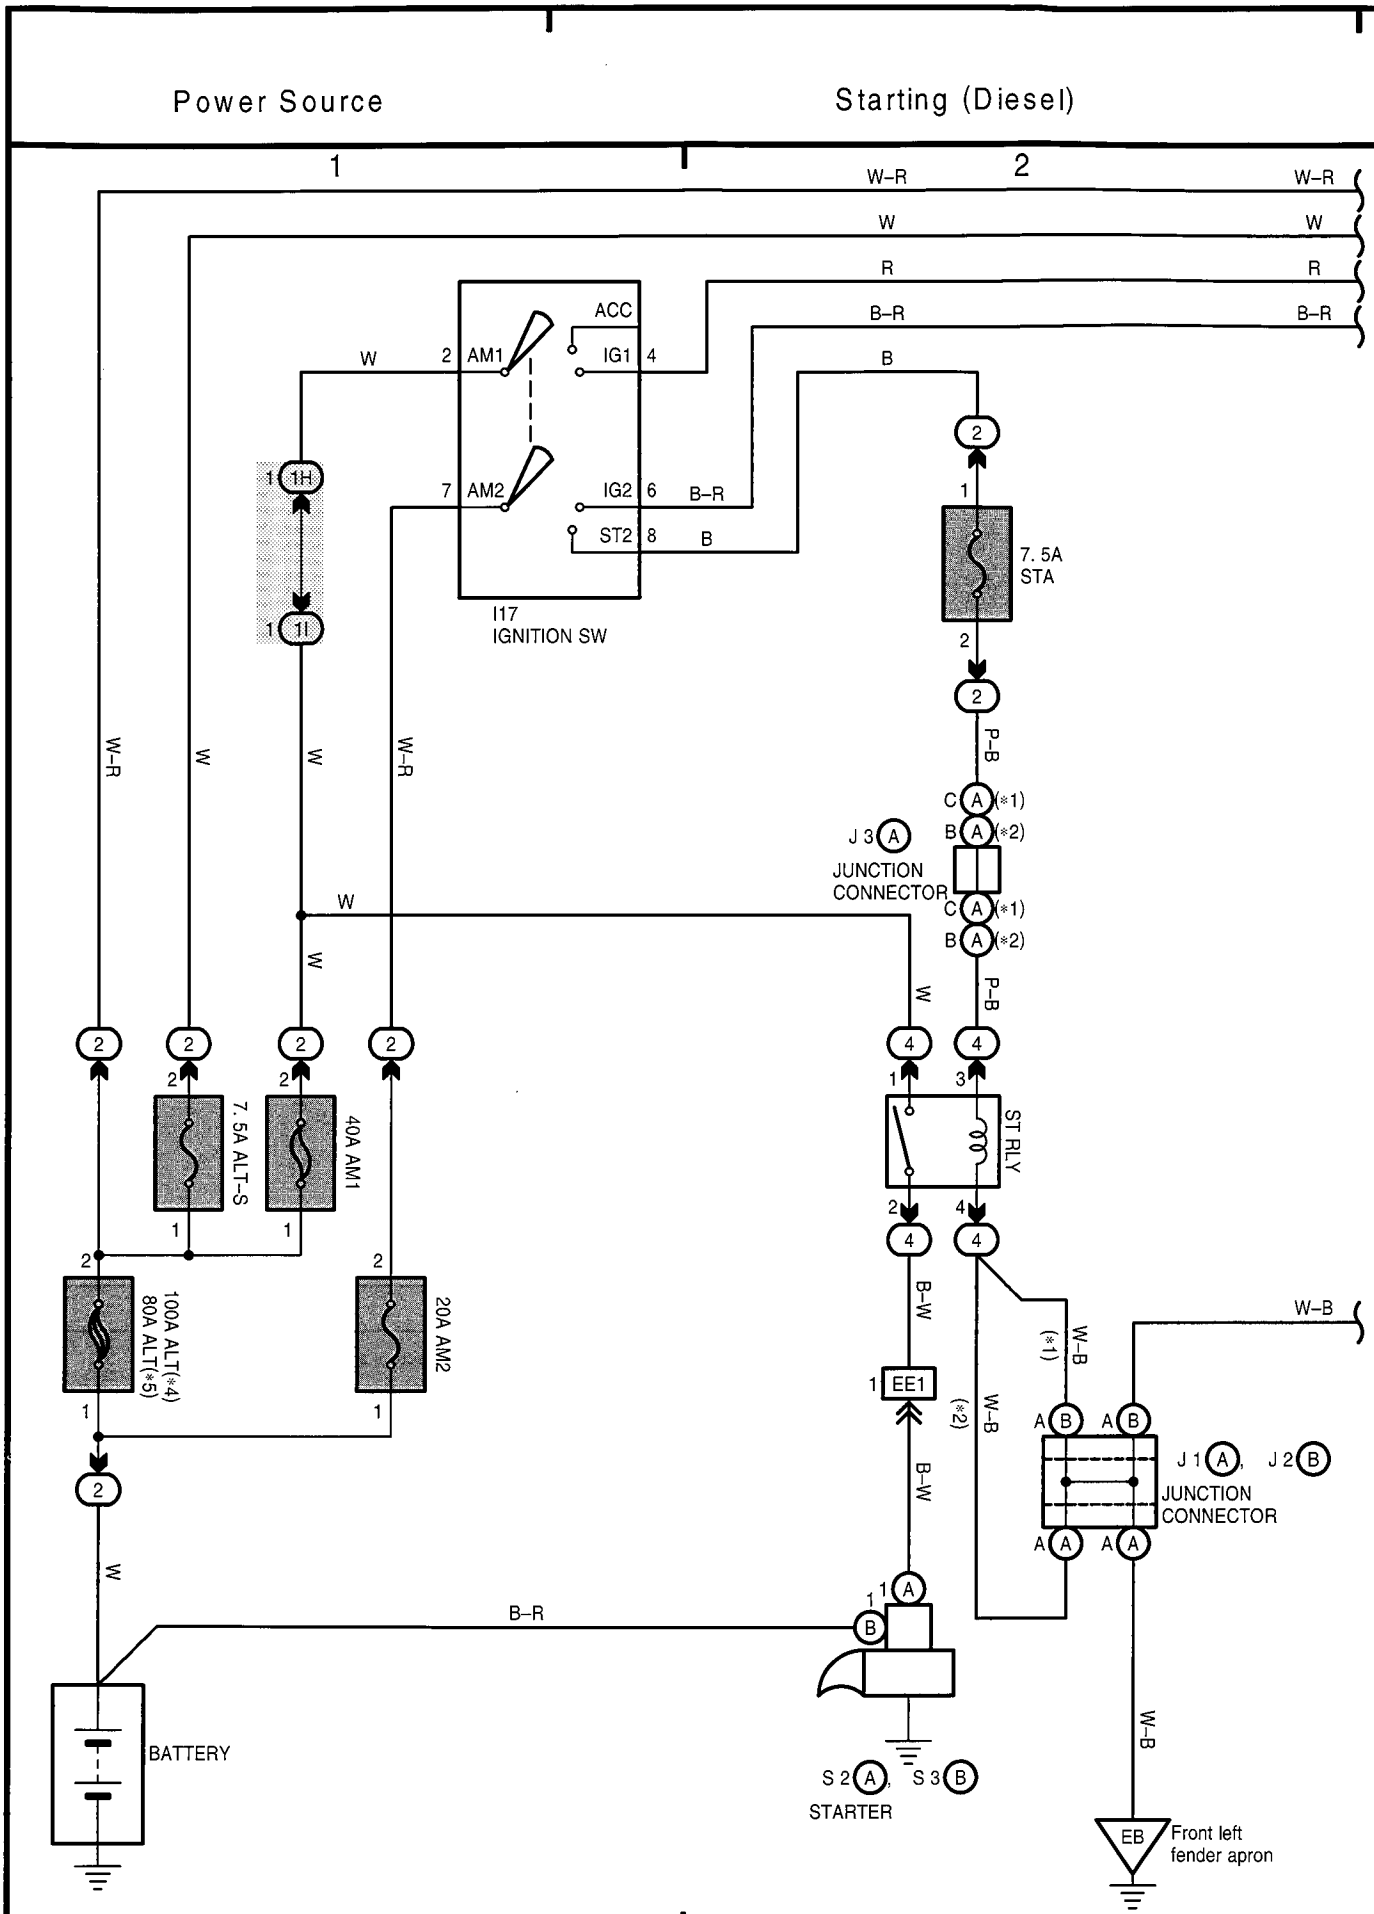
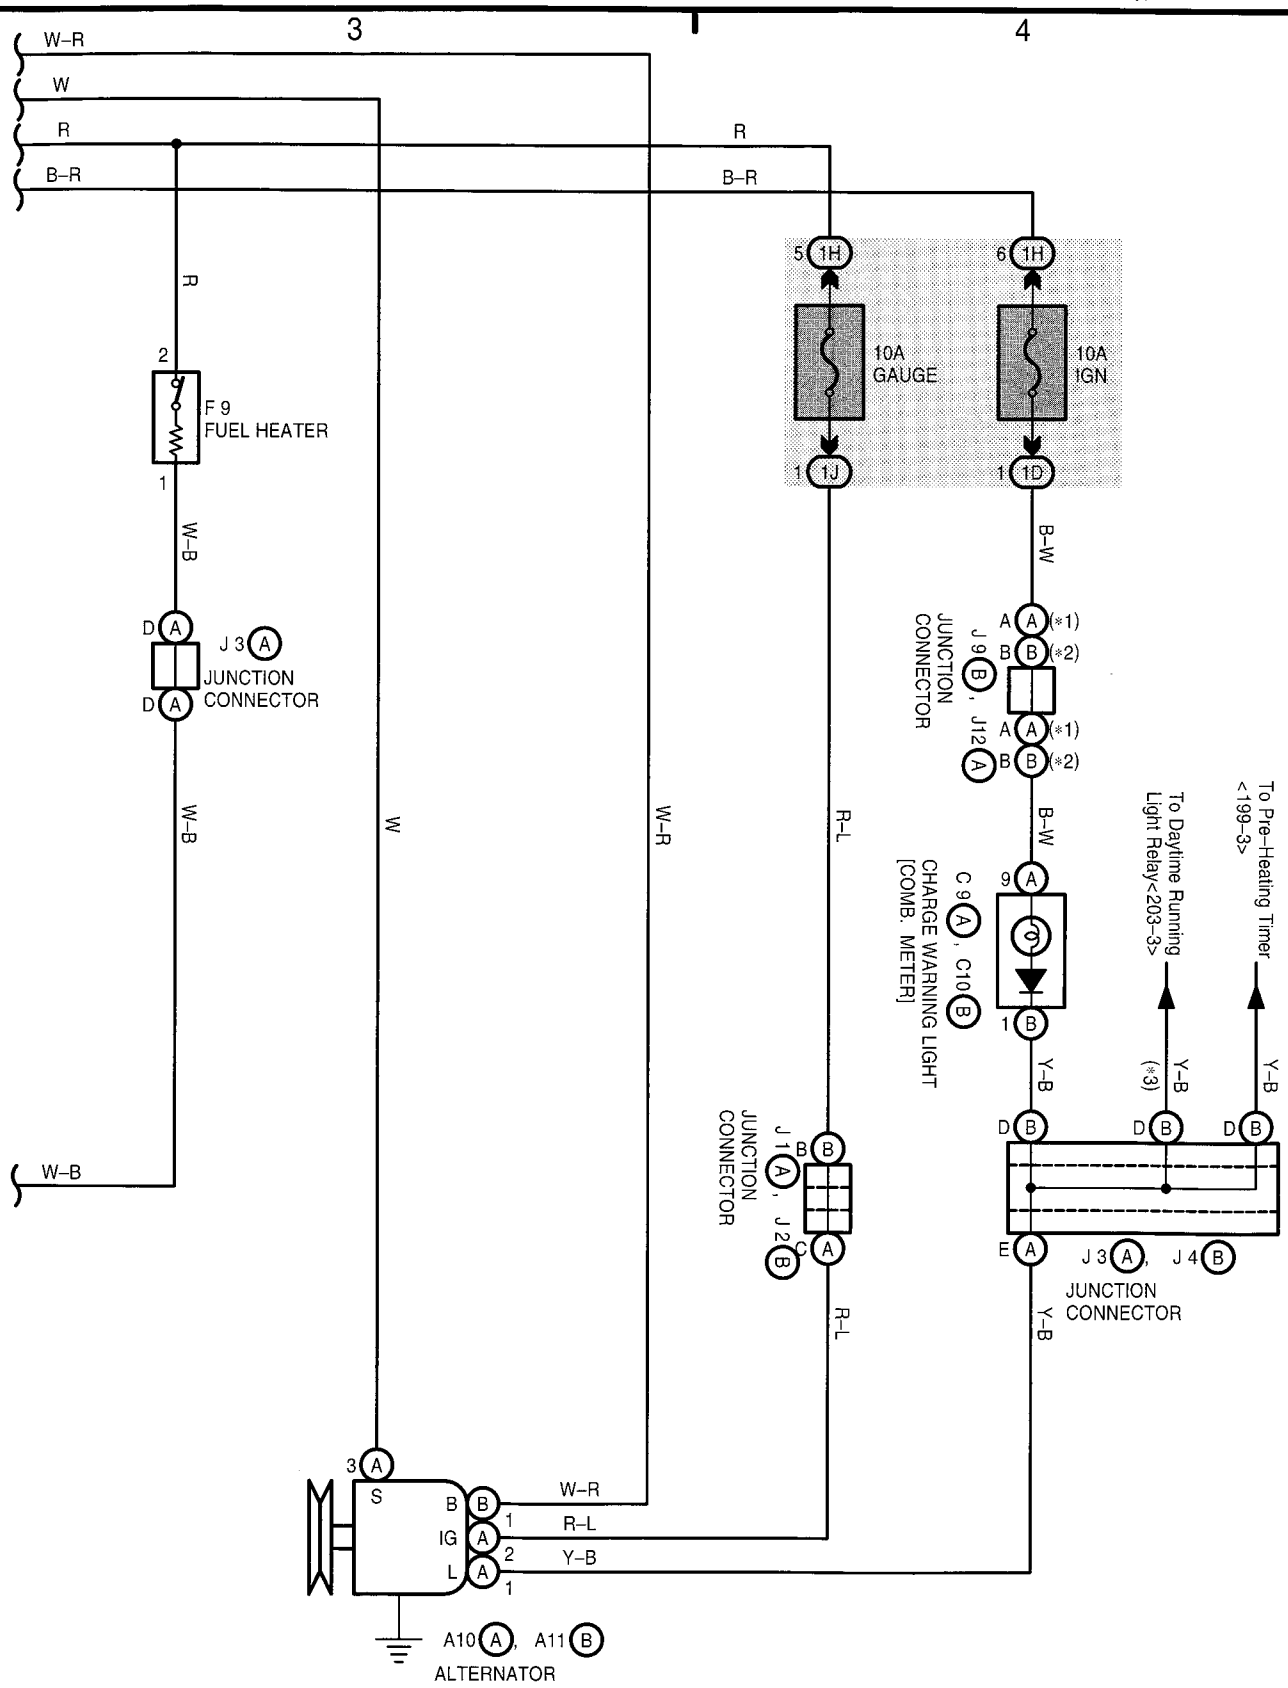

Power Source
Starting (Diesel)
1
2
W-R
W
R
B-R
B
ACC
IG1
IG2
ST2
AM1
AM2
I17
IGNITION SW
1H
1I
7. 5A
STA
P-B
J 3
JUNCTION
CONNECTOR
(*1)
(*2)
ST RLY
7. 5A ALT-S
40A AM1
100A ALT(*4)
80A ALT(*5)
20A AM2
B-W
EE1
W-B
J 1, J 2
JUNCTION
CONNECTOR
BATTERY
S 2, S 3
STARTER
EB
Front left
fender apron
LHD

* 1 : Europe
* 2 : Except Europe
* 3 : w/ Daytime Running Light
* 4 : 70A Type Alternator
* 5 : 45A, 55A Type Alternator



LHD