
Power Source


Ignition (1RZ)

1

2

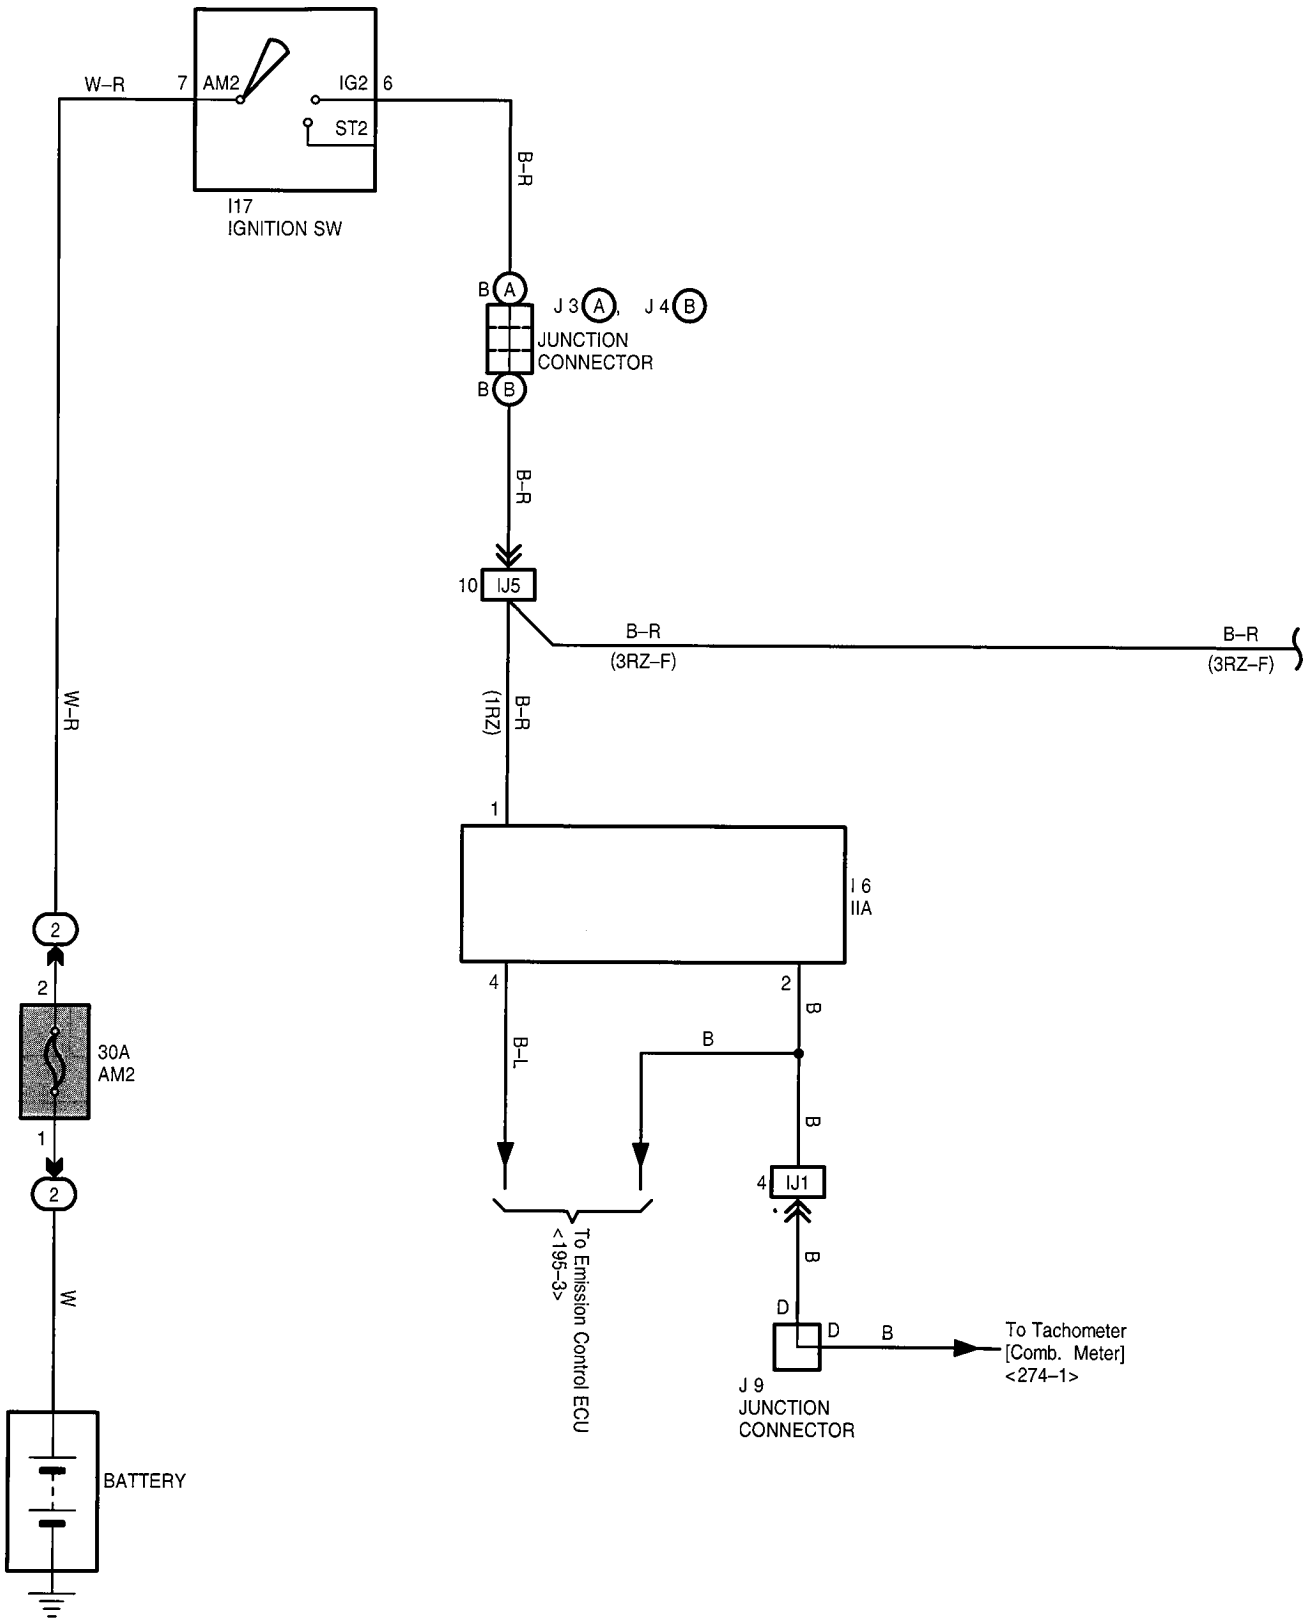

LHD

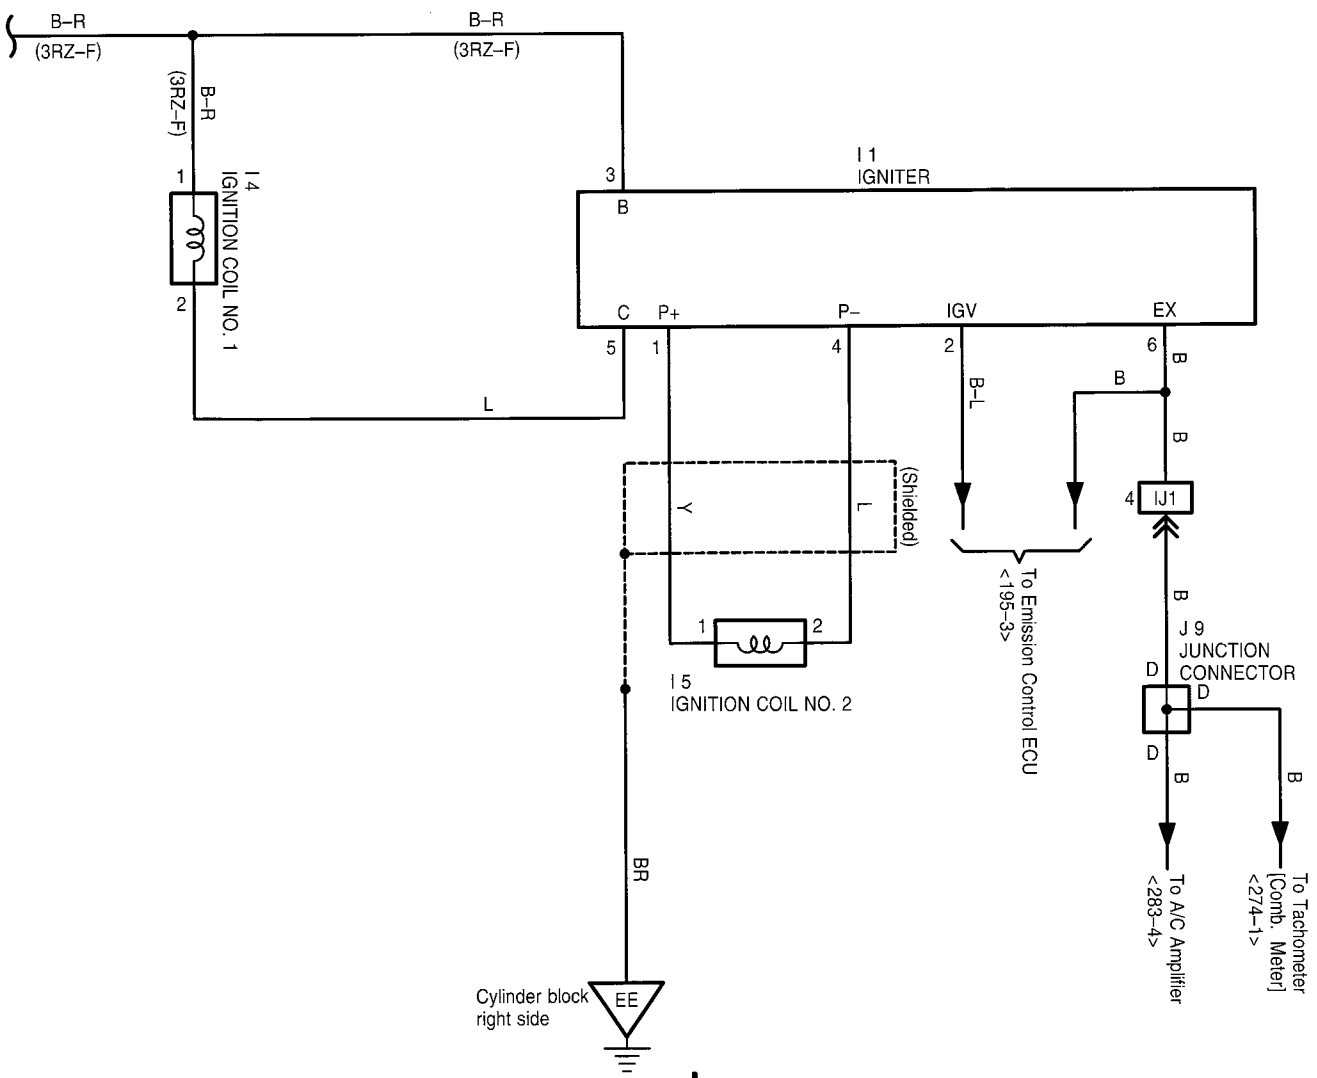
3
4
B-R
(3RZ-F)
B-R
(3RZ-F)
B-R
(3RZ-F)
I 4
IGNITION COIL NO. 1
1
2
I 1
IGNITER
3
B
C
P+
P-
IGV
EX
5
1
4
2
6
L
B-L
B
B
B
4
IJ1
(Shielded)
Y
L
1
2
I 5
IGNITION COIL NO. 2
To Emission Control ECU
<195-3>
B
J 9
JUNCTION
CONNECTOR
D
D
D
D
B
B
BR
Cylinder block
right side
EE
To A/C Amplifier
<283-4>
To Tachometer
[Comb. Meter]
<274-1>