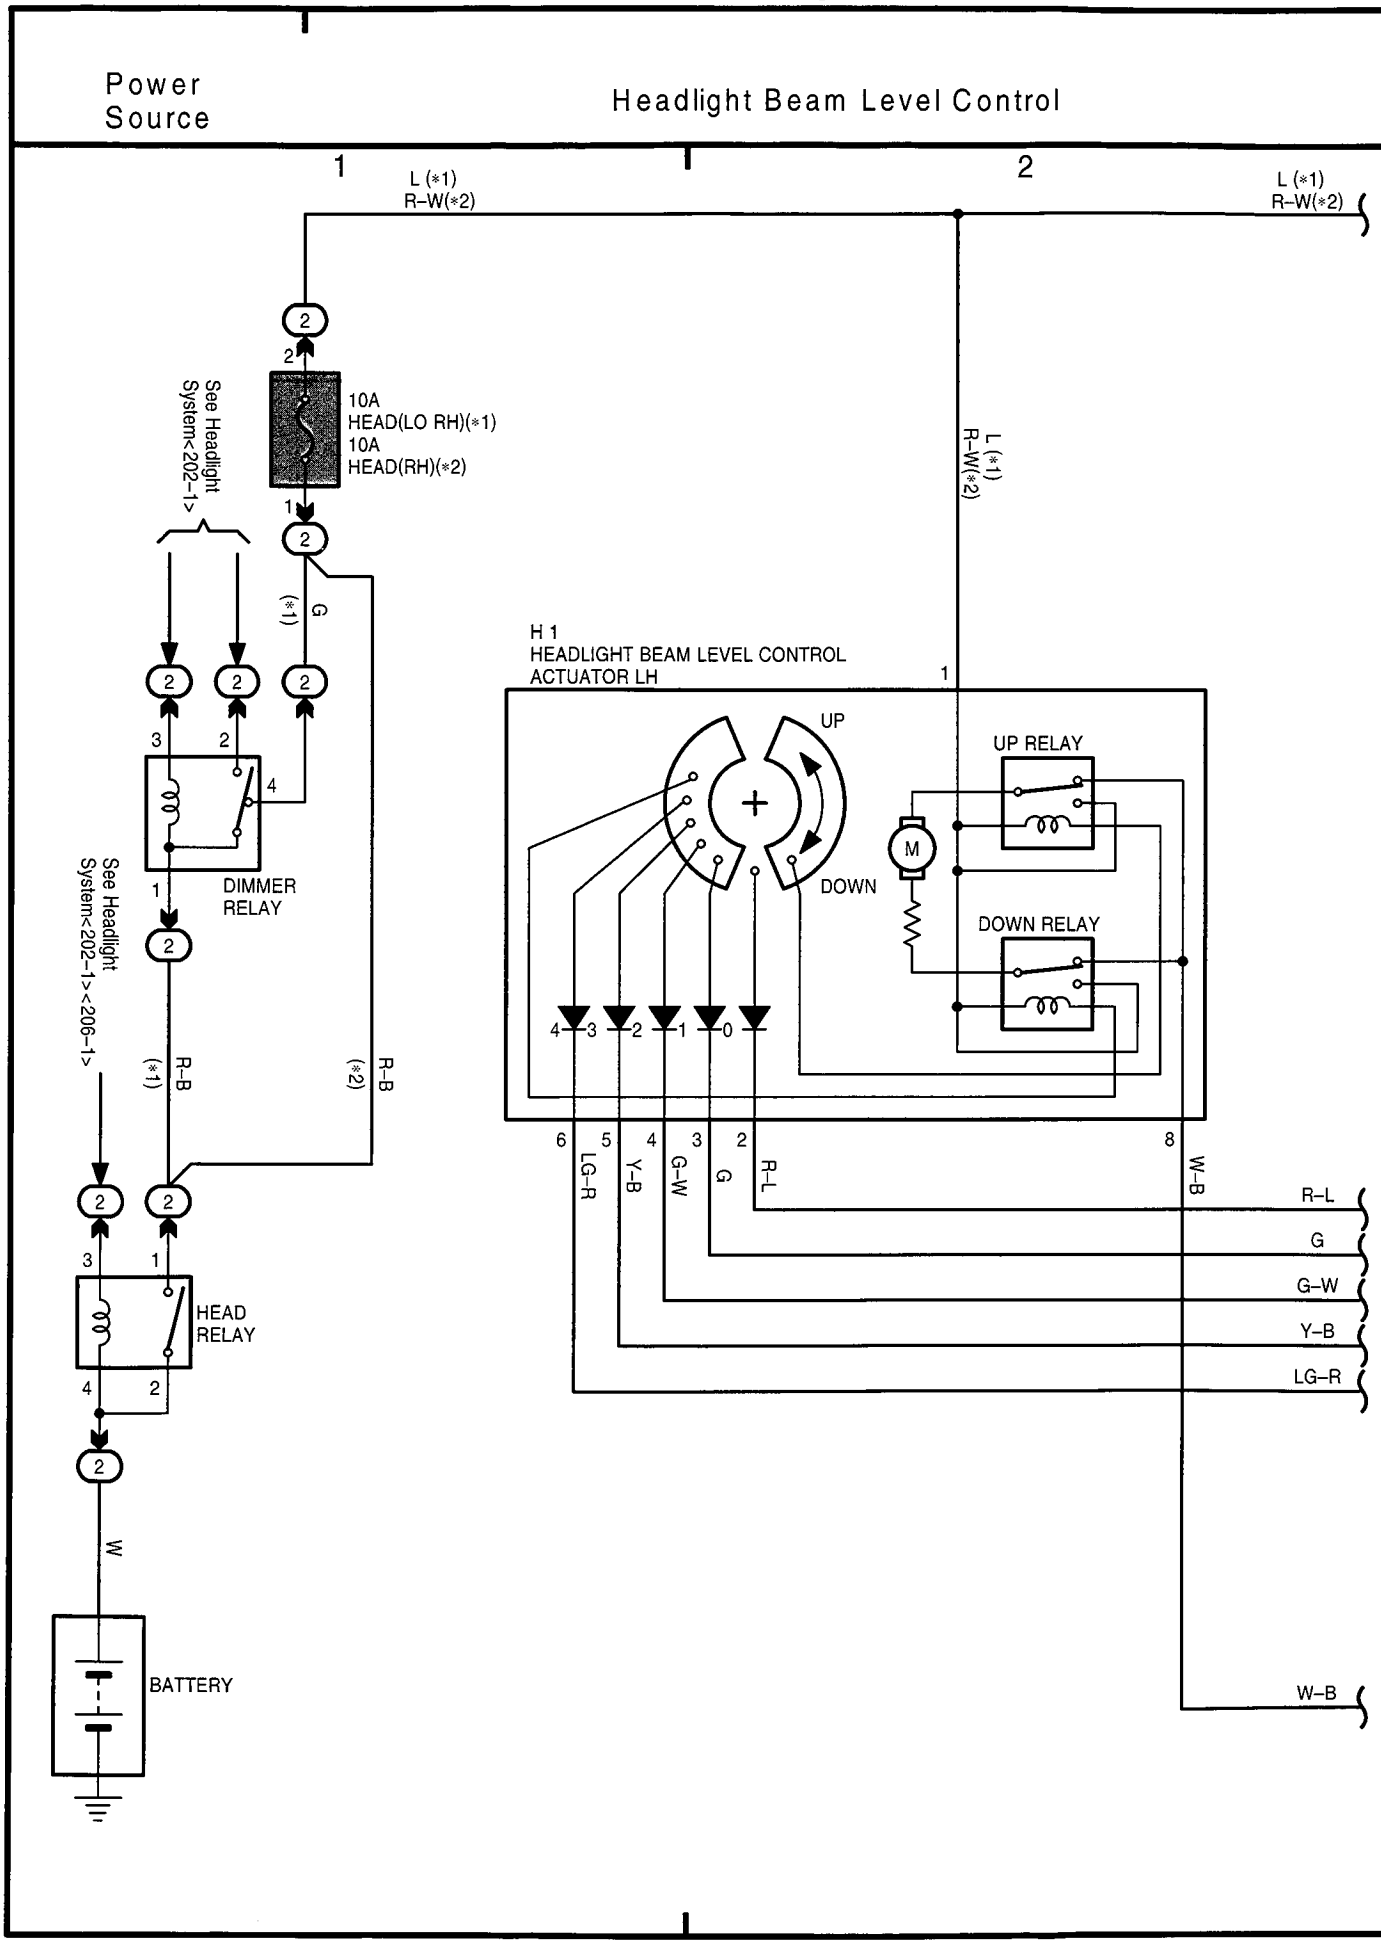
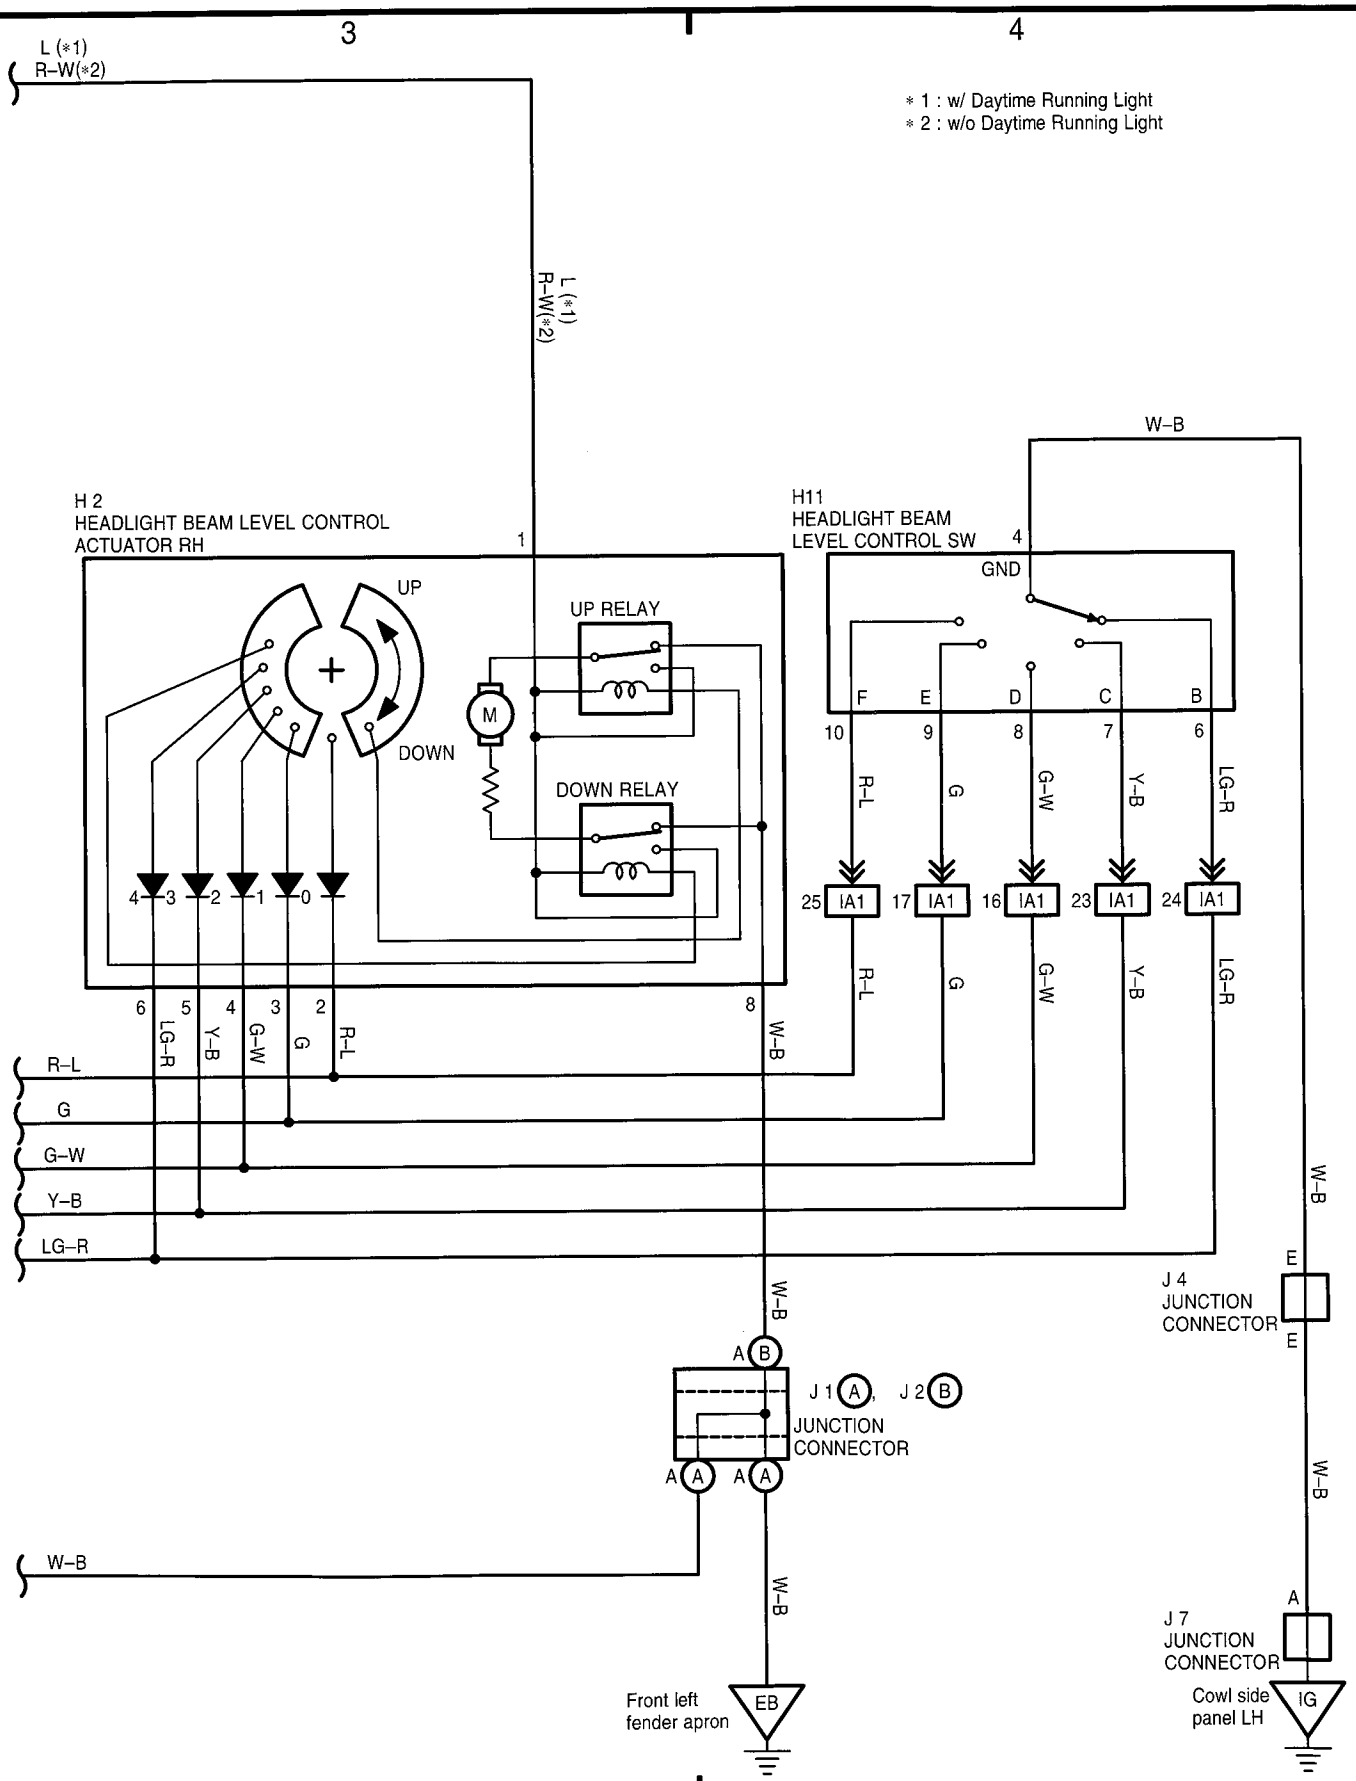

Power Source
Headlight Beam Level Control
1
2
L (*1)
R-W(*2)
L (*1)
R-W(*2)
10A
HEAD(LO RH)(*1)
10A
HEAD(RH)(*2)
See Headlight System<202-1>
L (*1)
R-W(*2)
H 1
HEADLIGHT BEAM LEVEL CONTROL ACTUATOR LH
UP
DOWN
UP RELAY
DOWN RELAY
M
DIMMER RELAY
See Headlight System<202-1><206-1>
HEAD RELAY
BATTERY
G
(*1)
R-B
(*1)
R-B
(*2)
W
R-L
G
G-W
Y-B
LG-R
W-B
LHD


3
4
L (*1)
R–W(*2)
* 1 : w/ Daytime Running Light
* 2 : w/o Daytime Running Light
L (*1)
R–W(*2)
H 2
HEADLIGHT BEAM LEVEL CONTROL
ACTUATOR RH
1
UP
DOWN
M
UP RELAY
DOWN RELAY
4 3 2 1 0
6 5 4 3 2 8
LG–R
Y–B
G–W
G
R–L
W–B
H11
HEADLIGHT BEAM
LEVEL CONTROL SW
4
GND
F E D C B
10 9 8 7 6
R–L
G
G–W
Y–B
LG–R
25 IA1
17 IA1
16 IA1
23 IA1
24 IA1
W–B
R–L
G
G–W
Y–B
LG–R
W–B
A B
J 1 A, J 2 B
JUNCTION
CONNECTOR
A A A A
W–B
W–B
Front left
fender apron
EB
J 4
JUNCTION
CONNECTOR
E
E
W–B
A
J 7
JUNCTION
CONNECTOR
Cowl side
panel LH
IG