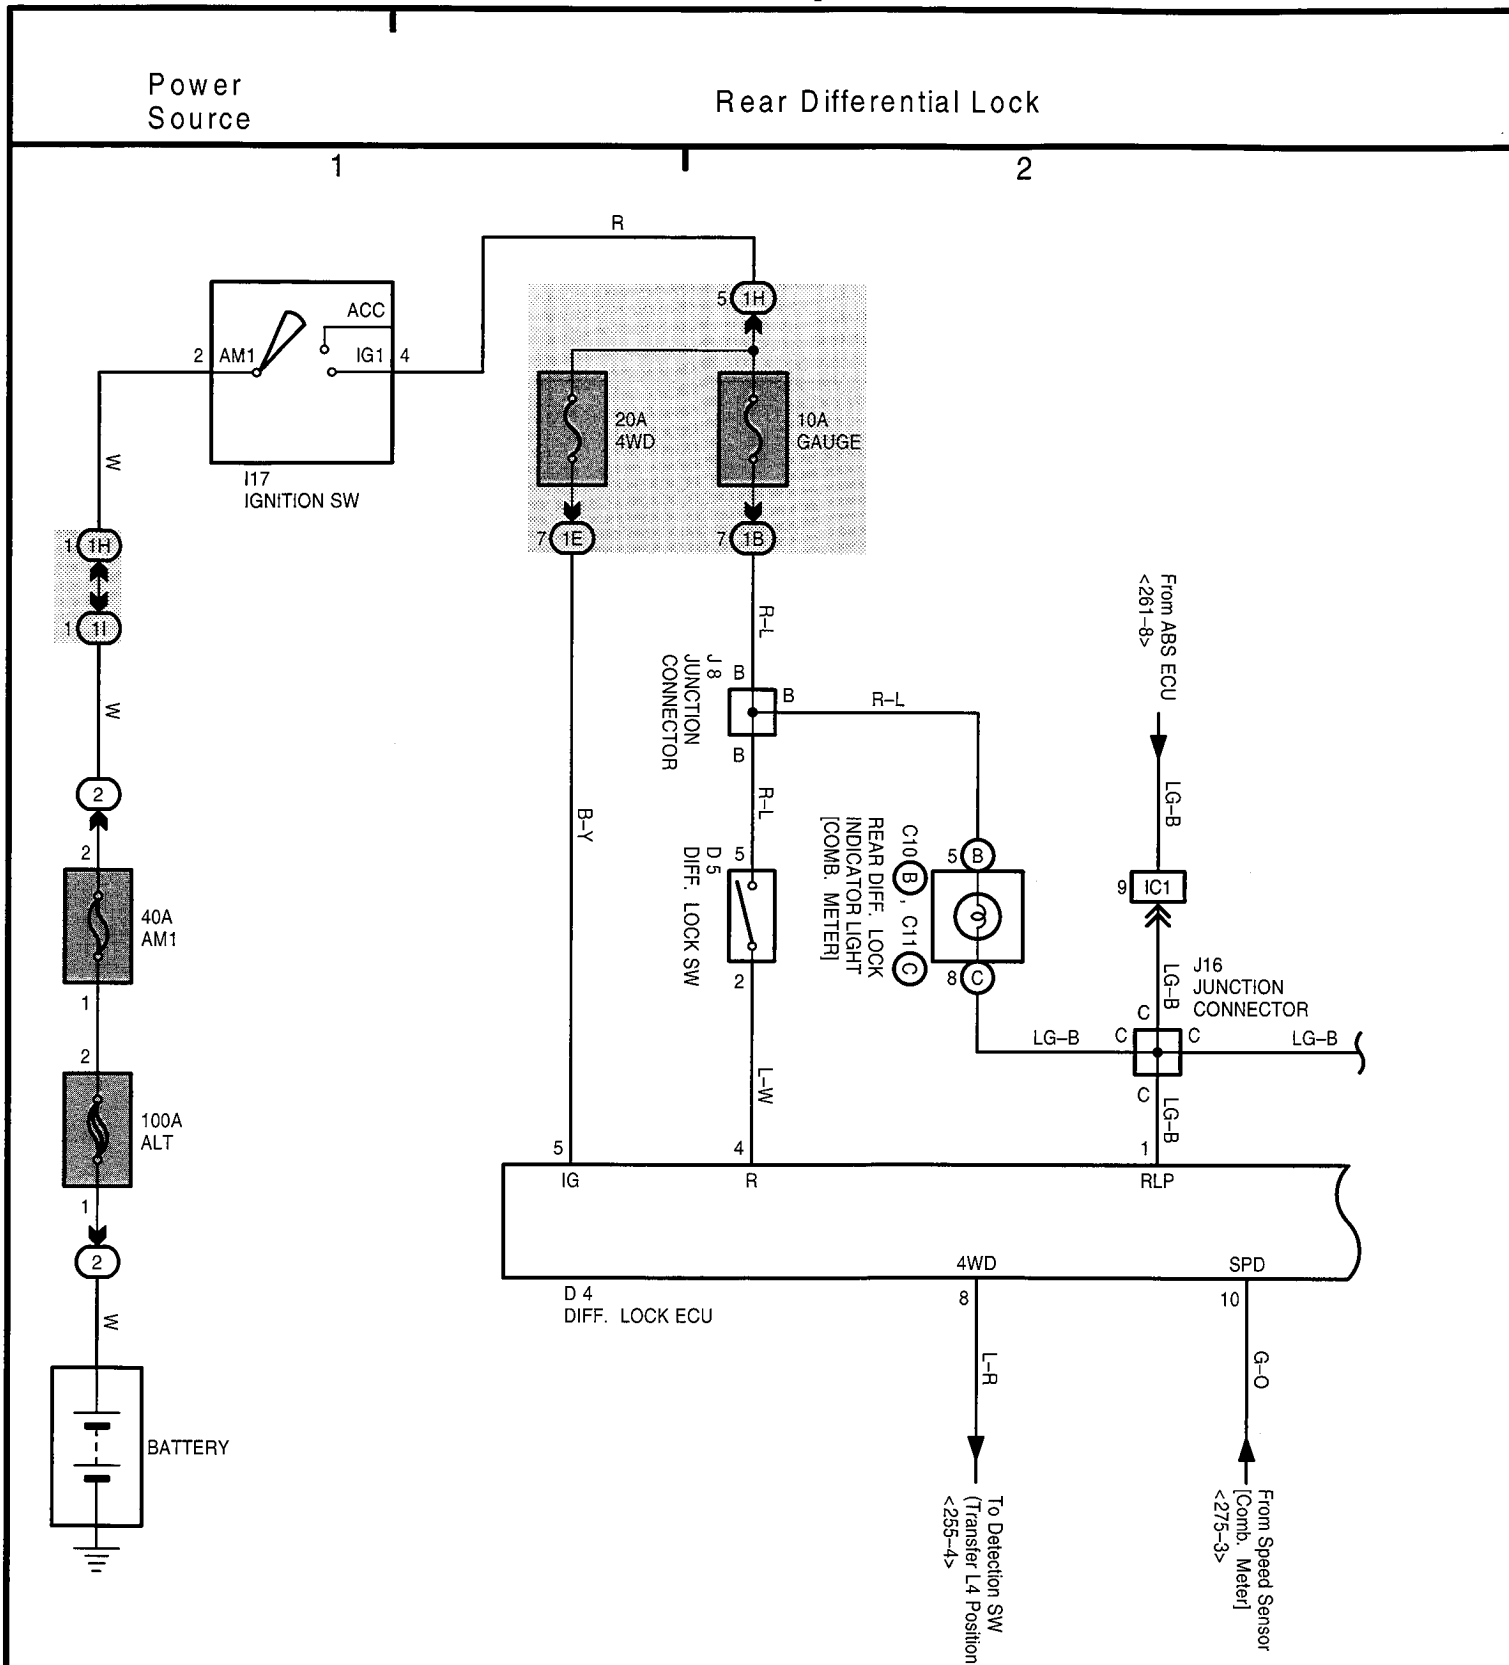
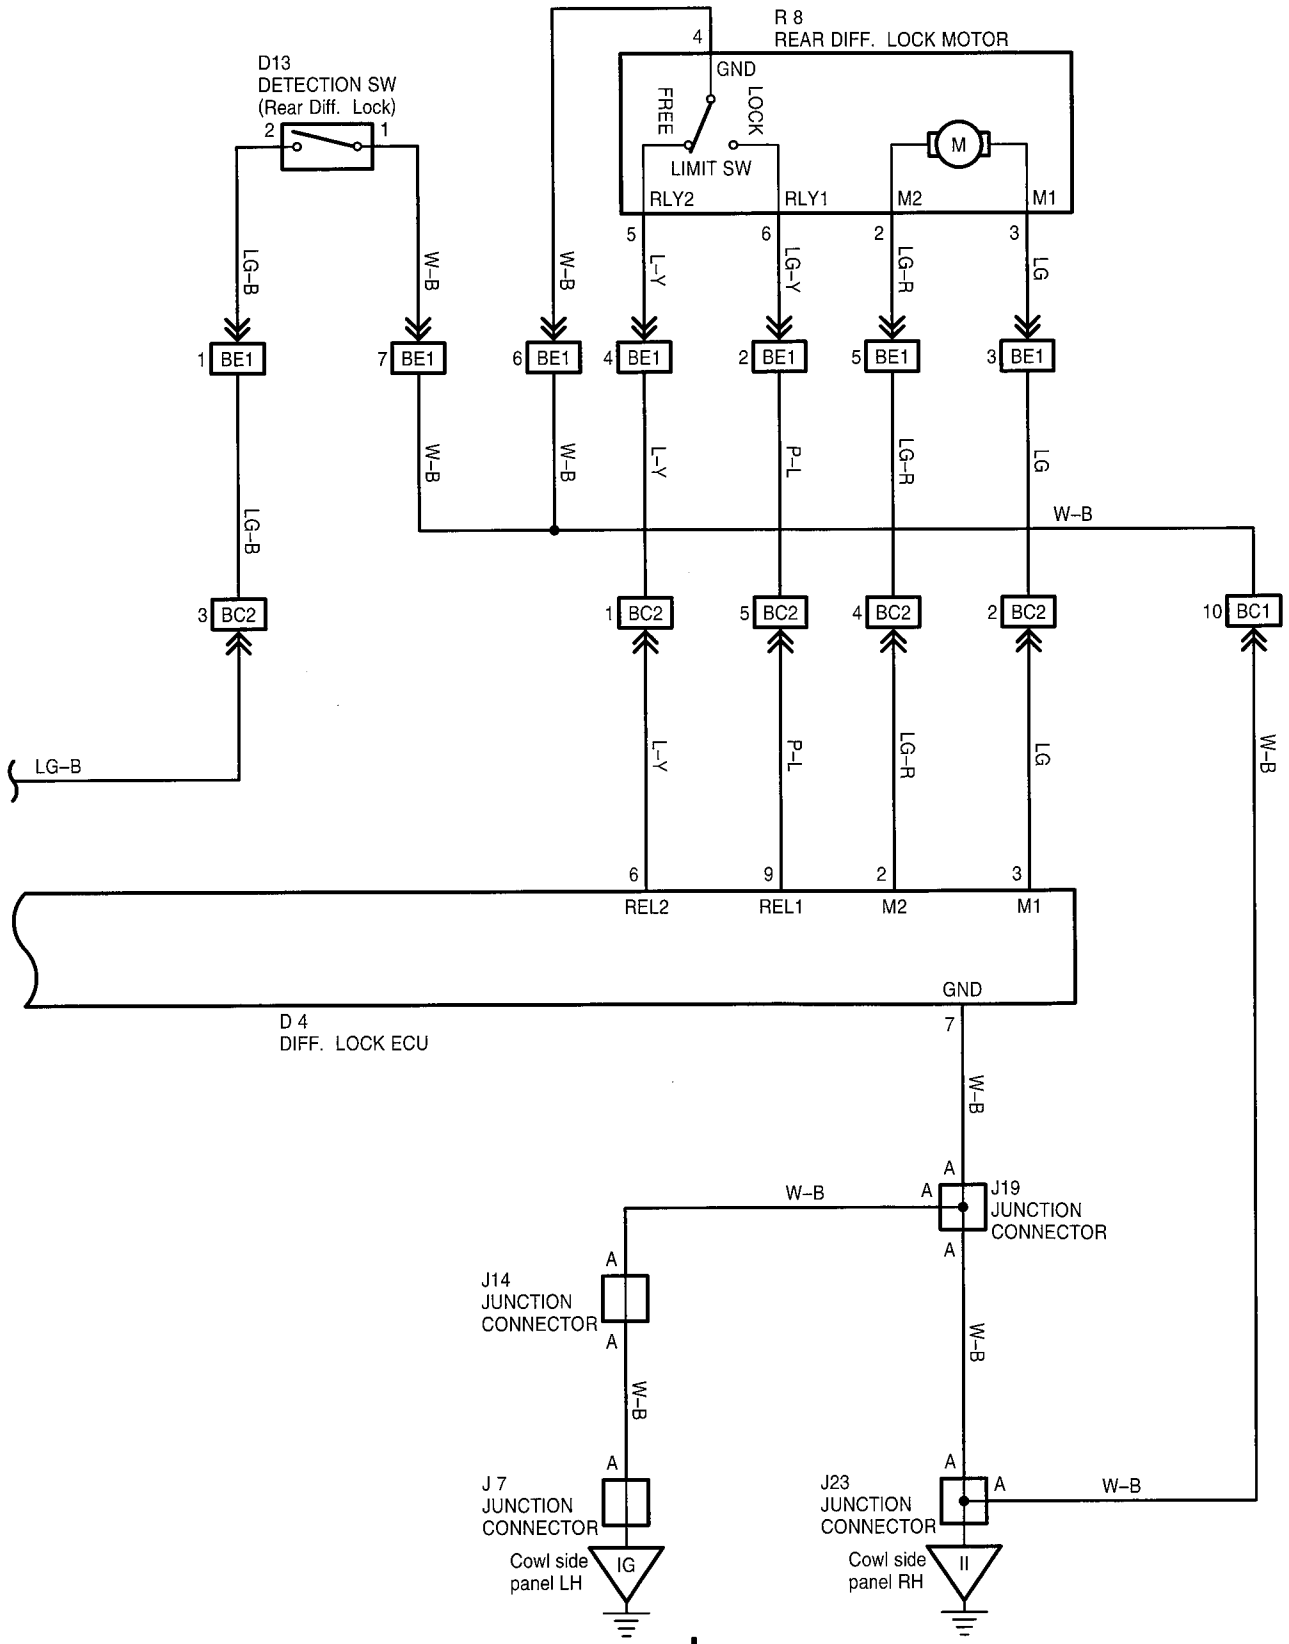

Power Source
Rear Differential Lock
1
2
R
ACC
AM1
IG1
2
4
I17
IGNITION SW
W
5 1H
20A 4WD
10A GAUGE
7 1E
7 1B
1 1H
1 1I
W
2
2
40A AM1
1
2
100A ALT
1
2
W
BATTERY
R-L
J8 JUNCTION CONNECTOR
B
B
B
R-L
B-Y
D5 DIFF. LOCK SW
5
2
L-W
C10 B, C11 C
REAR DIFF. LOCK INDICATOR LIGHT [COMB. METER]
5 B
8 C
R-L
From ABS ECU <261-8>
LG-B
9 IC1
LG-B
J16 JUNCTION CONNECTOR
C
C
C
LG-B
LG-B
C
LG-B
5
4
1
IG
R
RLP
D4 DIFF. LOCK ECU
4WD
SPD
8
10
L-R
G-O
To Detection SW (Transfer L4 Position) <255-4>
From Speed Sensor [Comb. Meter] <275-3>

LHD


3
4
R 8
REAR DIFF. LOCK MOTOR
4
GND
FREE
LOCK
LIMIT SW
M
RLY2
RLY1
M2
M1
D13
DETECTION SW
(Rear Diff. Lock)
2
1
5
6
2
3
LG-B
W-B
W-B
L-Y
LG-Y
LG-R
LG
1 BE1
7 BE1
6 BE1
4 BE1
2 BE1
5 BE1
3 BE1
W-B
W-B
L-Y
P-L
LG-R
LG
W-B
LG-B
3 BC2
1 BC2
5 BC2
4 BC2
2 BC2
10 BC1
LG-B
L-Y
P-L
LG-R
LG
W-B
6
9
2
3
REL2
REL1
M2
M1
GND
7
D 4
DIFF. LOCK ECU
W-B
A
W-B
A
J19
JUNCTION
CONNECTOR
A
J14
JUNCTION
CONNECTOR
A
W-B
W-B
A
A
J 7
JUNCTION
CONNECTOR
J23
JUNCTION
CONNECTOR
A
W-B
Cowl side
panel LH
IG
Cowl side
panel RH
II