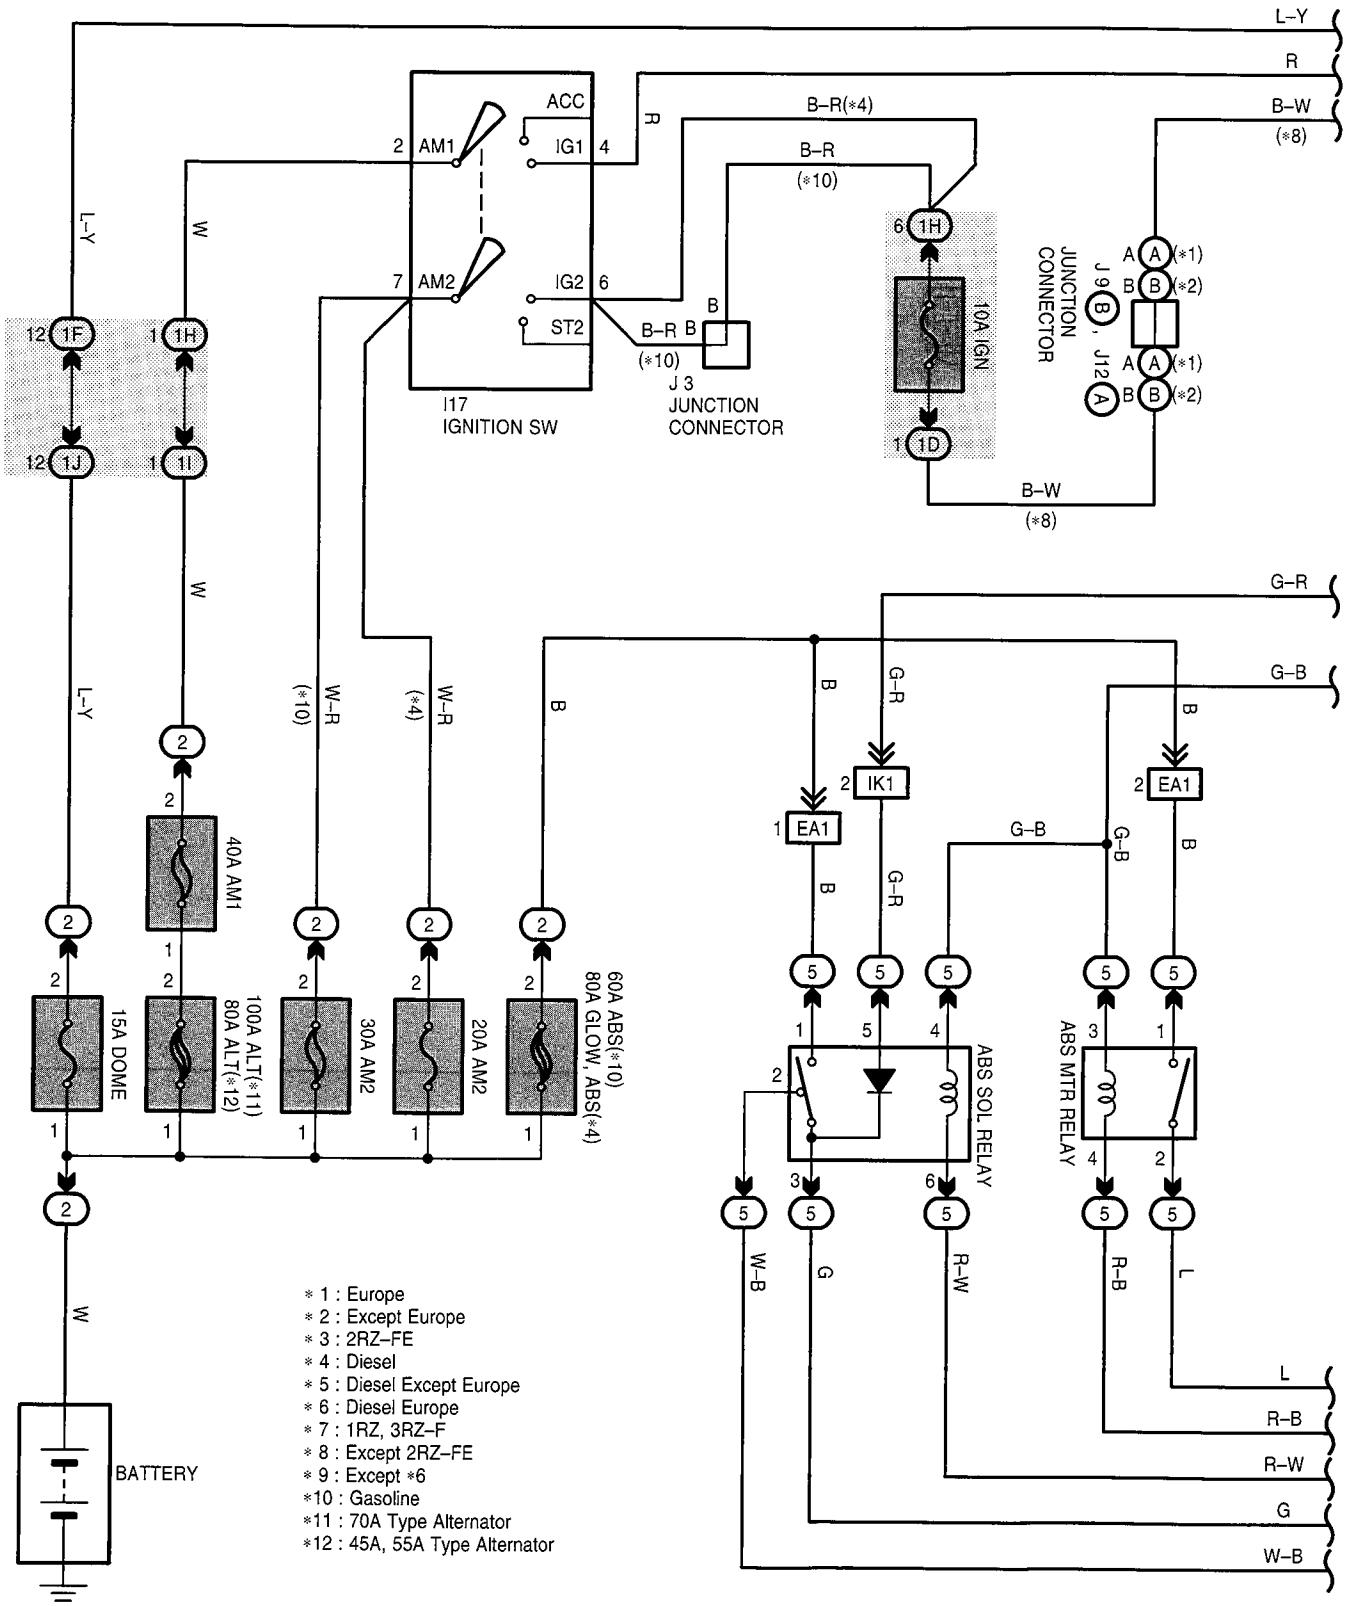
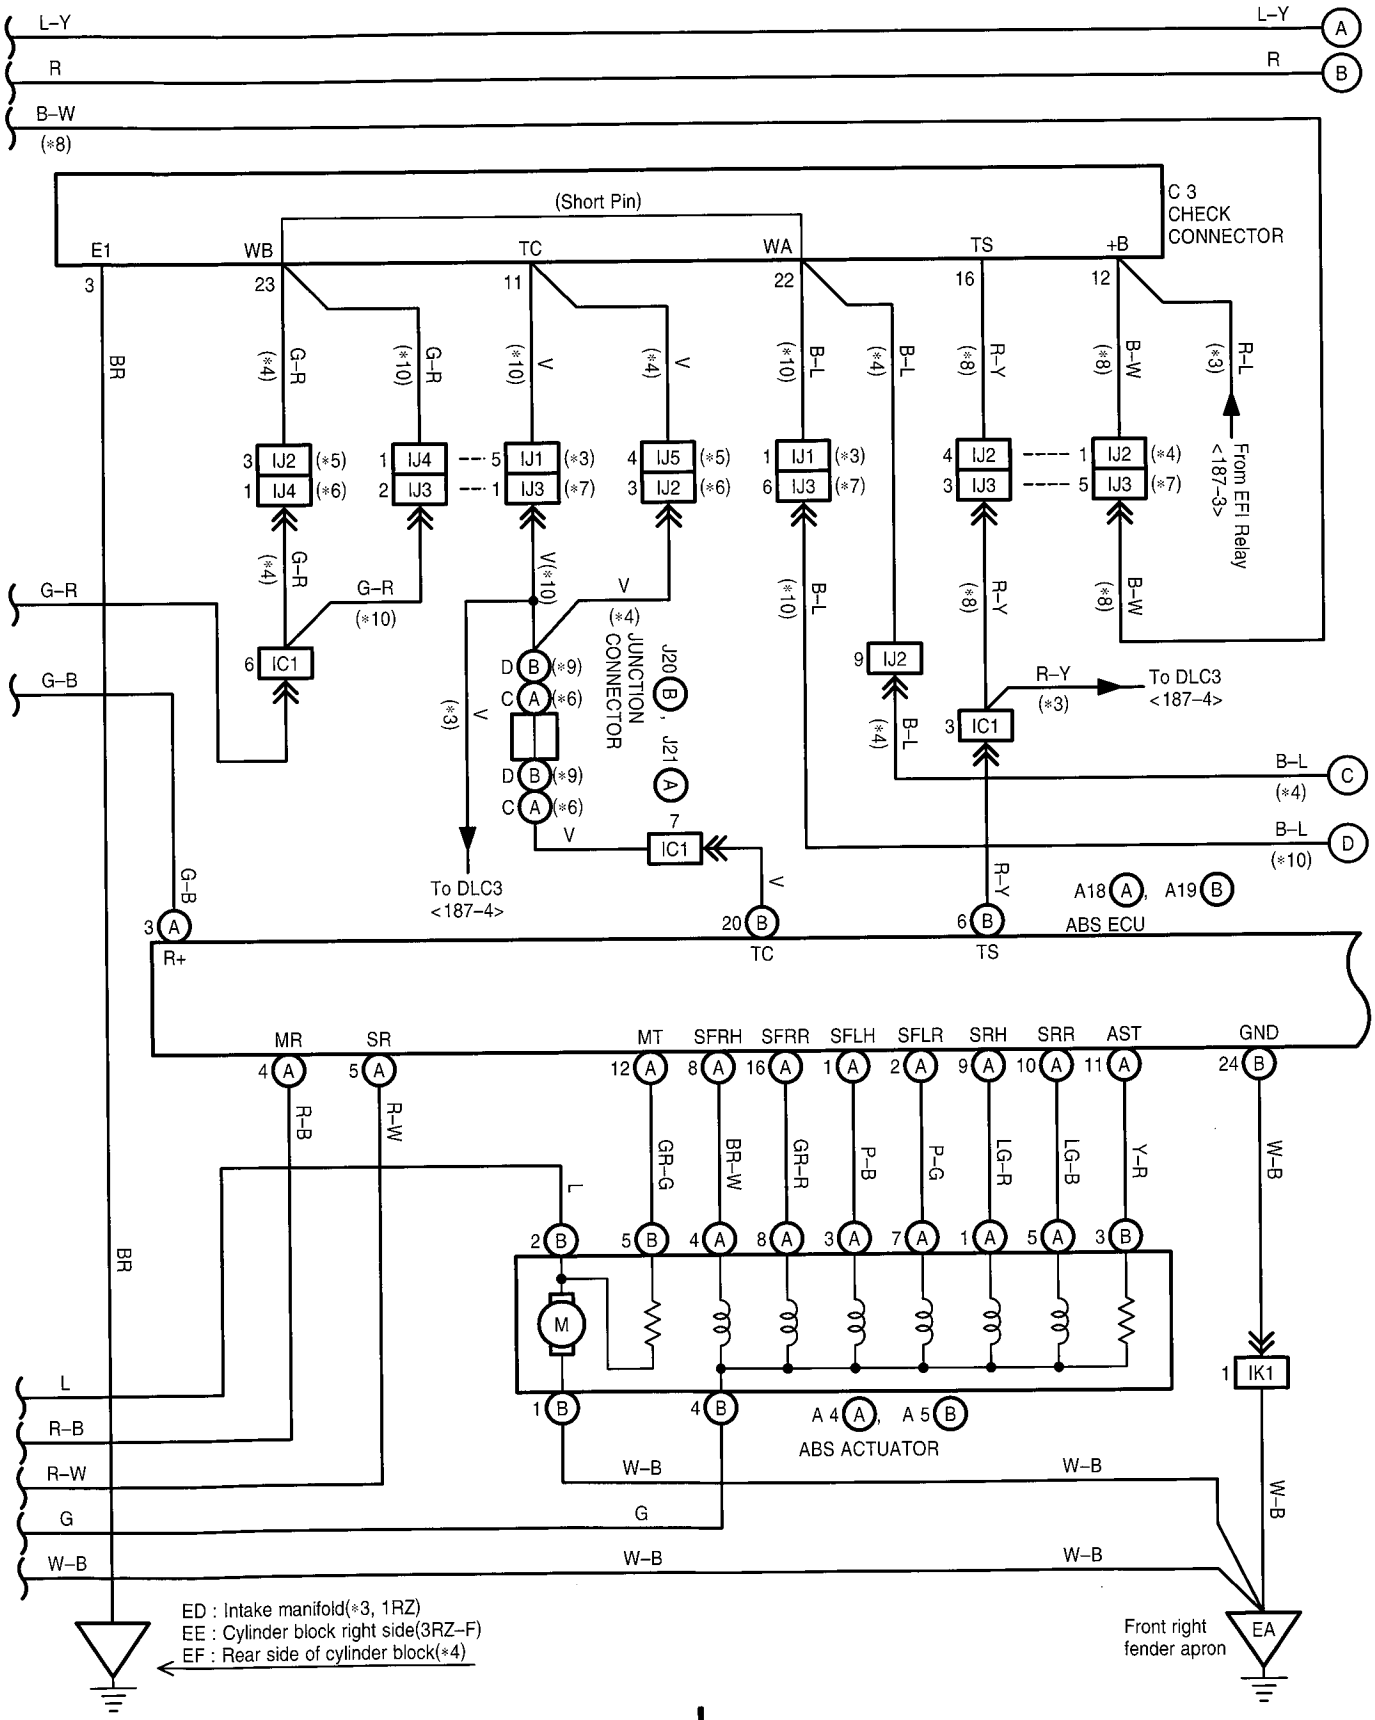
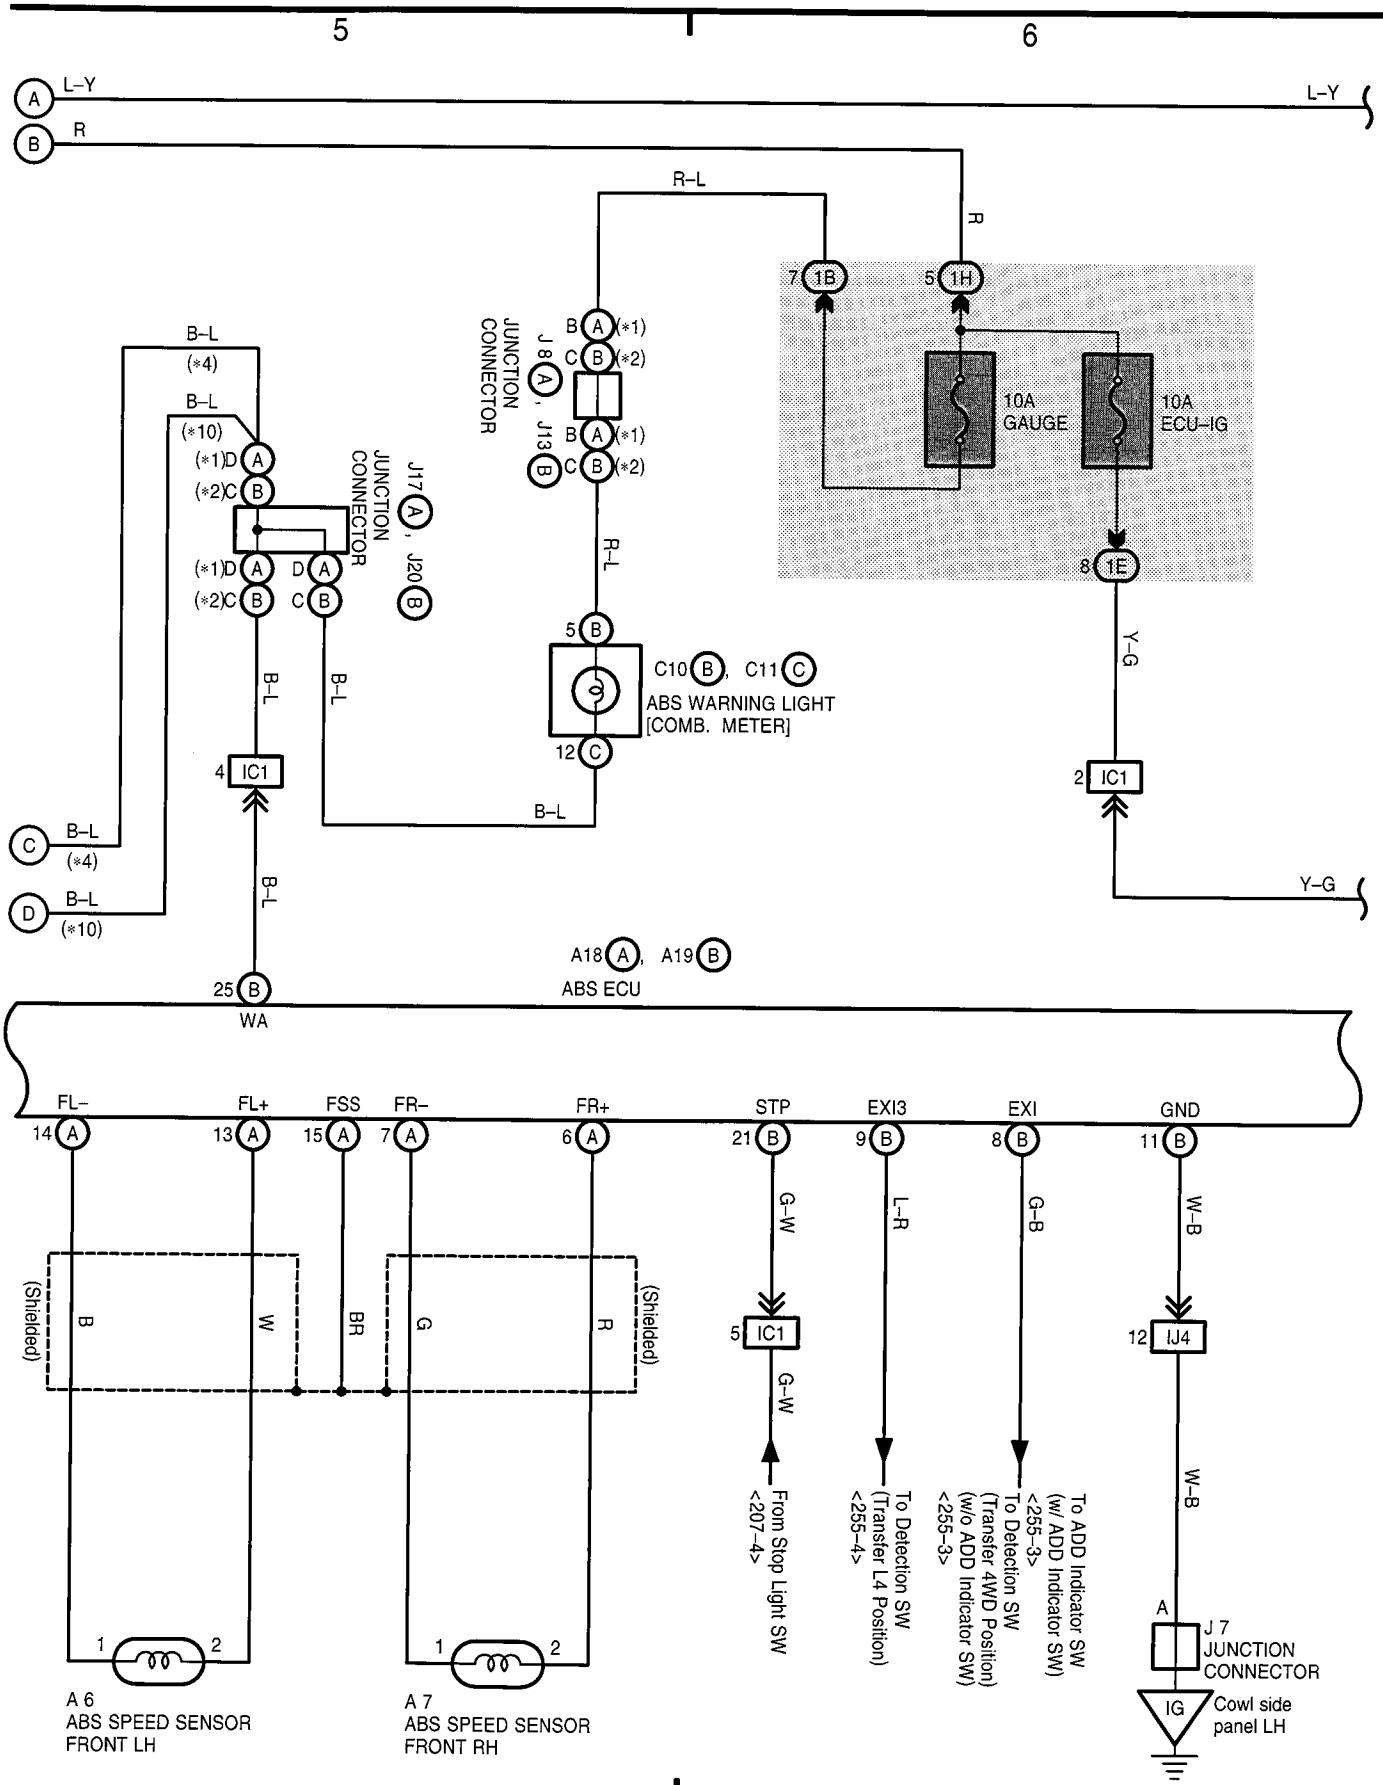

Power Source
ABS
1
2
L-Y
R
B-W
(*8)
B-R(*4)
B-R
(*10)
ACC
IG1
IG2
ST2
AM1
AM2
I17
IGNITION SW
J 3
JUNCTION
CONNECTOR
10A IGN
JUNCTION
CONNECTOR
J 9
J12
W
W-R
(*10)
W-R
(*4)
B
G-R
G-B
40A AM1
15A DOME
100A ALT(*11)
80A ALT(*12)
30A AM2
20A AM2
60A ABS(*10)
80A GLOW, ABS(*4)
IK1
EA1
ABS SOL RELAY
ABS MTR RELAY
BATTERY
W-B
G
R-W
R-B
L
* 1 : Europe
* 2 : Except Europe
* 3 : 2RZ-FE
* 4 : Diesel
* 5 : Diesel Except Europe
* 6 : Diesel Europe
* 7 : 1RZ, 3RZ-F
* 8 : Except 2RZ-FE
* 9 : Except *6
*10 : Gasoline
*11 : 70A Type Alternator
*12 : 45A, 55A Type Alternator

LHD

(Cont. next page)

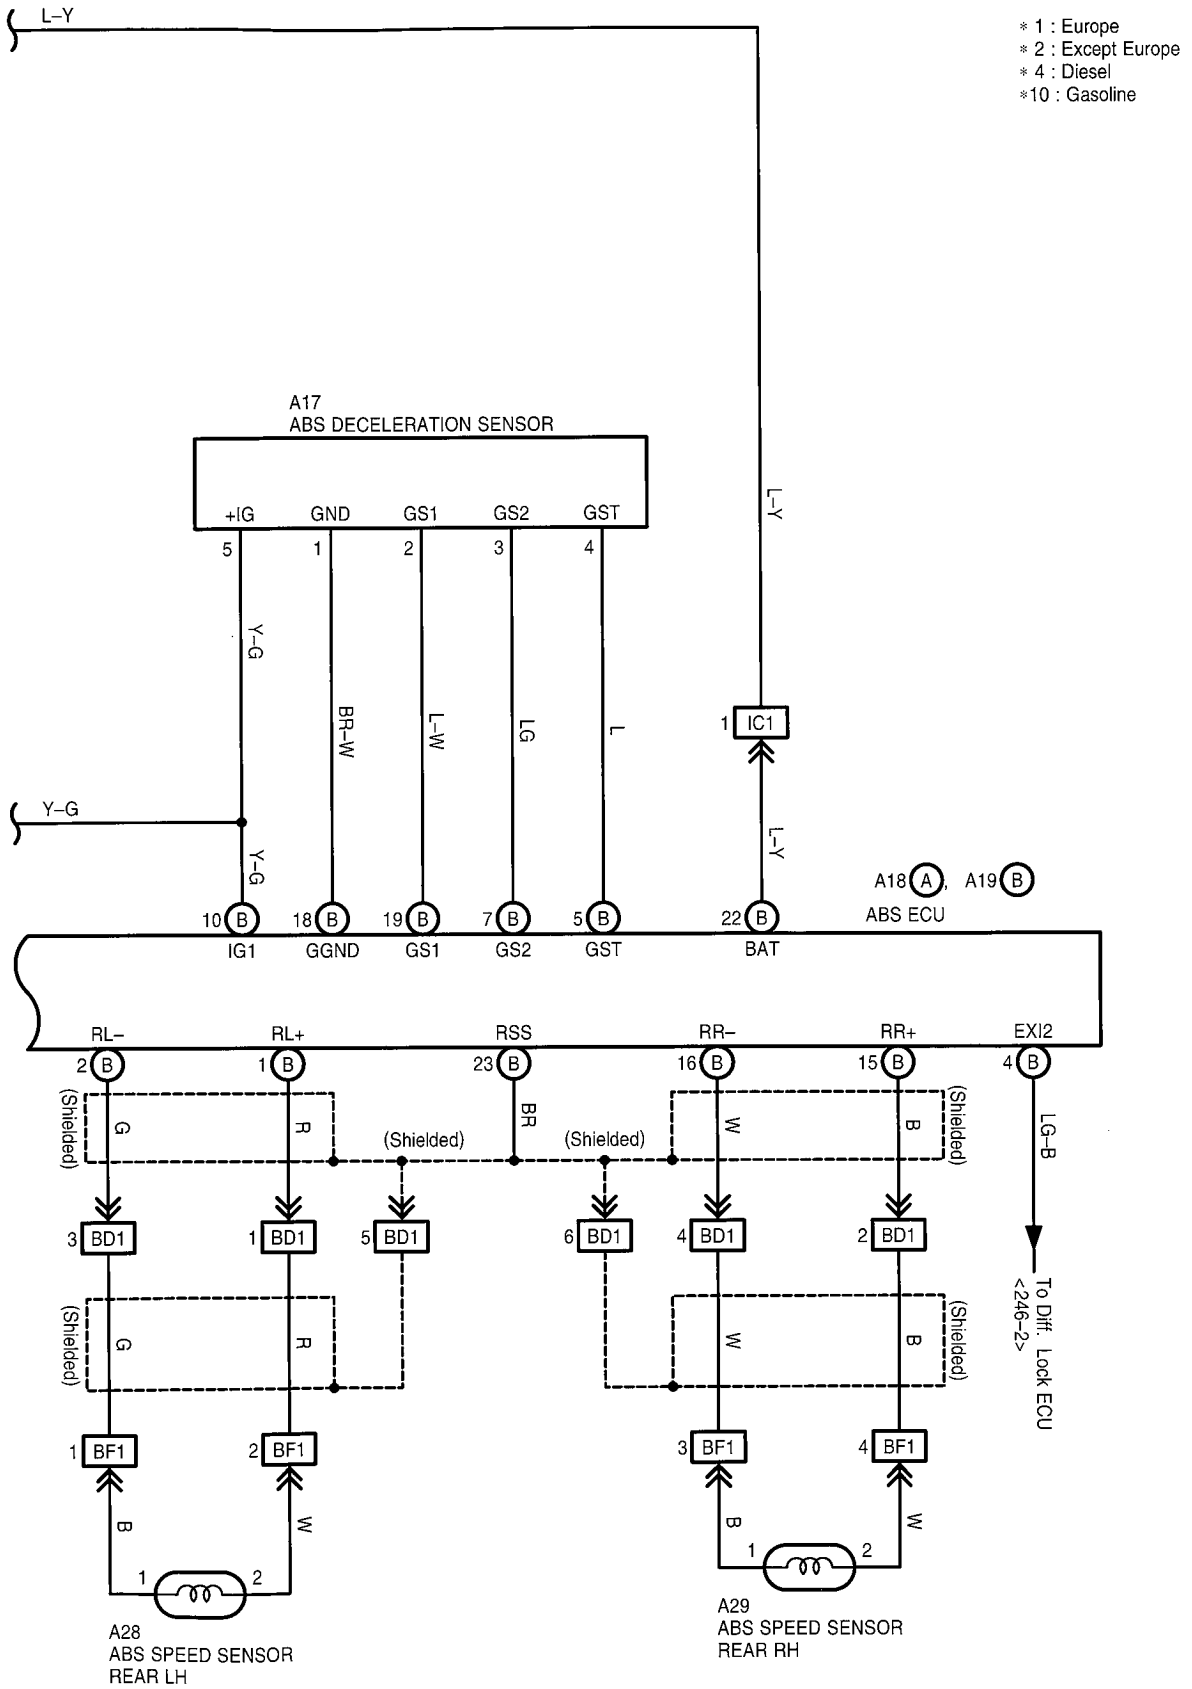


ABS


5
6
L-Y
R
R-L
B-L
(*4)
(*10)
JUNCTION CONNECTOR
J 8
J13
J17
J20
10A GAUGE
10A ECU-IG
7 1B
5 1H
8 1E
C10 B, C11 C
ABS WARNING LIGHT [COMB. METER]
IC1
Y-G
A18 A, A19 B
ABS ECU
25 B
WA
FL-
FL+
FSS
FR-
FR+
STP
EXI3
EXI
GND
14 A
13 A
15 A
7 A
6 A
21 B
9 B
8 B
11 B
(Shielded)
B
W
BR
G
R
G-W
L-R
G-B
W-B
5 IC1
12 IJ4
From Stop Light SW <207-4>
To Detection SW (Transfer L4 Position) <255-4>
To Detection SW (Transfer 4WD Position) (w/o ADD Indicator SW) <255-3>
To ADD Indicator SW (w/ ADD Indicator SW) <255-3>
A 6
ABS SPEED SENSOR FRONT LH
A 7
ABS SPEED SENSOR FRONT RH
J 7
JUNCTION CONNECTOR
IG
Cowl side panel LH

LHD

7 8


* 1 : Europe
* 2 : Except Europe
* 4 : Diesel
*10 : Gasoline
L–Y
A17
ABS DECELERATION SENSOR
+IG GND GS1 GS2 GST
5 1 2 3 4
Y–G
BR–W
L–W
LG
L
L–Y
1 IC1
Y–G
Y–G
A18 A, A19 B
ABS ECU
10 B 18 B 19 B 7 B 5 B 22 B
IG1 GGND GS1 GS2 GST BAT
RL– RL+ RSS RR– RR+ EXI2
2 B 1 B 23 B 16 B 15 B 4 B
(Shielded)
G
R
(Shielded)
BR
(Shielded)
W
B
(Shielded)
LG–B
3 BD1 1 BD1 5 BD1 6 BD1 4 BD1 2 BD1
(Shielded)
G
R
W
B
(Shielded)
To Diff. Lock ECU
<246–2>
1 BF1 2 BF1 3 BF1 4 BF1
B
W
B
W
1 2 1 2
A28
ABS SPEED SENSOR
REAR LH
A29
ABS SPEED SENSOR
REAR RH

LHD