

F ELECTRICAL WIRING DIAGRAM (System Circuits)

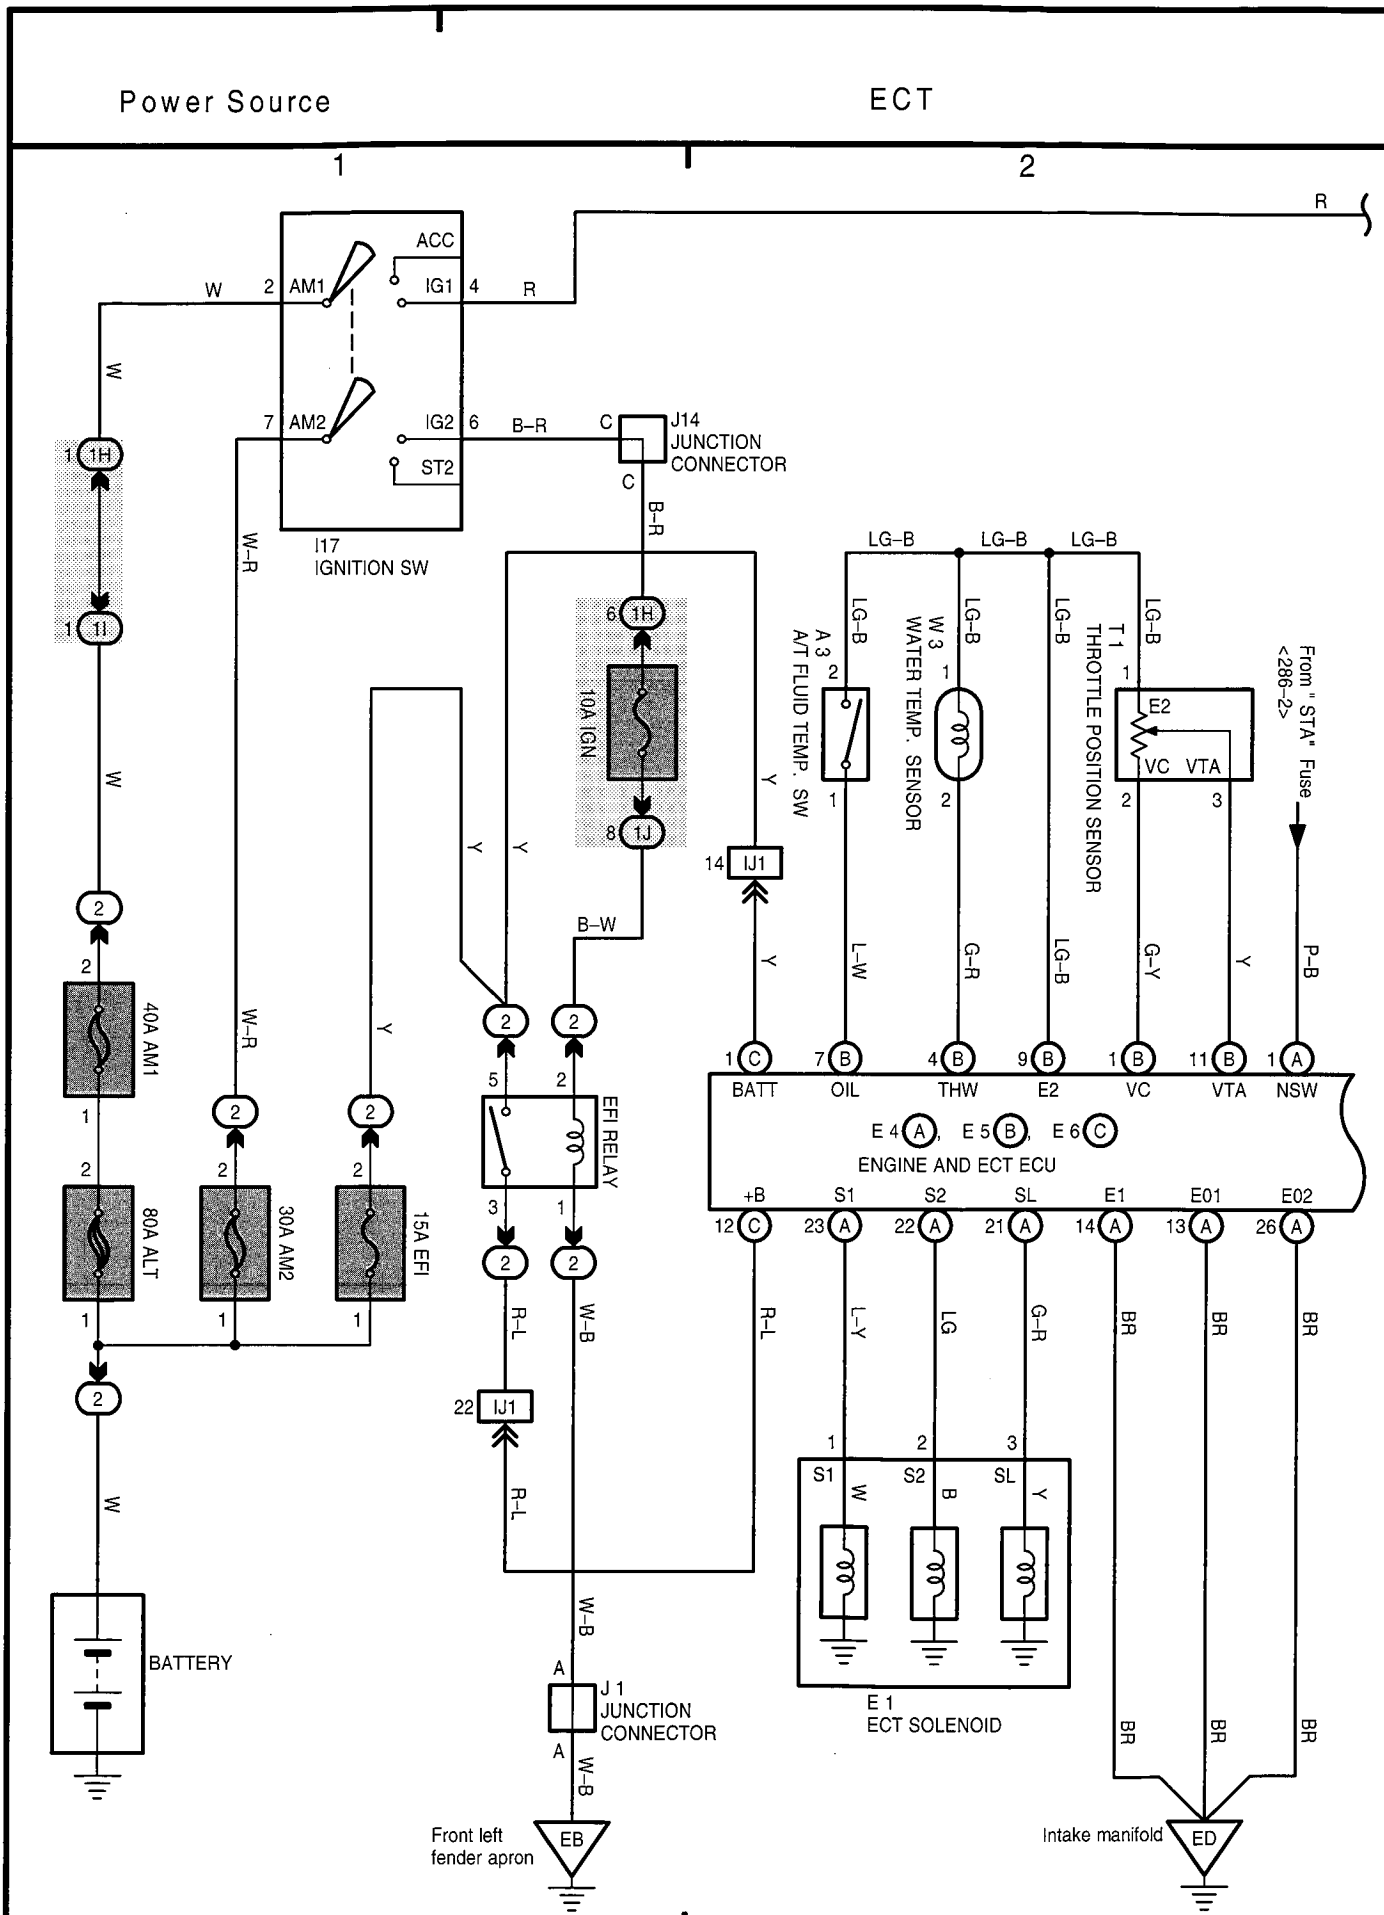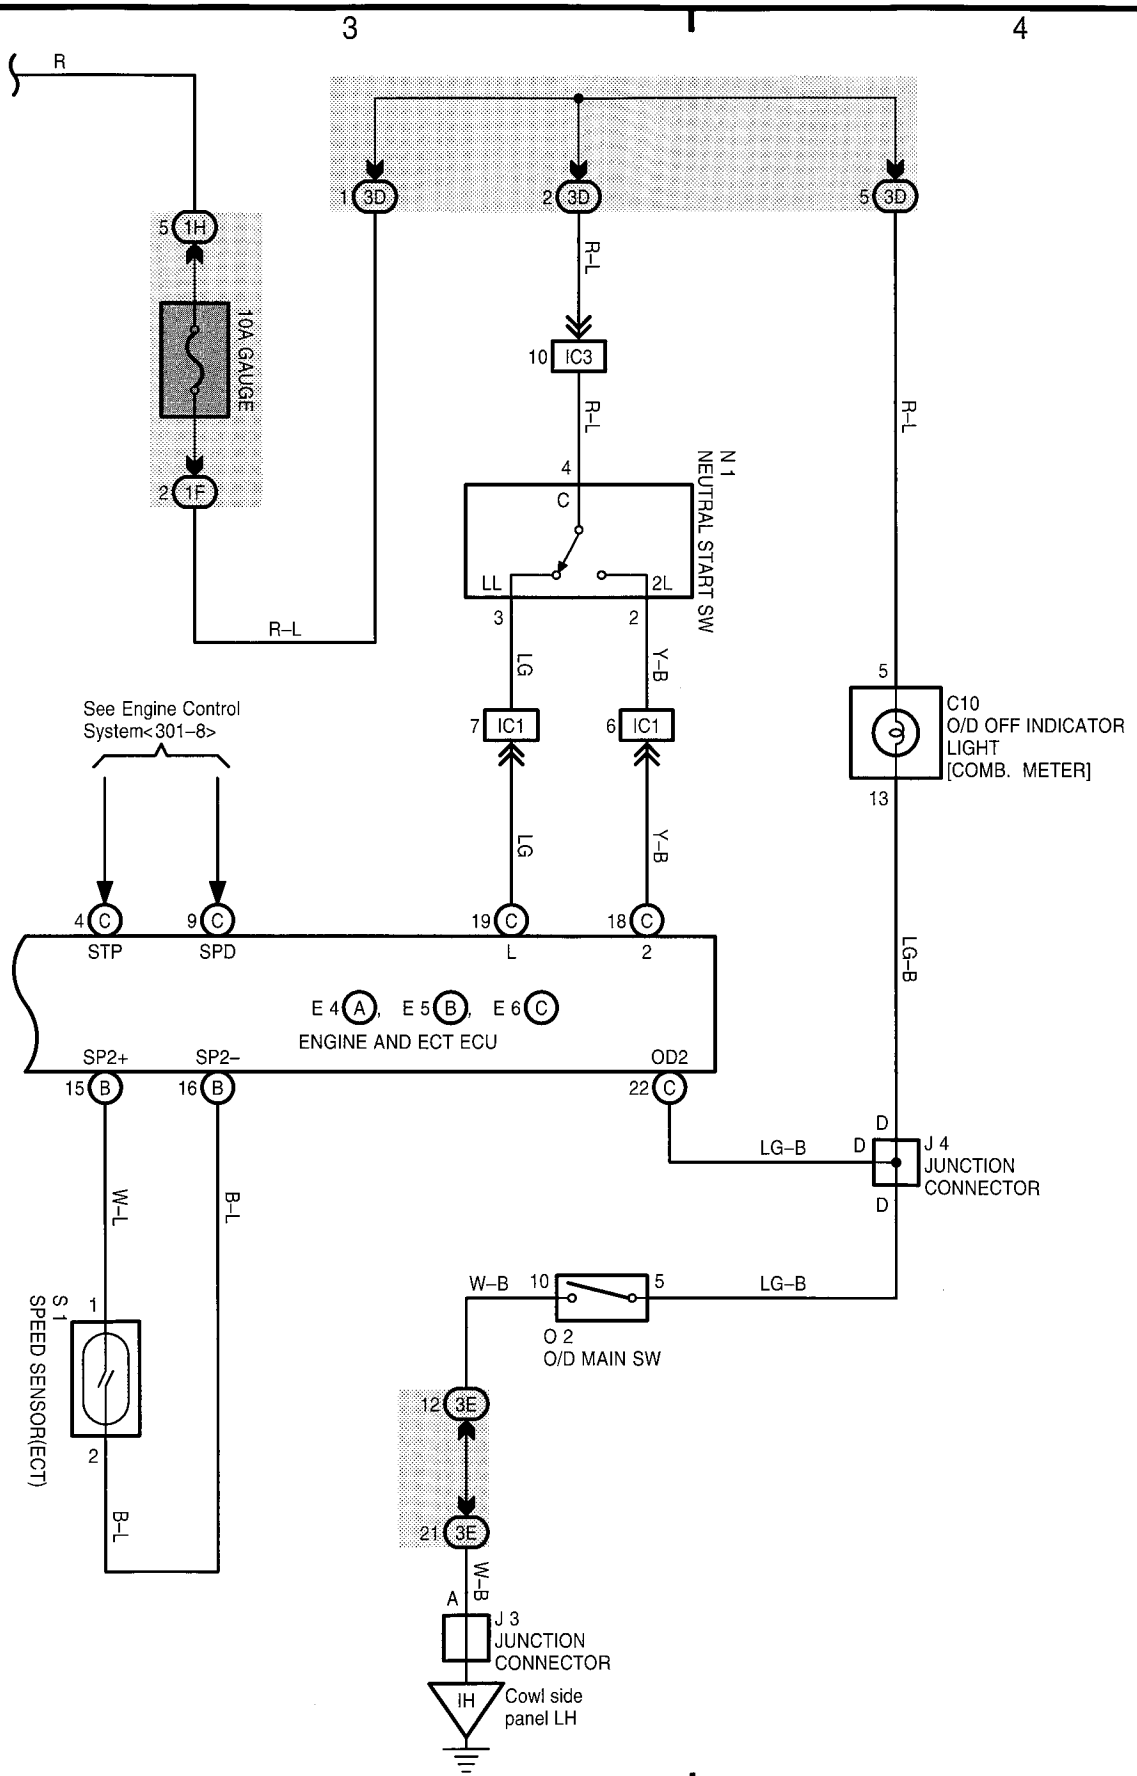


3
4
R
1 3D
2 3D
5 3D
5 1H
10A GAUGE
2 1F
R–L
10 IC3
R–L
4
C
N 1
NEUTRAL START SW
LL
2L
3
2
LG
Y–B
7 IC1
6 IC1
See Engine Control System<301–8>
4 C
9 C
19 C
18 C
STP
SPD
L
2
E 4 A, E 5 B, E 6 C
ENGINE AND ECT ECU
SP2+
SP2–
OD2
15 B
16 B
22 C
W–L
B–L
S 1
SPEED SENSOR(ECT)
1
2
B–L
5
C10
O/D OFF INDICATOR LIGHT
[COMB. METER]
13
LG–B
D
D
D
J 4
JUNCTION CONNECTOR
LG–B
W–B
10
5
LG–B
O 2
O/D MAIN SW
12 3E
21 3E
W–B
A
J 3
JUNCTION CONNECTOR
IH
Cowl side panel LH

RHD