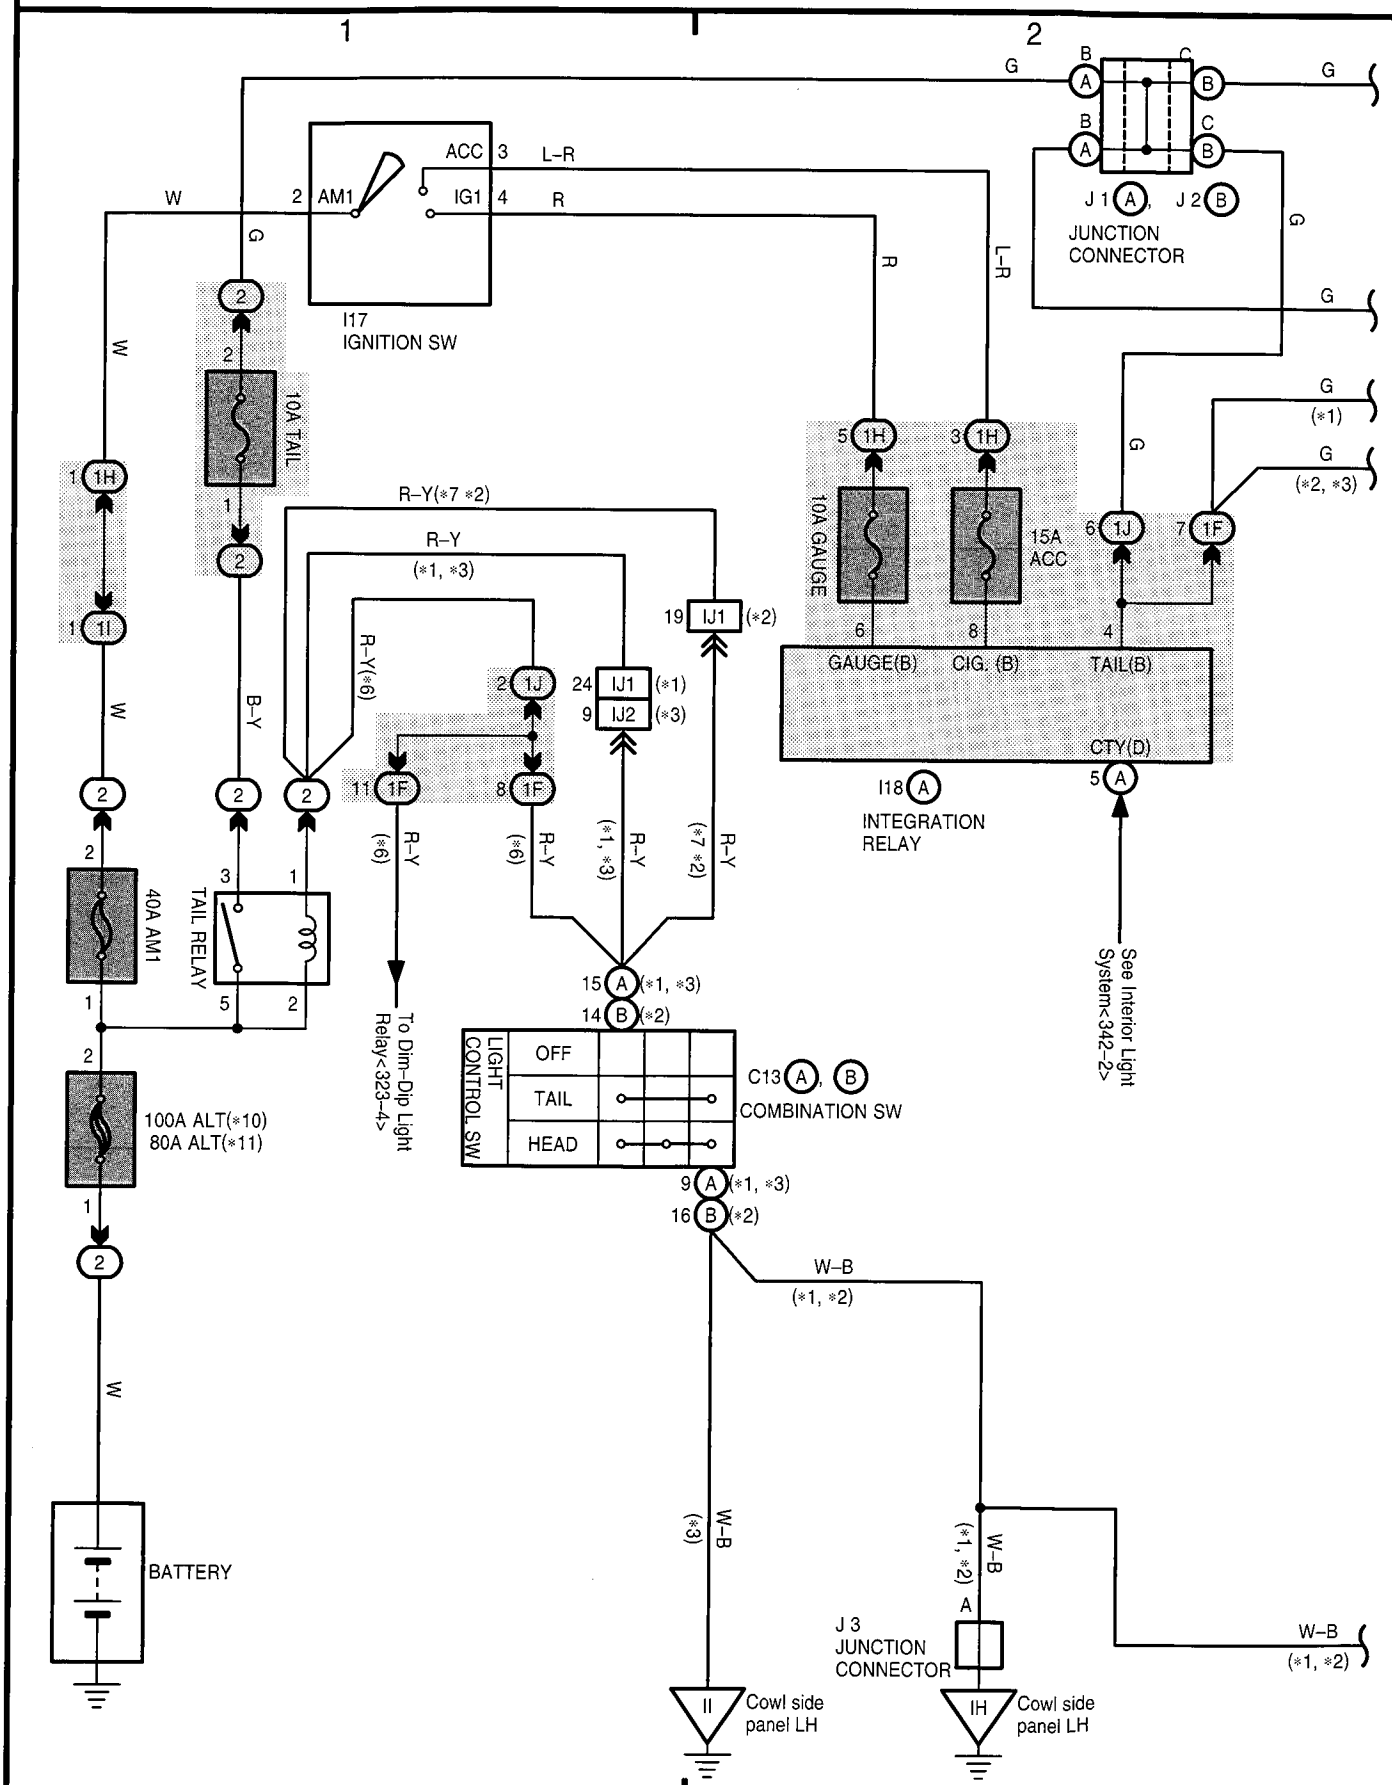
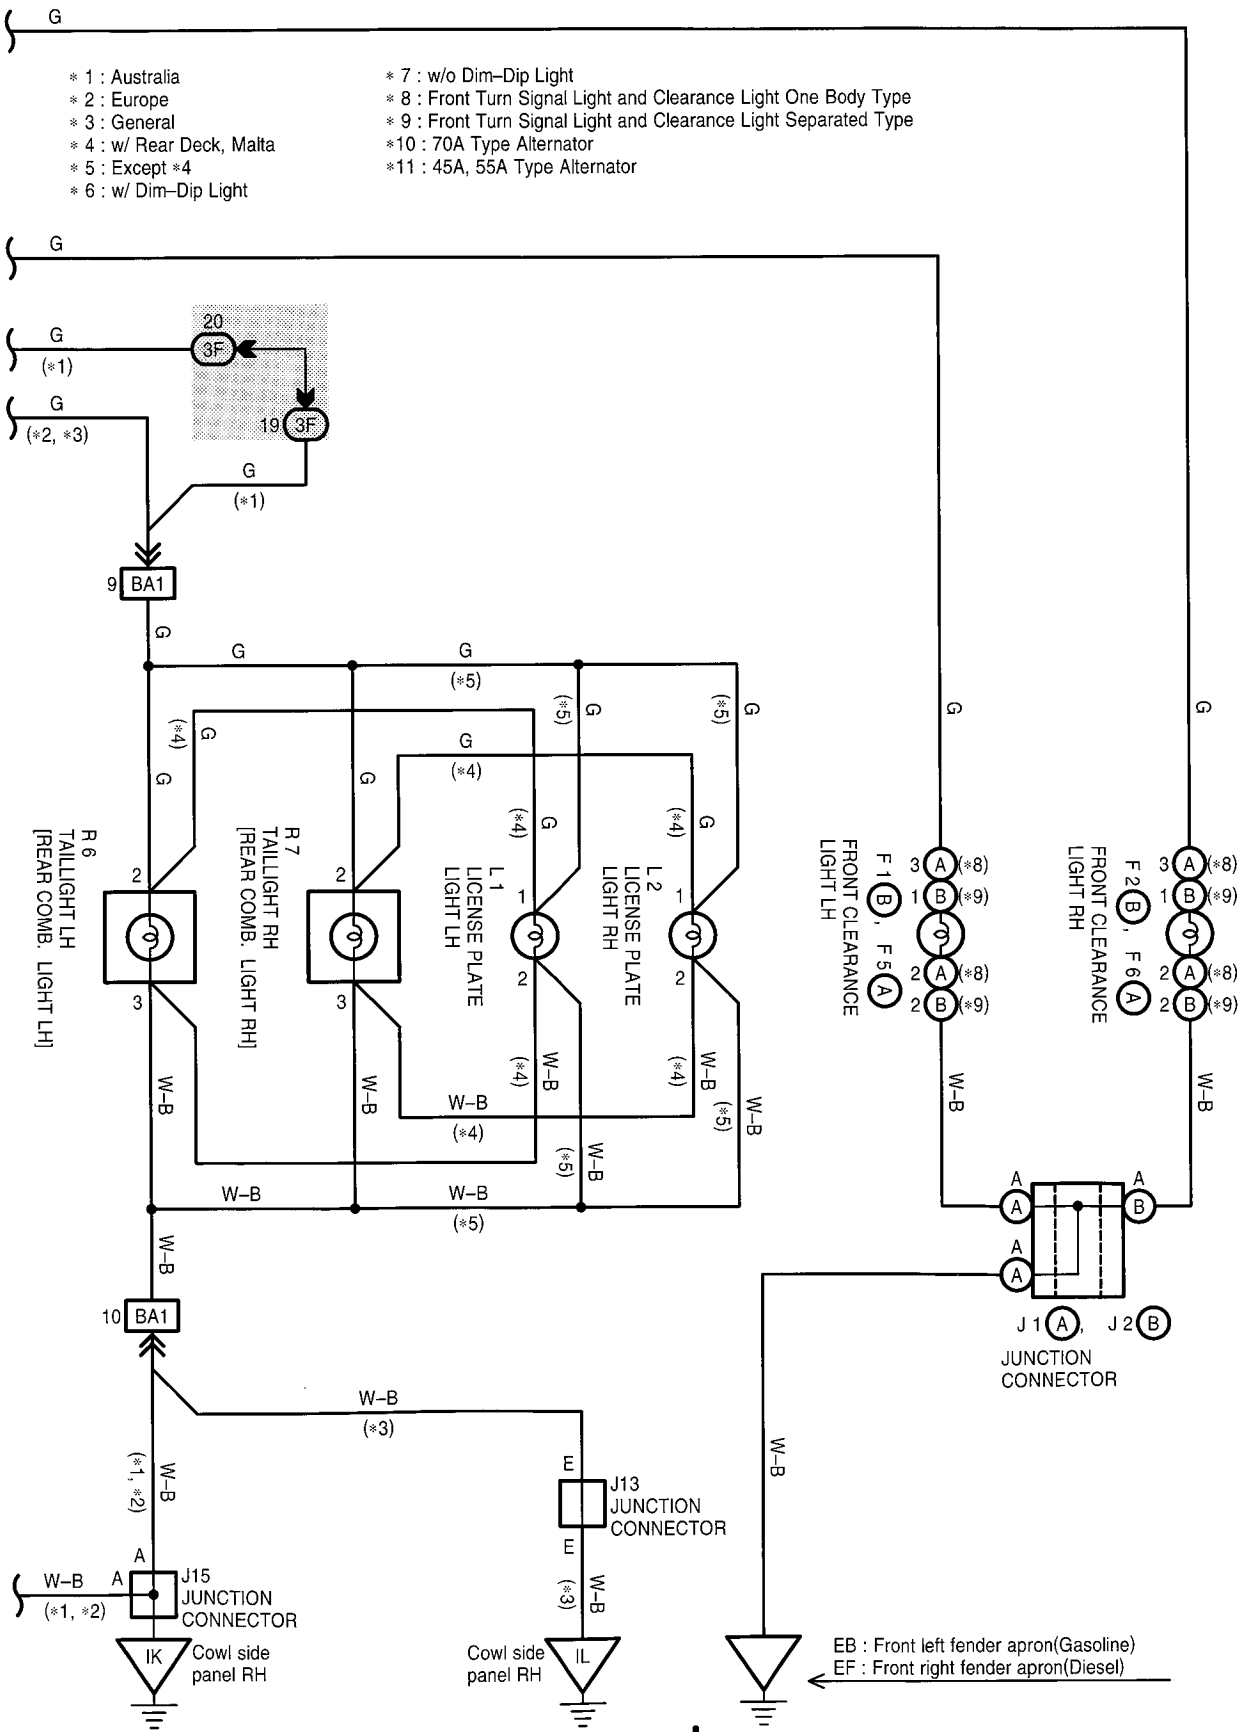

Power Source
Light Reminder Buzzer
1
2
I17
IGNITION SW
ACC
IG1
AM1
L-R
R
W
G
10A TAIL
40A AM1
TAIL RELAY
100A ALT(*10)
80A ALT(*11)
BATTERY
R-Y(*7 *2)
R-Y
(*1, *3)
R-Y(*6)
B-Y
IJ1
IJ2
(*1)
(*2)
(*3)
(*6)
(*7 *2)
To Dim-Dip Light Relay<323-4>
LIGHT CONTROL SW
OFF
TAIL
HEAD
C13
COMBINATION SW
W-B
(*1, *2)
(*3)
J 1
J 2
JUNCTION CONNECTOR
J 3
JUNCTION CONNECTOR
10A GAUGE
15A ACC
GAUGE(B)
CIG. (B)
TAIL(B)
CTY(D)
I18
INTEGRATION RELAY
See Interior Light System<342-2>
Cowl side panel LH
Cowl side panel LH
RHD

3 4

＊1 : Australia
＊2 : Europe
＊3 : General
＊4 : w/ Rear Deck, Malta
＊5 : Except ＊4
＊6 : w/ Dim–Dip Light
＊7 : w/o Dim–Dip Light
＊8 : Front Turn Signal Light and Clearance Light One Body Type
＊9 : Front Turn Signal Light and Clearance Light Separated Type
＊10 : 70A Type Alternator
＊11 : 45A, 55A Type Alternator



RHD