
④ : Engine Room R/B No.2	LHD Diesel : Engine Compartment Left (See Page 22)
	RHD Diesel : Engine Compartment Right (See Page 23)

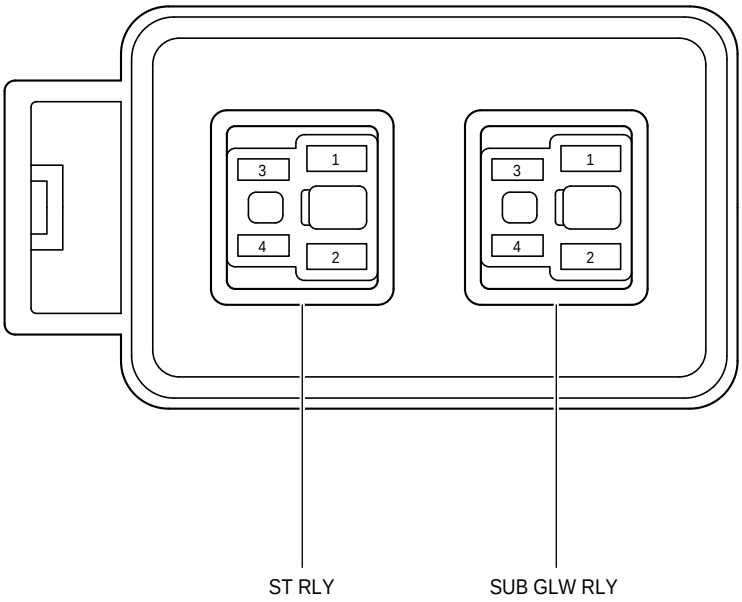

⑤ : R/B No.5	LHD : Front Right Fender Apron (See Page 22)
	RHD : Near the Brake Master Cylinder (See Page 23)

