
## Connector Joining Wire Harness and Wire Harness

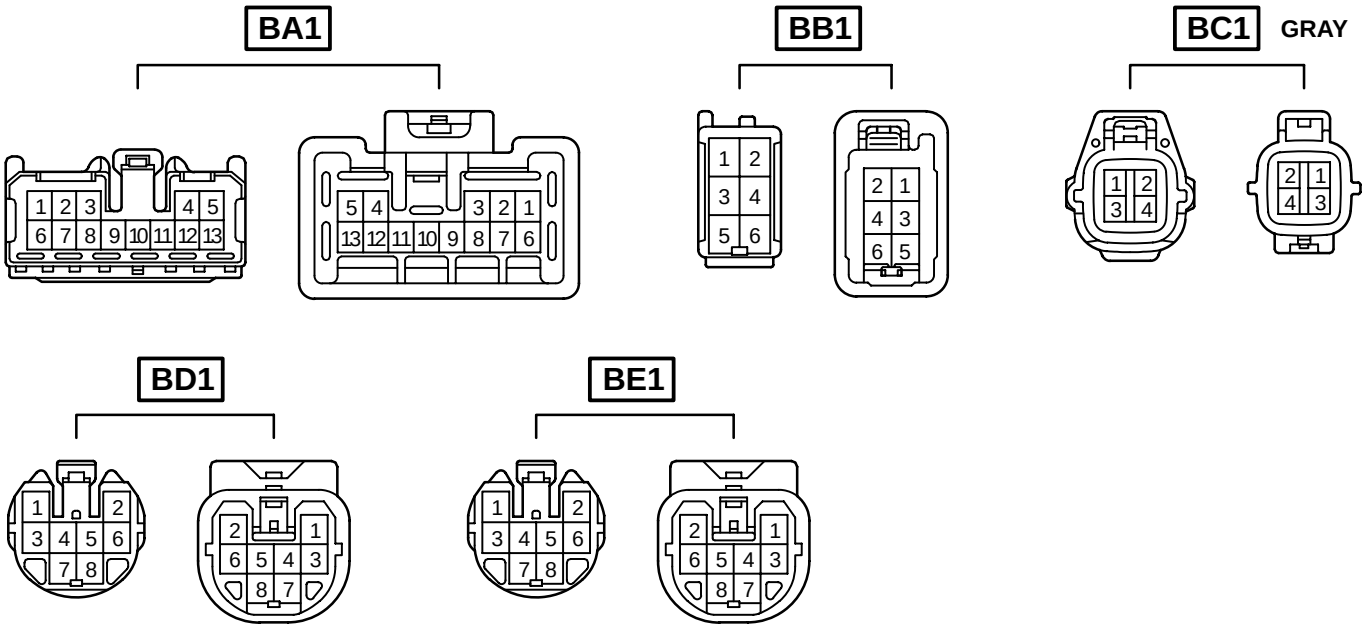


| Code | Joining Wire Harness and Wire Harness (Connector Location) |
|---|---|
| BA1 | Frame Wire and Cowl Wire (Under the Driver's Seat) |
| BB1 | Frame Wire and Cowl No.3 Wire (Under the Driver's Seat) |
| BC1 | Frame Wire and Speed Sensor Wire (Near the No.5 Cross Member) |
| BD1 | Rear Door LH Wire and Cowl Wire (Left Center Pillar) |
| BE1 | Rear Door RH Wire and Cowl Wire (Right Center Pillar) |