
## Position of Parts in Engine Compartment

## [LHD : 3RZ–F]

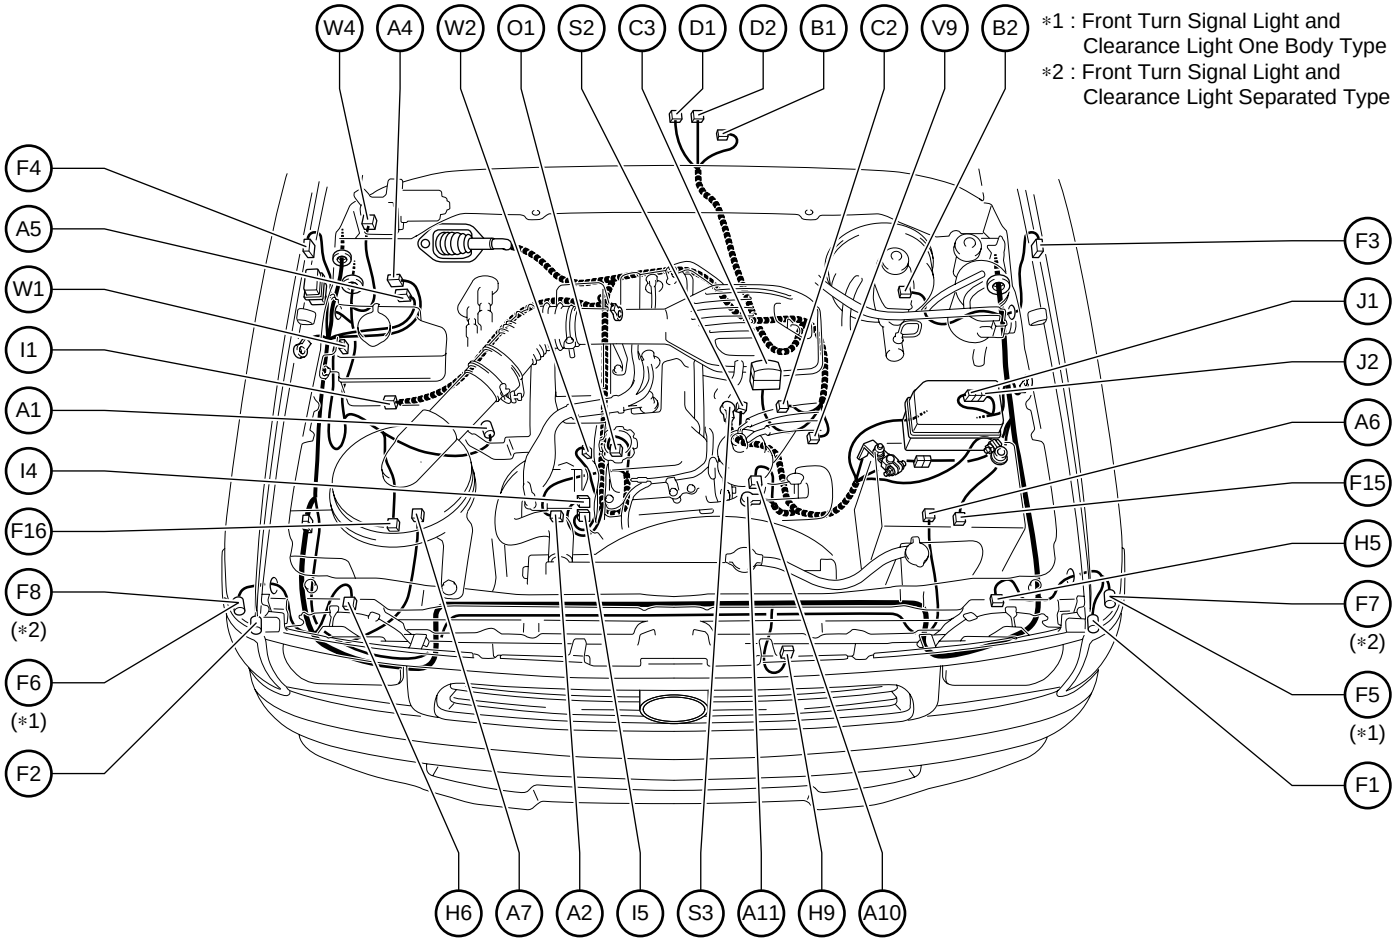


A 1 A/C Dual Pressure SW
A 2 A/C Magnetic Clutch
A 4 ABS Actuator
A 5 ABS Actuator
A 6 ABS Speed Sensor Front LH
A 7 ABS Speed Sensor Front RH
A 10 Alternator
A 11 Alternator

B 1 Back–Up Light SW
B 2 Brake Fluid Level Warning SW

C 2 Carburetor
C 3 Check Connector

D 1 Detection SW (Transfer 4WD Position)
D 2 Detection SW (Transfer L4 Position)

F 1 Front Clearance Light LH
F 2 Front Clearance Light RH
F 3 Front Side Turn Signal Light LH
F 4 Front Side Turn Signal Light RH
F 5 Front Turn Signal Light and Clearance Light LH
F 6 Front Turn Signal Light and Clearance Light RH
F 7 Front Turn Signal Light LH
F 8 Front Turn Signal Light RH
F 15 Front Airbag Sensor LH
F 16 Front Airbag Sensor RH

H 5 Headlight LH
H 6 Headlight RH
H 9 Horn

I 1 Igniter
I 4 Ignition Coil No.1
I 5 Ignition Coil No.2

J 1 Junction Connector
J 2 Junction Connector

O 1 Oil Pressure SW

S 2 Starter
S 3 Starter

V 9 VSV (Throttle Position Control)

W 1 Washer Motor
W 2 Water Temp. Sender
W 4 Wiper Motor