
Position of Parts in Engine Compartment

[LHD : 2L–T]

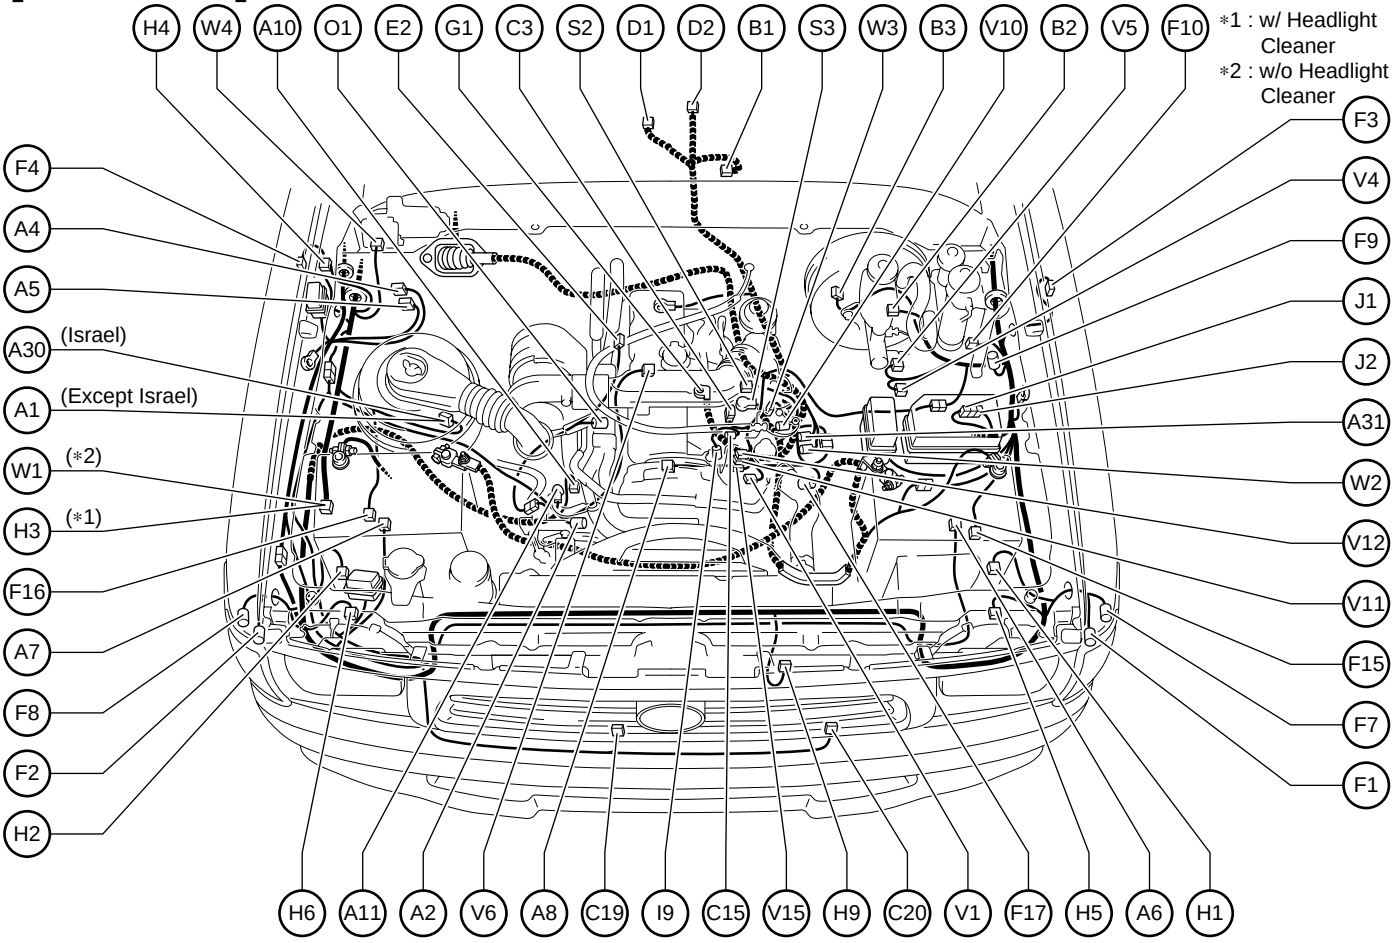

A 1 A/C Dual Pressure SW
A 2 A/C Magnetic Clutch
A 4 ABS Actuator
A 5 ABS Actuator
A 6 ABS Speed Sensor Front LH
A 7 ABS Speed Sensor Front RH
A 8 ADD Indicator SW
A 10 Alternator
A 11 Alternator
A 30 A/C Triple Pressure SW
A 31 Accelerator Pedal Position Sensor

B 1 Back–Up Light SW
B 2 Brake Fluid Level Warning SW
B 3 Brake Vacuum Warning SW

C 3 Check Connector
C 15 Crankshaft Position Sensor
C 19 Condenser Fan Motor 1
C 20 Condenser Fan Motor 2

D 1 Detection SW (Transfer 4WD Position)
D 2 Detection SW (Transfer L4 Position)

E 2 Engine Oil Level Warning SW

F 1 Front Clearance Light LH
F 2 Front Clearance Light RH
F 3 Front Side Turn Signal Light LH
F 4 Front Side Turn Signal Light RH
F 7 Front Turn Signal Light LH
F 8 Front Turn Signal Light RH
F 9 Fuel Heater
F 10 Fuel Sedimentary SW
F 15 Front Airbag Sensor LH
F 16 Front Airbag Sensor RH
F 17 Fuel Control Valve

G 1 Glow Plug

H 1 Headlight Beam Level Control Actuator LH
H 2 Headlight Beam Level Control Actuator RH
H 3 Headlight Cleaner Motor and Washer Motor
H 4 Headlight Cleaner Relay
H 5 Headlight LH
H 6 Headlight RH
H 9 Horn

I 9 Injection Pump

J 1 Junction Connector
J 2 Junction Connector

K 2 Kick Down SW

N 1 Neutral Start SW

O 1 Oil Pressure SW
O 3 O/D Solenoid

S 2 Starter
S 3 Starter

V 1 Vacuum Sensor
V 4 VSV (2WD, ADD)
V 5 VSV (4WD, ADD)
V 6 VSV (A/C Idle–Up)
V 10 VRV (EGR)
V 11 VSV (BACS)
V 12 VSV (EGR)
V 15 VSV (Turbo Pressure Sensor)

W 1 Washer Motor
W 2 Water Temp. Sender
W 3 Water Temp. Sensor
W 4 Wiper Motor