
Position of Parts in Instrument Panel

[LHD]

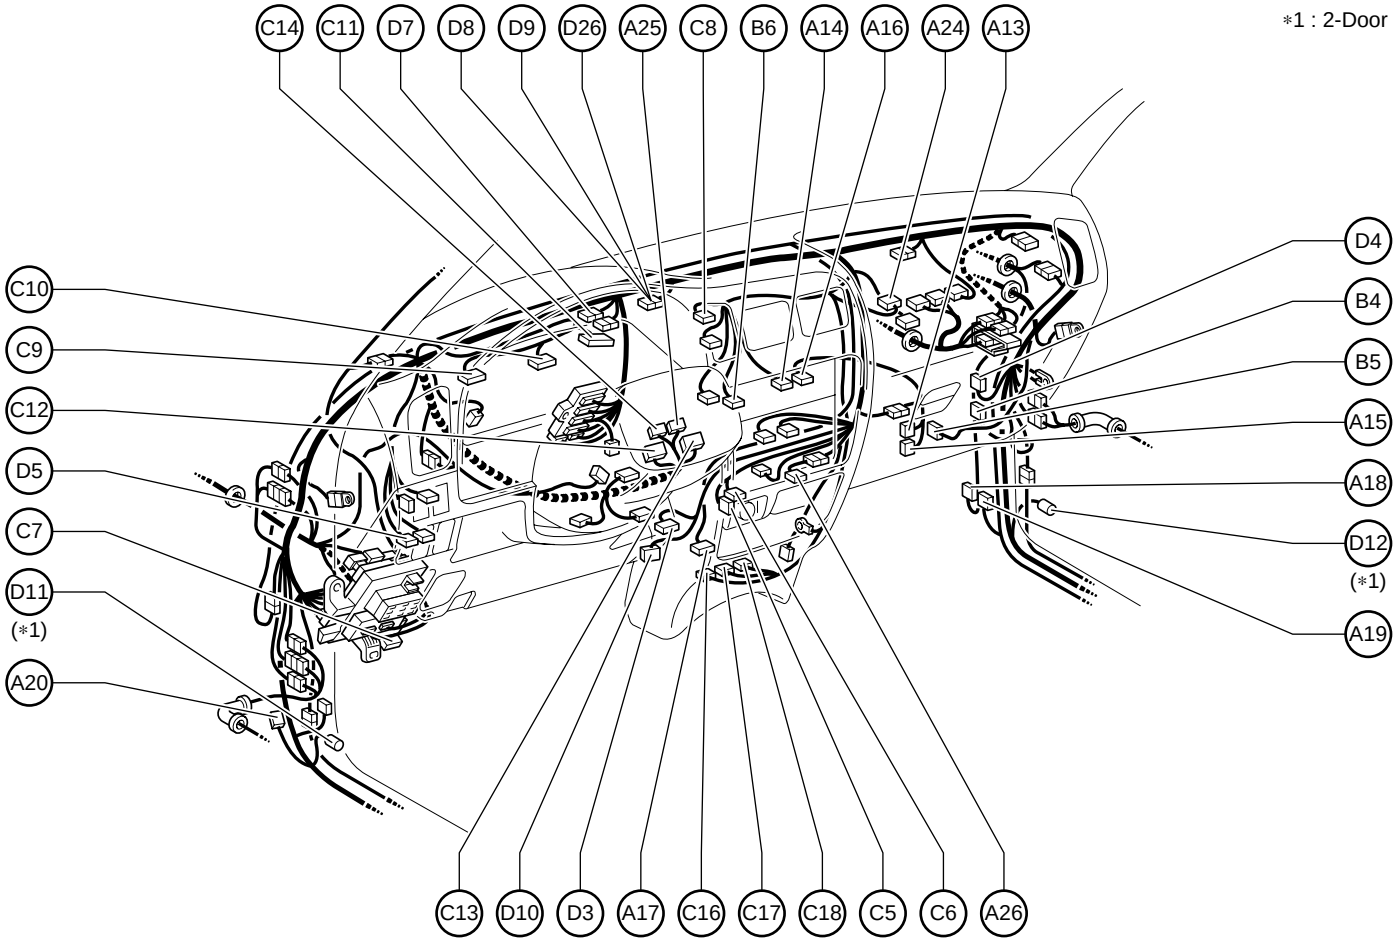

A13 A/C Amplifier
A14 A/C SW
A15 A/C Thermistor
A16 A/C Volume SW
A17 ABS Deceleration Sensor
A18 ABS ECU
A19 ABS ECU
A20 ADD Control Relay
A24 Airbag Squib (Front Passenger's Airbag Assembly)
A25 Airbag Squib (Steering Wheel Pad)
A26 Ashtray Illumination

B 4 Blower Motor
B 5 Blower Resistor
B 6 Blower SW

C 5 Cigarette Lighter
C 6 Cigarette Lighter Illumination
C 7 Circuit Opening Relay
C 8 Clock
C 9 Combination Meter
C10 Combination Meter
C11 Combination Meter
C12 Combination SW
C13 Combination SW
C14 Combination SW
C16 Center Airbag Sensor Assembly
C17 Center Airbag Sensor Assembly
C18 Center Airbag Sensor Assembly

D 3 Daytime Running Light Relay
D 4 Diff. Lock ECU
D 5 Diff. Lock SW
D 7 Diode (Door Courtesy)
D 8 Diode (Glow Plug)
D 9 Diode (Idle–Up)
D10 DLC3
D11 Door Courtesy SW Front LH
D12 Door Courtesy SW Front RH
D26 Diode (O/D)