
Position of Parts in Body

[LHD : Extra Cab]

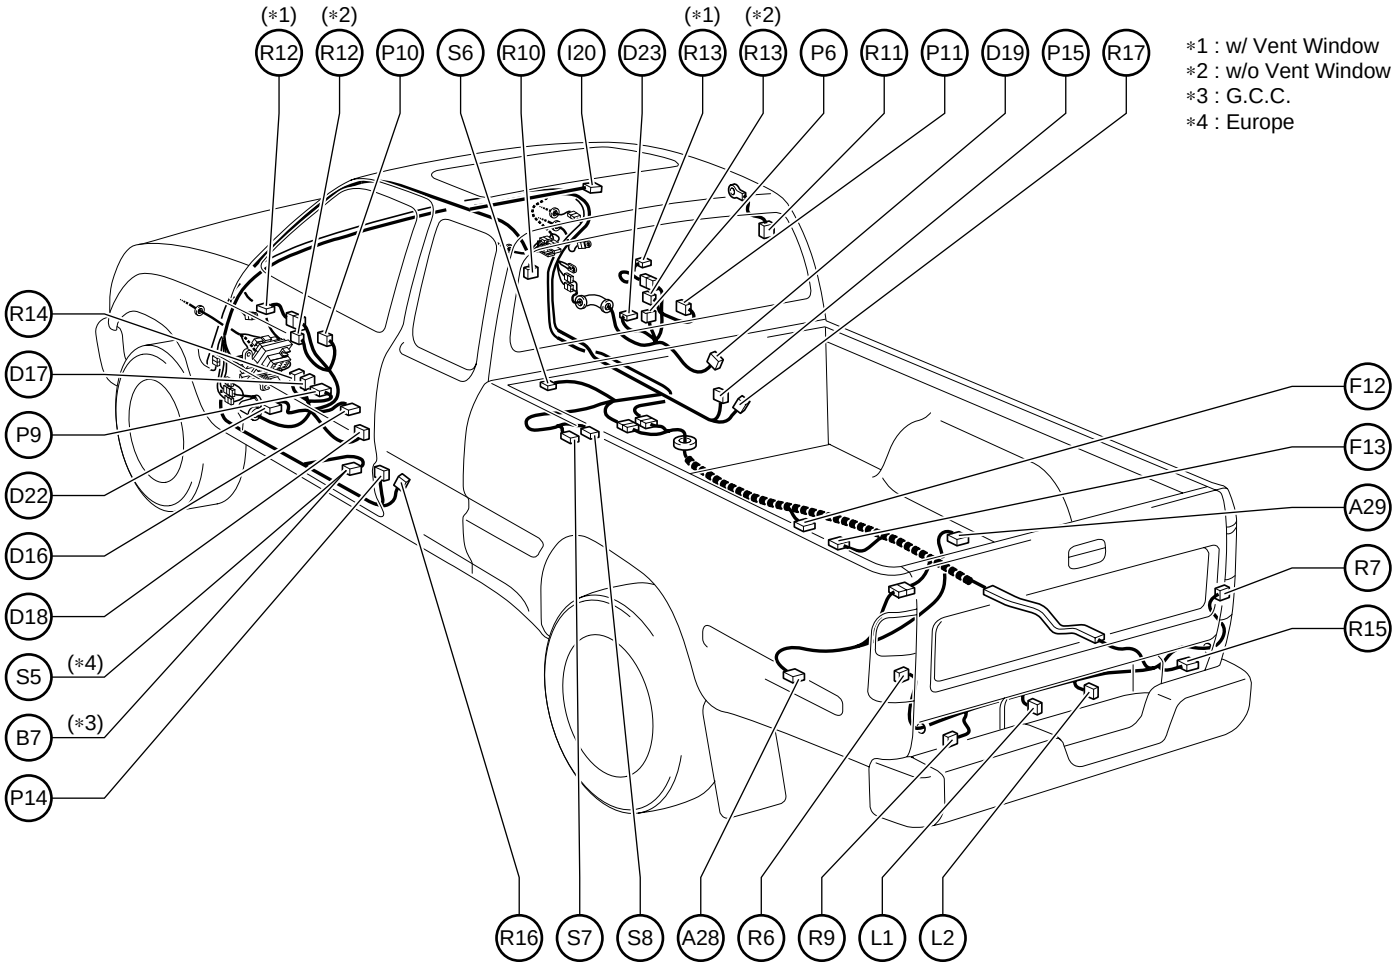

A28 ABS Speed Sensor Rear LH
A29 ABS Speed Sensor Rear RH

B 7 Buckle SW

D16 Door Key Lock and Unlock SW
D17 Door Lock Control SW
D18 Door Lock Motor Front LH
D19 Door Lock Motor Front RH
D22 Door Speaker Front LH
D23 Door Speaker Front RH

F 12 Fuel Pump
F 13 Fuel Sender

I 20 Interior Light

L 1 License Plate Light LH
L 2 License Plate Light RH

P 6 Power Window Control SW Front RH
P 9 Power Window Master SW
P 10 Power Window Motor Front LH
P 11 Power Window Motor Front RH
P 14 Pretensioner LH
P 15 Pretensioner RH

R 6 Rear Combination Light LH
R 7 Rear Combination Light RH
R 9 Rear Fog Light
R 10 Rear Window Defogger
R 11 Rear Window Defogger
R 12 Remote Control Mirror LH
R 13 Remote Control Mirror RH
R 14 Remote Control Mirror SW
R 15 Reverse Warning Buzzer
R 16 Rear Speaker LH
R 17 Rear Speaker RH

S 5 Seat Heater (Driver's Seat)
S 6 Seat Heater (Front Passenger's Seat)
S 7 Seat Heater SW (Driver's Seat)
S 8 Seat Heater SW (Front Passenger's Seat)