
Position of Parts in Engine Compartment

[RHD : 1RZ–E]

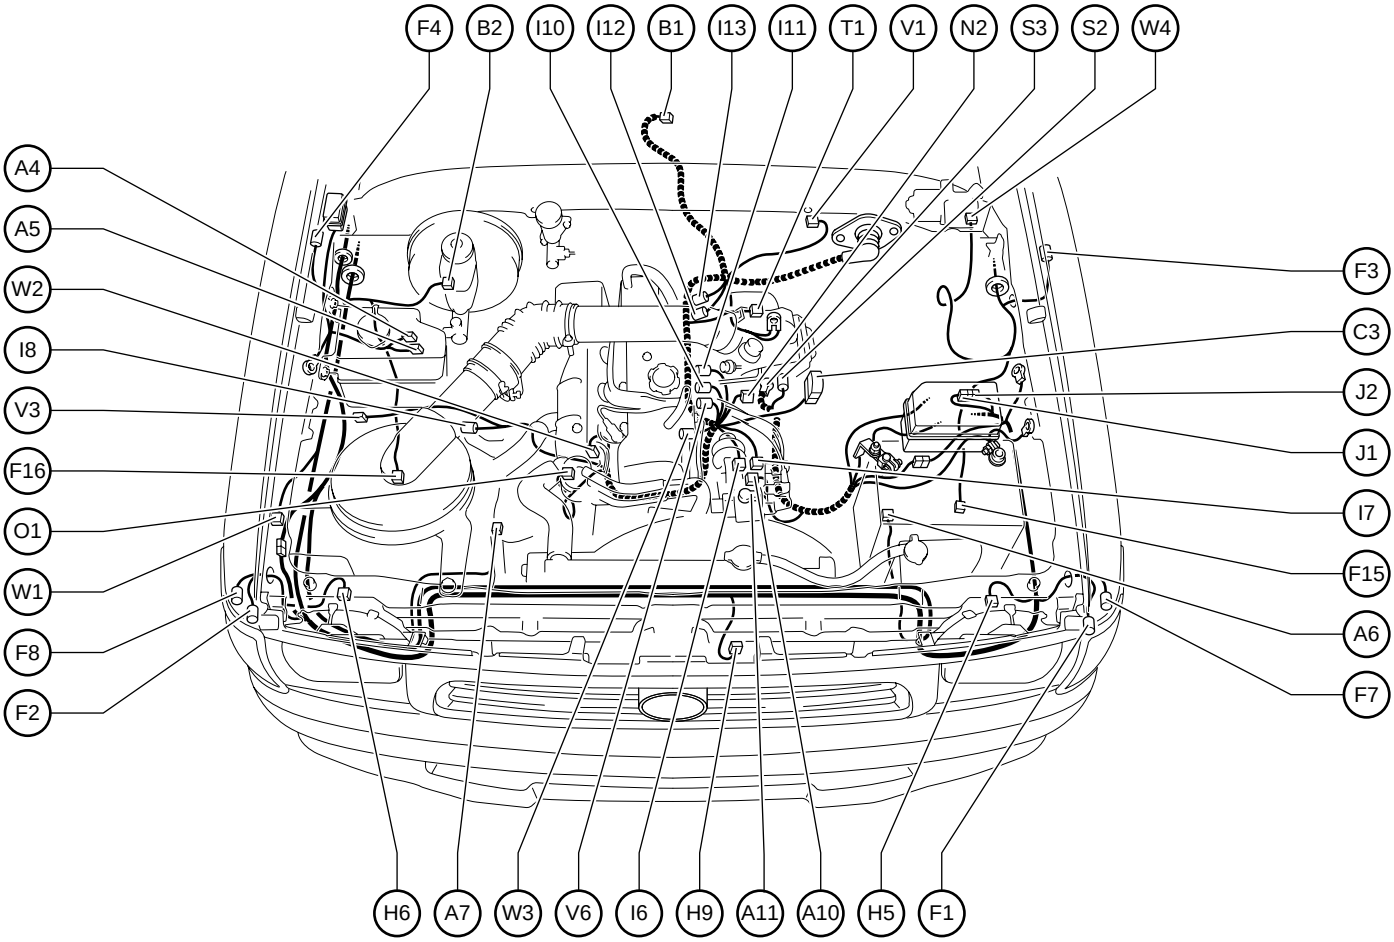

A 4 ABS Actuator
A 5 ABS Actuator
A 6 ABS Speed Sensor Front LH
A 7 ABS Speed Sensor Front RH
A 10 Alternator
A 11 Alternator

B 1 Back–Up Light SW
B 2 Brake Fluid Level Warning SW

C 3 Check Connector

F 1 Front Clearance Light LH
F 2 Front Clearance Light RH
F 3 Front Side Turn Signal Light LH
F 4 Front Side Turn Signal Light RH
F 7 Front Turn Signal Light LH
F 8 Front Turn Signal Light RH
F 15 Front Airbag Sensor LH
F 16 Front Airbag Sensor RH

H 5 Headlight LH
H 6 Headlight RH
H 9 Horn

I 6 IIA
I 7 IIA
I 8 Intake Air Temp. Sensor
I 10 Injector No.1
I 11 Injector No.2
I 12 Injector No.3
I 13 Injector No.4

J 1 Junction Connector
J 2 Junction Connector

N 2 Noise Filter

O 1 Oil Pressure SW

S 2 Starter
S 3 Starter

T 1 Throttle Position Sensor

V 1 Vacuum Sensor
V 3 Variable Resistor
V 6 VSV (A/C Idle–Up)

W 1 Washer Motor
W 2 Water Temp. Sender
W 3 Water Temp. Sensor
W 4 Wiper Motor