
Position of Parts in Engine Compartment

[RHD : 3L, 2L]

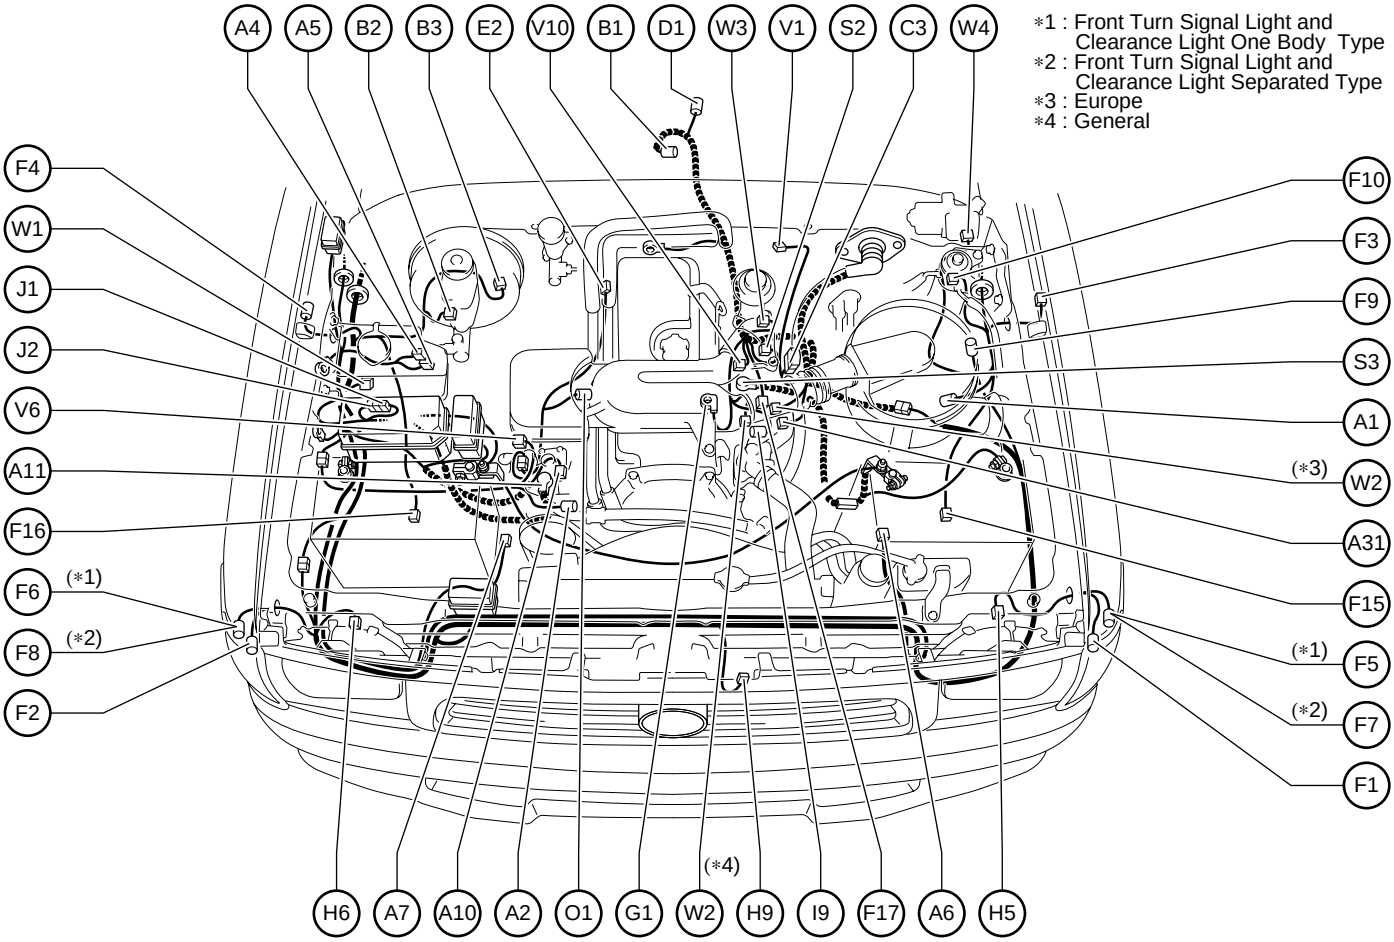

A 1 A/C Dual Pressure SW
A 2 A/C Magnetic Clutch
A 4 ABS Actuator
A 5 ABS Actuator
A 6 ABS Speed Sensor Front LH
A 7 ABS Speed Sensor Front RH
A10 Alternator
A11 Alternator
A31 Accelerator Pedal Position Sensor

B 1 Back–Up Light SW
B 2 Brake Fluid Level Warning SW
B 3 Brake Vacuum Warning SW

C 3 Check Connector

D 1 Detection SW (Transfer 4WD Position)

E 2 Engine Oil Level Warning SW

F 1 Front Clearance Light LH
F 2 Front Clearance Light RH
F 3 Front Side Turn Signal Light LH
F 4 Front Side Turn Signal Light RH
F 5 Front Turn Signal Light and Clearance Light LH
F 6 Front Turn Signal Light and Clearance Light RH
F 7 Front Turn Signal Light LH
F 8 Front Turn Signal Light RH
F 9 Fuel Heater
F10 Fuel Sedimentary SW
F15 Front Airbag Sensor LH
F16 Front Airbag Sensor RH
F17 Fuel Control Valve

G 1 Glow Plug

H 5 Headlight LH
H 6 Headlight RH
H 9 Horn

I 9 Injection Pump

J 1 Junction Connector
J 2 Junction Connector

O 1 Oil Pressure SW

S 2 Starter
S 3 Starter

V 1 Vacuum Sensor
V 6 VSV (A/C Idle–Up)
V10 VRV (EGR)

W 1 Washer Motor
W 2 Water Temp. Sender
W 3 Water Temp. Sensor
W 4 Wiper Motor