
Position of Parts in Engine Compartment

[RHD : 1KZ–TE]

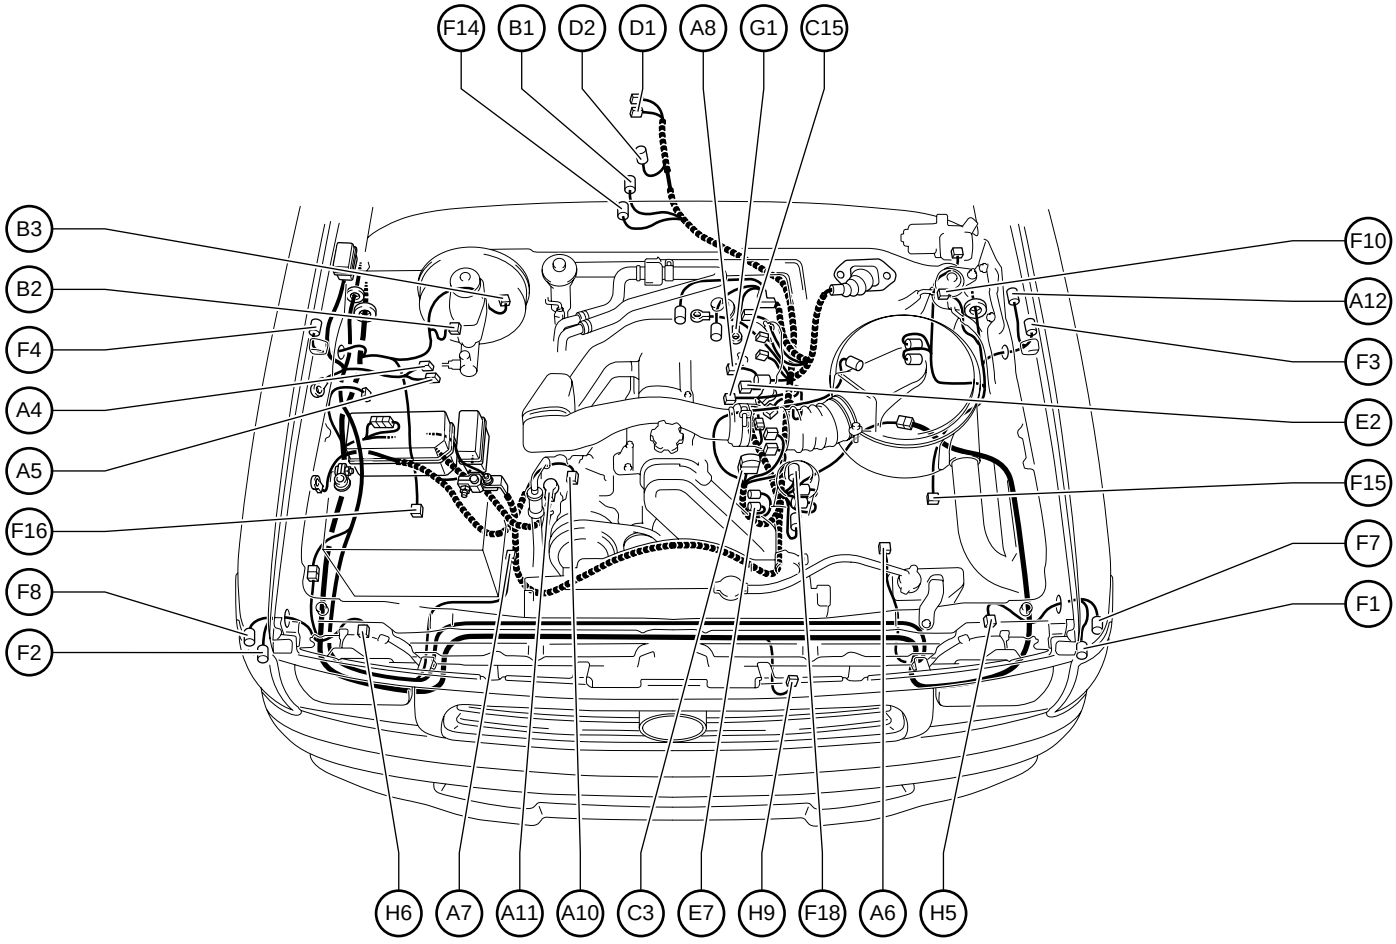

A 4 ABS Actuator
A 5 ABS Actuator
A 6 ABS Speed Sensor Front LH
A 7 ABS Speed Sensor Front RH
A 8 ADD Indicator SW
A 10 Alternator
A 11 Alternator
A 12 Auto Antenna Motor

B 1 Back–Up Light SW
B 2 Brake Fluid Level Warning SW
B 3 Brake Vacuum Warning SW

C 3 Check Connector
C 15 Crankshaft Position Sensor

D 1 Detection SW (Transfer 4WD Position)
D 2 Detection SW (Transfer L4 Position)

E 2 Engine Oil Level Warning SW
E 7 Engine Speed Sensor

F 1 Front Clearance Light LH
F 2 Front Clearance Light RH
F 3 Front Side Turn Signal Light LH
F 4 Front Side Turn Signal Light RH
F 7 Front Turn Signal Light LH
F 8 Front Turn Signal Light RH
F 10 Fuel Sedimentary SW
F 14 First Gear Position SW
F 15 Front Airbag Sensor LH
F 16 Front Airbag Sensor RH
F 18 Fuel Temp. Sensor

G 1 Glow Plug

H 5 Headlight LH
H 6 Headlight RH
H 9 Horn