
Position of Parts in Engine Compartment

[RHD : 1KZ–TE]

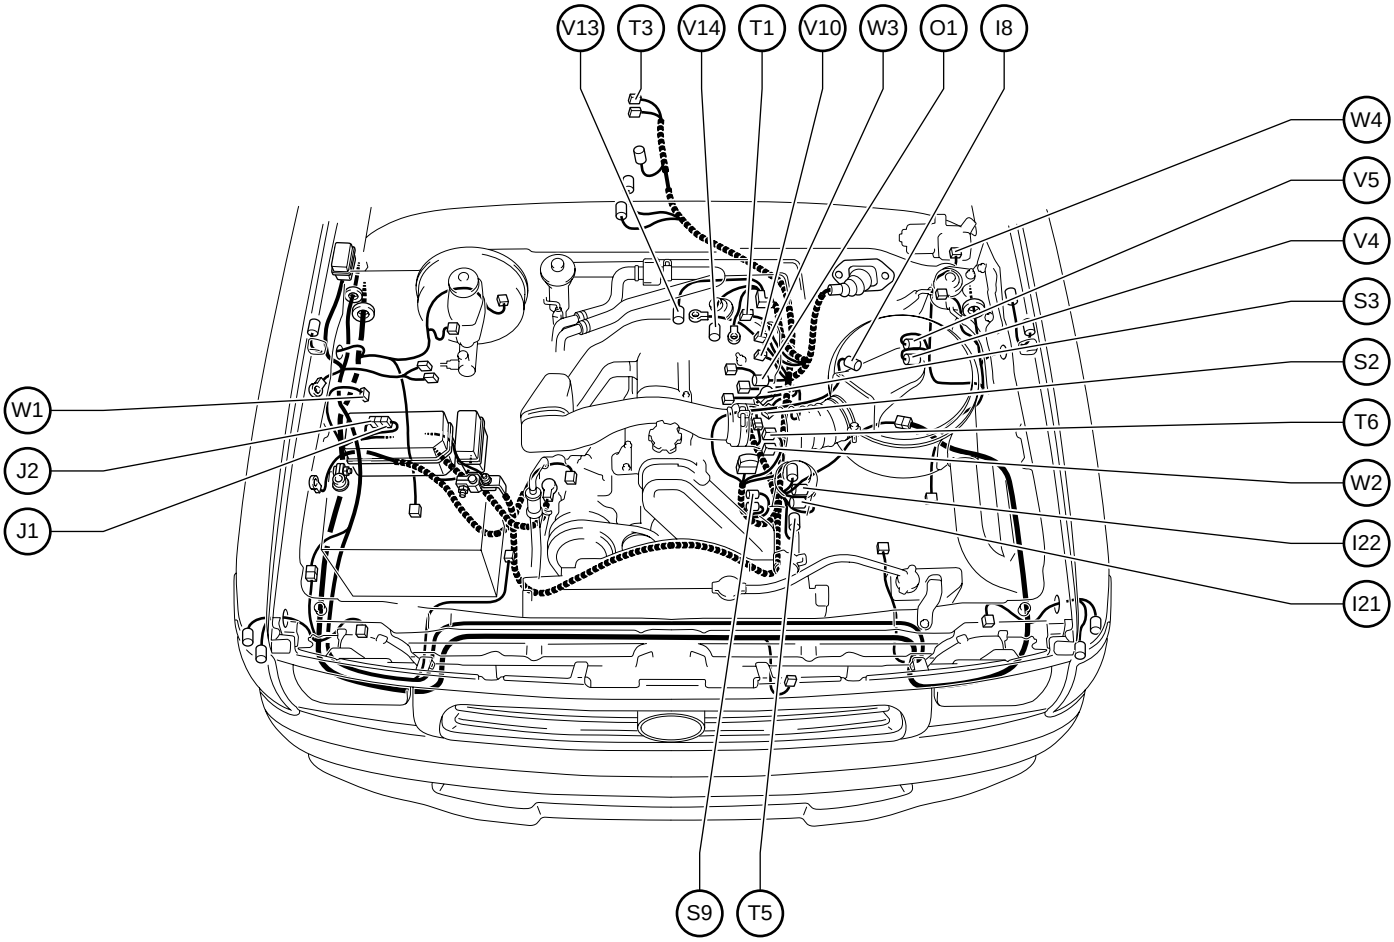

I 8 Intake Air Temp. Sensor
I 21 Injection Pump Correction Resistor No.1
I 22 Injection Pump Correction Resistor No.2

J 1 Junction Connector
J 2 Junction Connector

O 1 Oil Pressure SW

S 2 Starter
S 3 Starter
S 9 Spill Control Valve

T 1 Throttle Position Sensor
T 3 2–4 Select Motor
T 5 Timing Control Valve
T 6 Turbo Pressure Sensor

V 4 VSV (2WD, ADD)
V 5 VSV (4WD, ADD)
V10 VRV (EGR)
V13 VSV (Intake Constrictor Control No.1
V14 VSV (Intake Constrictor Control No.2

W 1 Washer Motor
W 2 Water Temp. Sender
W 3 Water Temp. Sensor
W 4 Wiper Motor