
Position of Parts in Instrument Panel

[RHD]

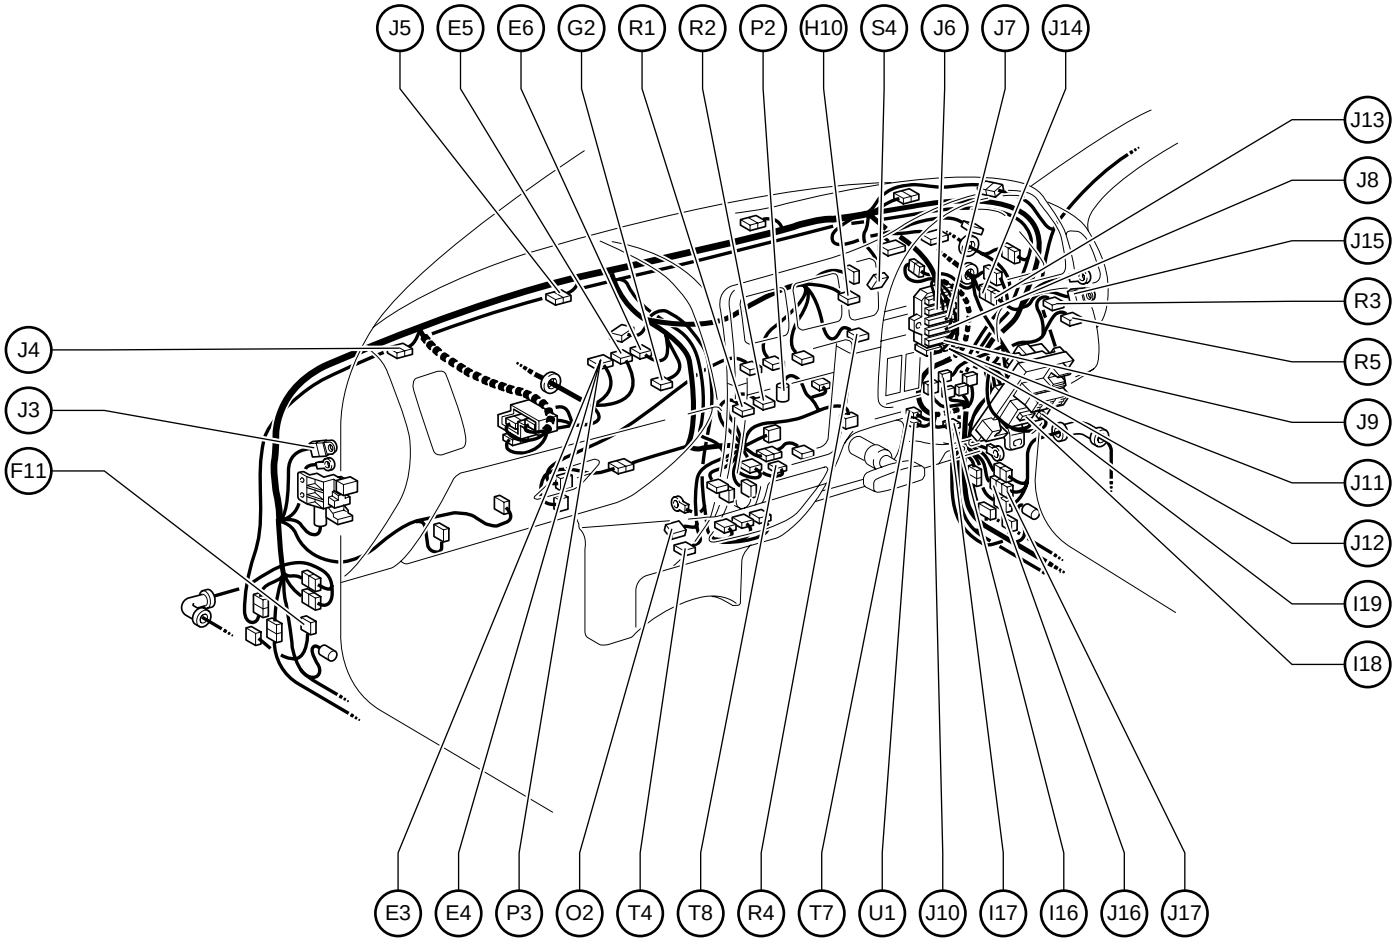

E 3 Emission Control ECU
E 4 Engine ECU (M/T) or Engine and ECT ECU (A/T)
E 5 Engine ECU (M/T) or Engine and ECT ECU (A/T)
E 6 Engine ECU (M/T) or Engine and ECT ECU (A/T)

F 11 4WD Control ECU

G 2 Glove Box Light

H10 Hazard SW

I 16 Ignition Key Cylinder Light
I 17 Ignition SW
I 18 Integration Relay
I 19 Integration Relay

J 3 Junction Connector
J 4 Junction Connector
J 5 Junction Connector
J 6 Junction Connector
J 7 Junction Connector
J 8 Junction Connector
J 9 Junction Connector
J 10 Junction Connector
J 11 Junction Connector
J 12 Junction Connector
J 13 Junction Connector
J 14 Junction Connector
J 15 Junction Connector
J 16 Junction Connector
J 17 Junction Connector

O 2 O/D Main SW

P 2 Parking Brake SW
P 2 Pre–Heating Timer

R 1 Radio and Player
R 2 Radio and Player
R 3 Rear Fog Light SW
R 4 Rear Window Defogger SW
R 5 Rheostat
S 4 Stop Light SW

T 4 2–4 Select SW
T 7 Transponder Key Amplifier
T 8 Transponder Key Computer

U 1 Unlock Warning SW