
Connector Joining Wire Harness and Wire Harness

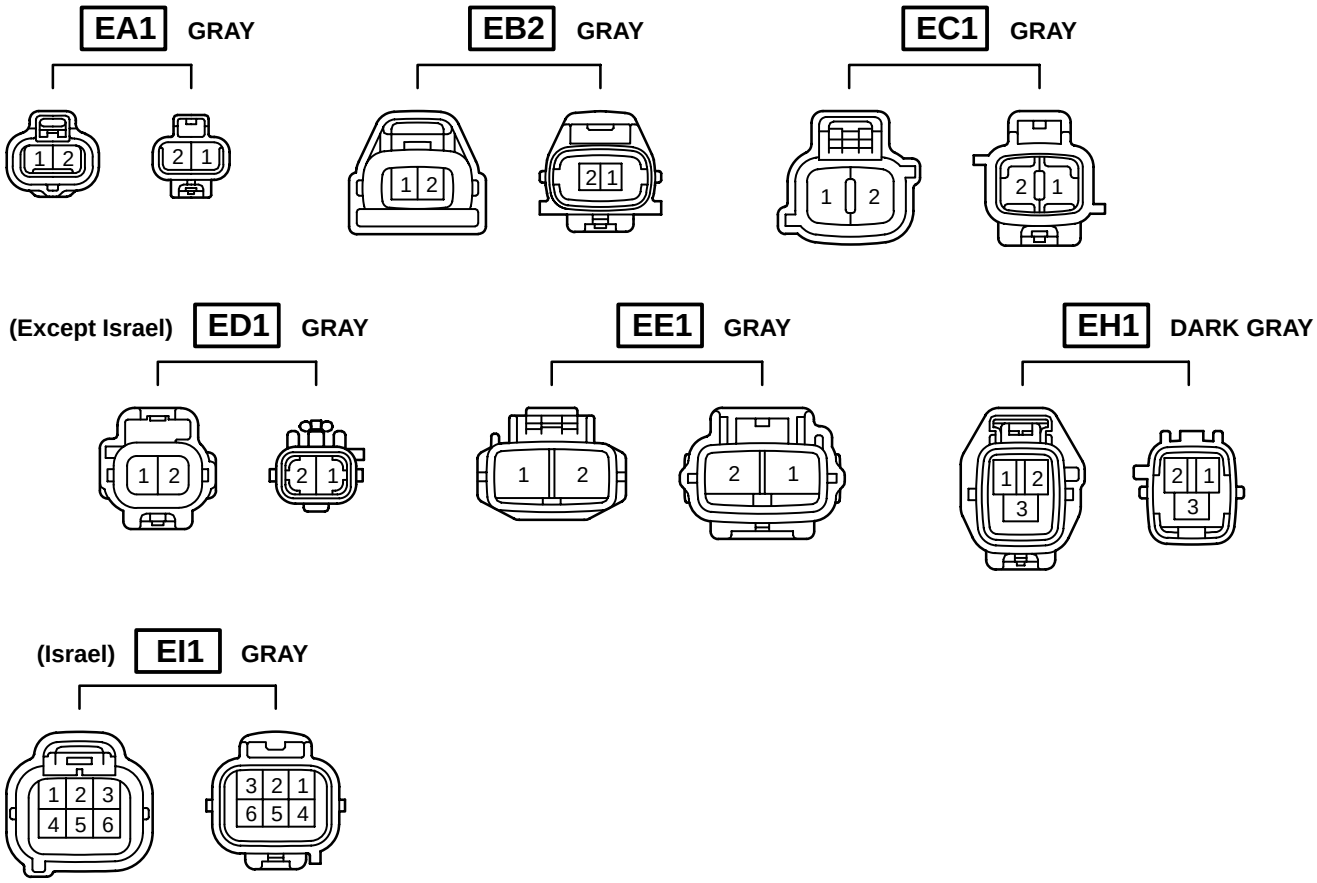

Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Room No.2 Wire and Engine Room Main Wire (Front Right Fender Apron)
EB2	Engine No.2 Wire and Engine Room Main Wire (Near the Engine Room R/B)
EC1	Engine No.2 Wire and Differential Wire (Near the Starter)
ED1	Cowl Wire and A/C Sub Wire (Front Right Fender Apron)
EE1	Engine Room Main Wire and Engine Wire (Near the Engine Room R/B)
EH1	Engine Room Main Wire and Engine No.4 Wire (Near the Alternator)
EI1	A/C Sub Wire and Cowl Wire (Front Right Fender Apron)