
Connector Joining Wire Harness and Wire Harness

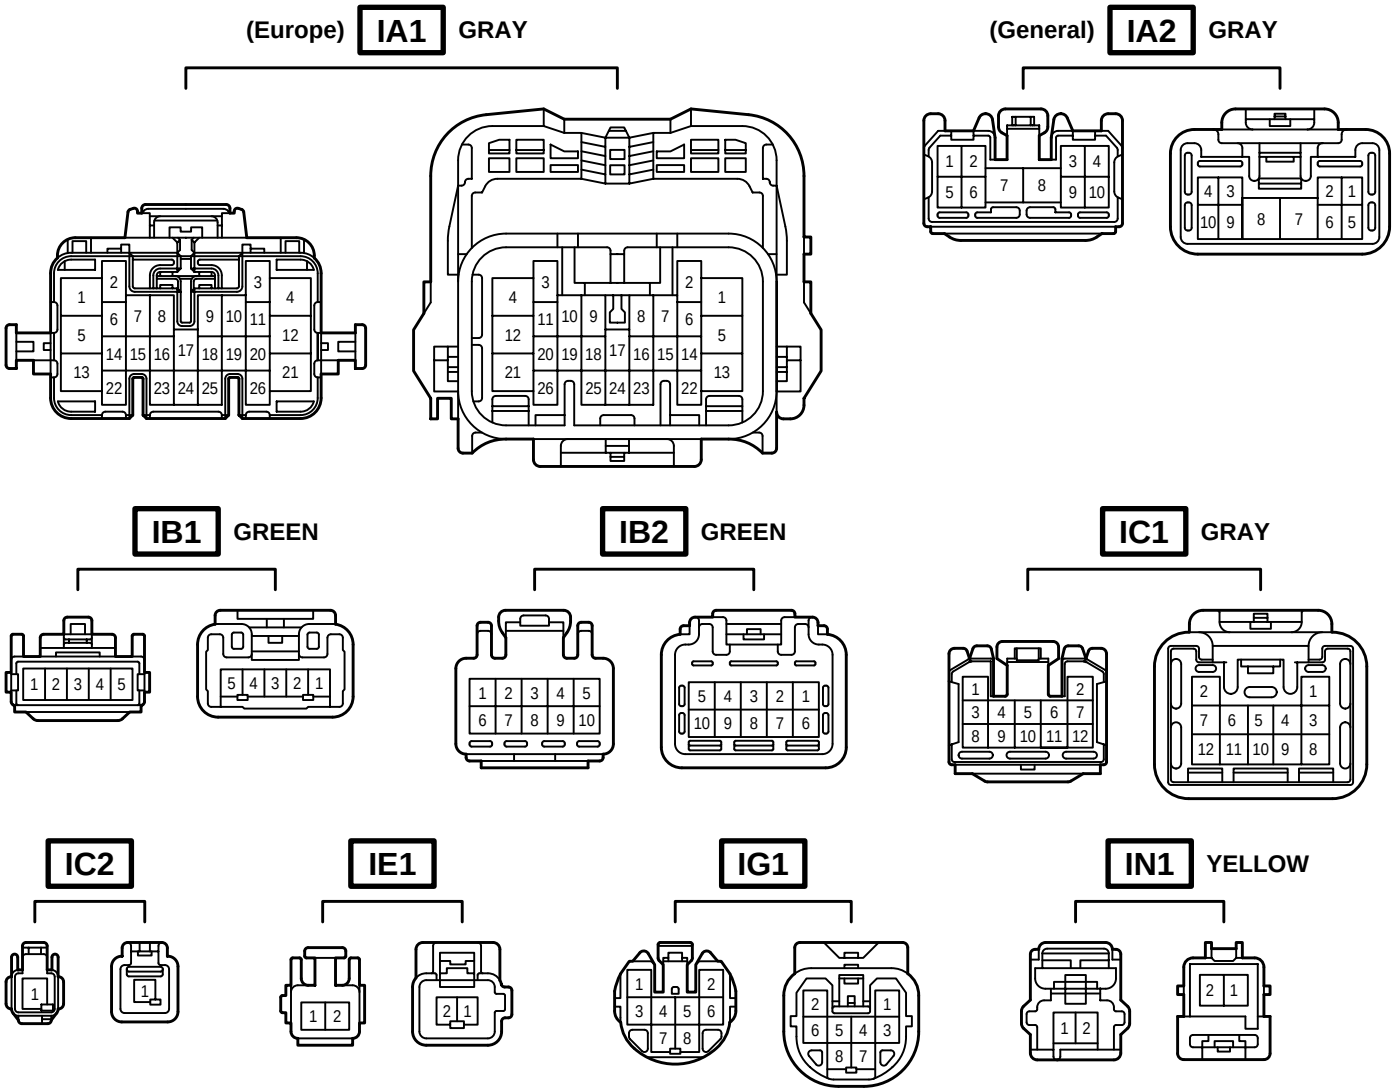

Code	Joining Wire Harness and Wire Harness (Connector Location)
IA1	Engine Room Main Wire and Cowl Wire (Cowl Side Panel LH)
IA2	
IB1	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IB2	
IC1	Cowl Wire and Cowl No.3 Wire (Left Kick Panel)
IC2	
IE1	Cowl Wire and Roof Wire (Instrument Panel Reinforcement Left)
IG1	Cowl Wire and A/C Sub Wire (Near the A/C Unit)
IN1	Engine Room Main Wire and Cowl Wire (Under the Combination Meter)