
Connector Joining Wire Harness and Wire Harness

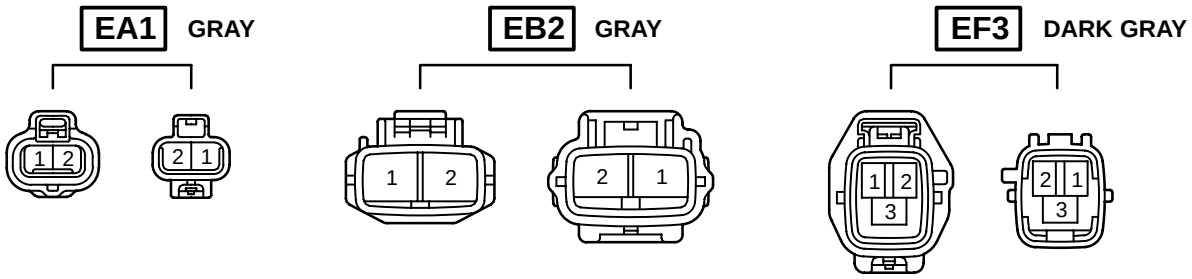

Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Room No.2 Wire and Engine Room Main Wire (Front Right Fender Apron)
EB2	Engine Room Main Wire and Engine Wire (Near the Engine Room R/B)
EF3	Engine Room Main Wire and Engine No.4 Wire (Near the Alternator)