
Connector Joining Wire Harness and Wire Harness

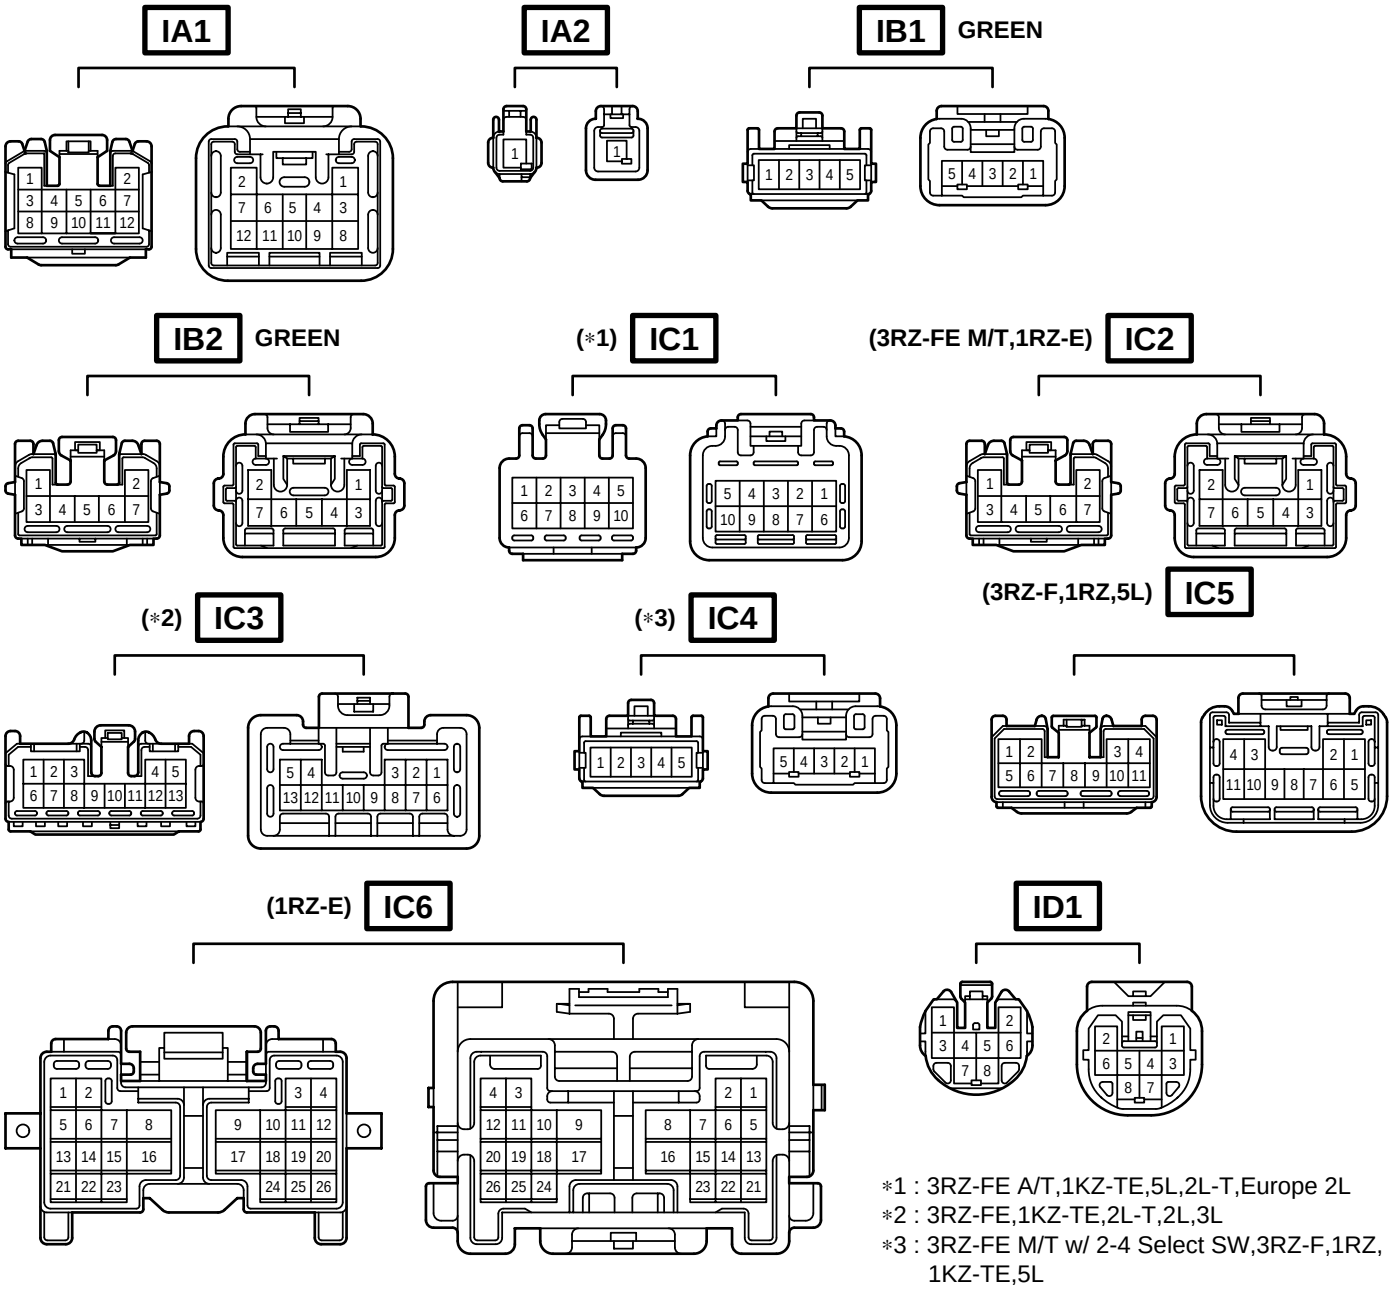

∗1 : 3RZ-FE A/T,1KZ-TE,5L,2L-T,Europe 2L
∗2 : 3RZ-FE,1KZ-TE,2L-T,2L,3L
∗3 : 3RZ-FE M/T w/ 2-4 Select SW,3RZ-F,1RZ, 1KZ-TE,5L

Code	Joining Wire Harness and Wire Harness (Connector Location)
IA1	Cowl Wire and Cowl No.3 Wire (Left Kick Panel)
IA2	
IB1	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IB2	
IC1	Engine Wire and Cowl Wire (Behind the Glove Box)
IC2	
IC3	
IC4	
IC5	
IC6	
ID1	Cowl Wire and A/C Sub Wire (Near the A/C Unit)