
Connector Joining Wire Harness and Wire Harness

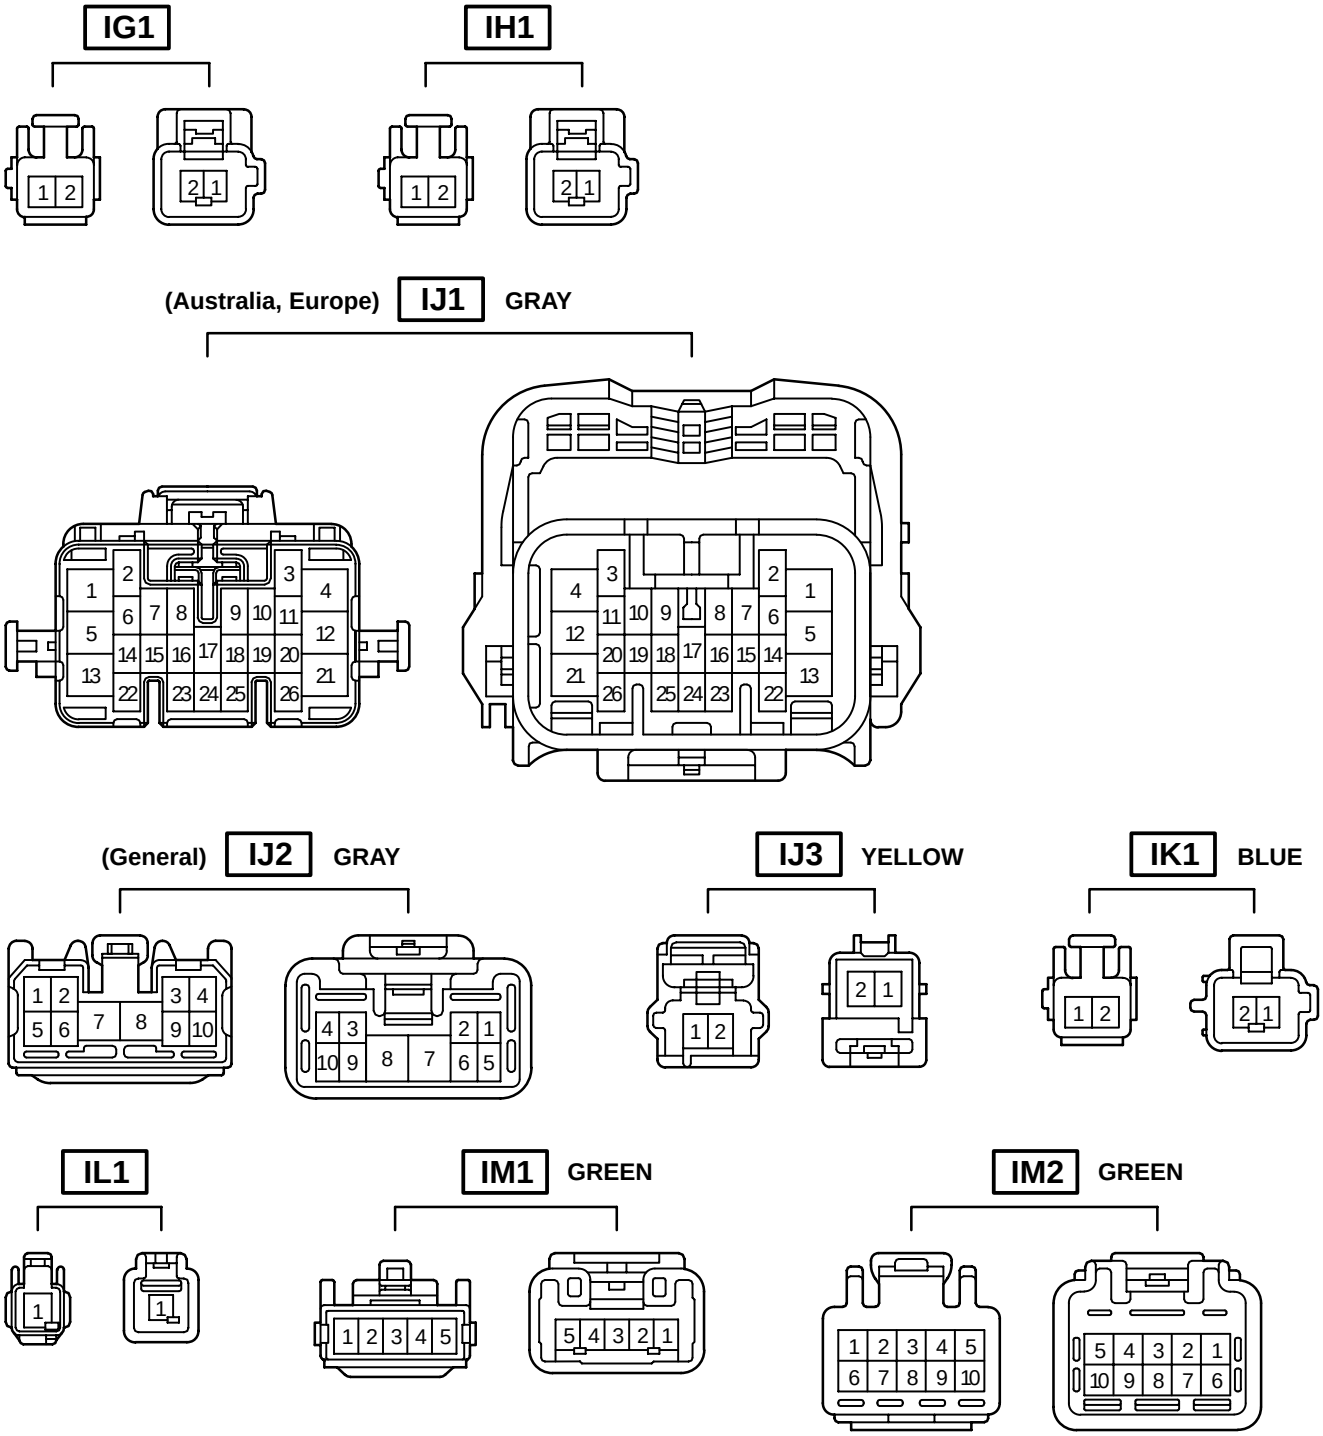

Code	Joining Wire Harness and Wire Harness (Connector Location)
IG1	Cowl Wire and Cowl No.3 Wire (Behind the Ashtray)
IH1	Cowl Wire and Roof Wire (Instrument Panel Reinforcement Right)
IJ1	Engine Room Main Wire and Cowl Wire (Cowl Side Panel RH)
IJ2	
IJ3	Engine Room No.2 Wire and Cowl Wire (Cowl Side Panel RH)
IK1	Engine Room No.2 Wire and Cowl No.3 Wire (Cowl Side Panel RH)
IL1	Cowl Wire and Cowl No.3 Wire (Right Kick Panel)
IM1	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IM2	