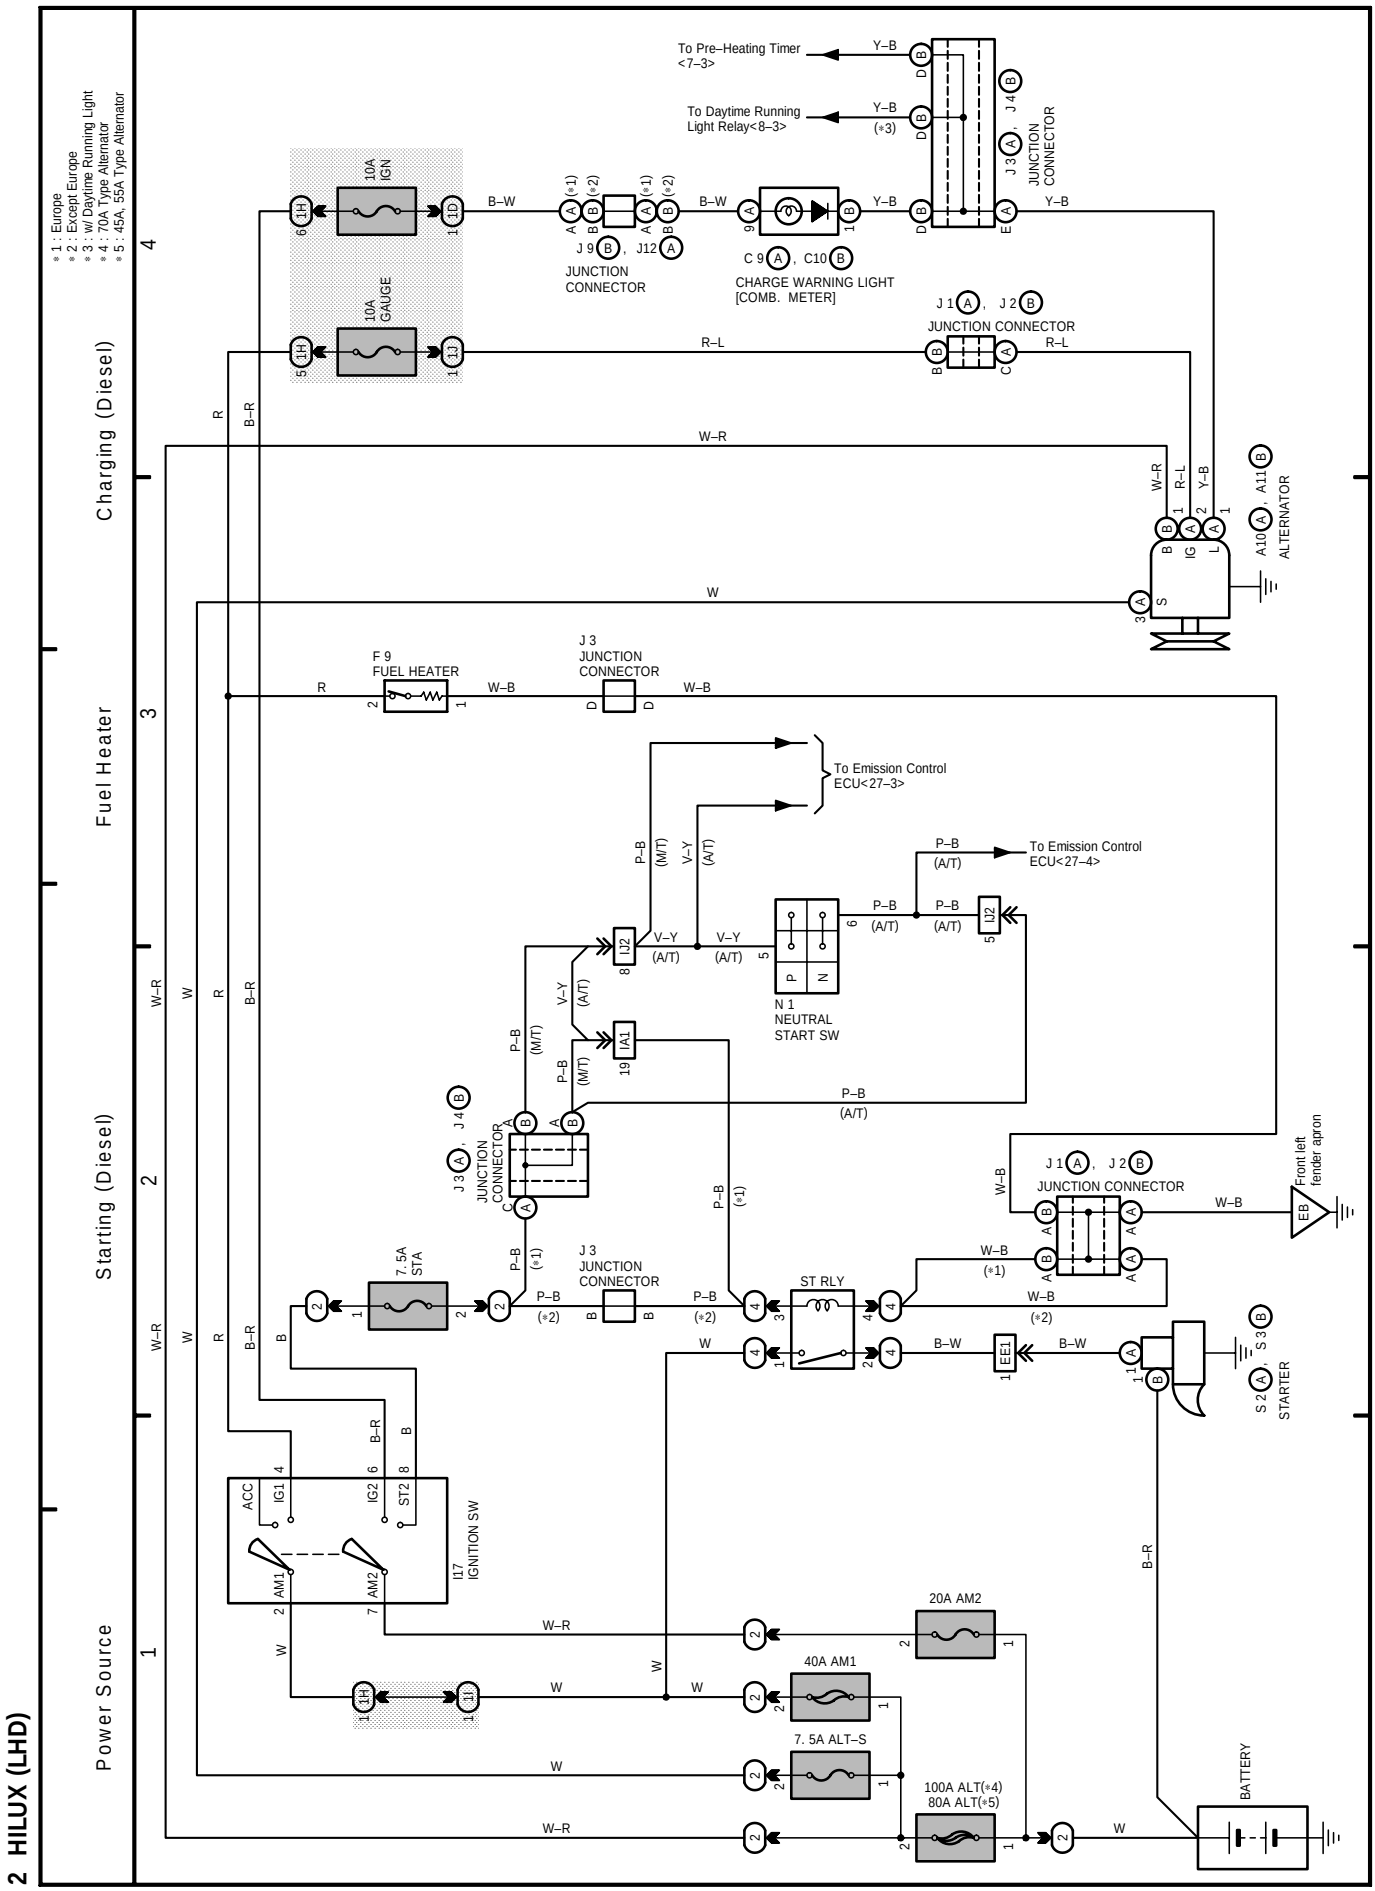

2 HILUX (LHD)
Power Source
Starting (Diesel)
Fuel Heater
Charging (Diesel)
* 1 : Europe
* 2 : Except Europe
* 3 : w/ Daytime Running Light
* 4 : 70A Type Alternator
* 5 : 45A, 55A Type Alternator
To Pre–Heating Timer <7–3>
To Daytime Running Light Relay<8–3>
10A IGN
10A GAUGE
JUNCTION CONNECTOR
CHARGE WARNING LIGHT [COMB. METER]
ALTERNATOR
F 9 FUEL HEATER
To Emission Control ECU<27–3>
To Emission Control ECU<27–4>
N 1 NEUTRAL START SW
7. 5A STA
ST RLY
STARTER
Front left fender apron
I17 IGNITION SW
ACC
IG1
IG2
ST2
AM1
AM2
20A AM2
40A AM1
7. 5A ALT–S
100A ALT(*4)
80A ALT(*5)
BATTERY