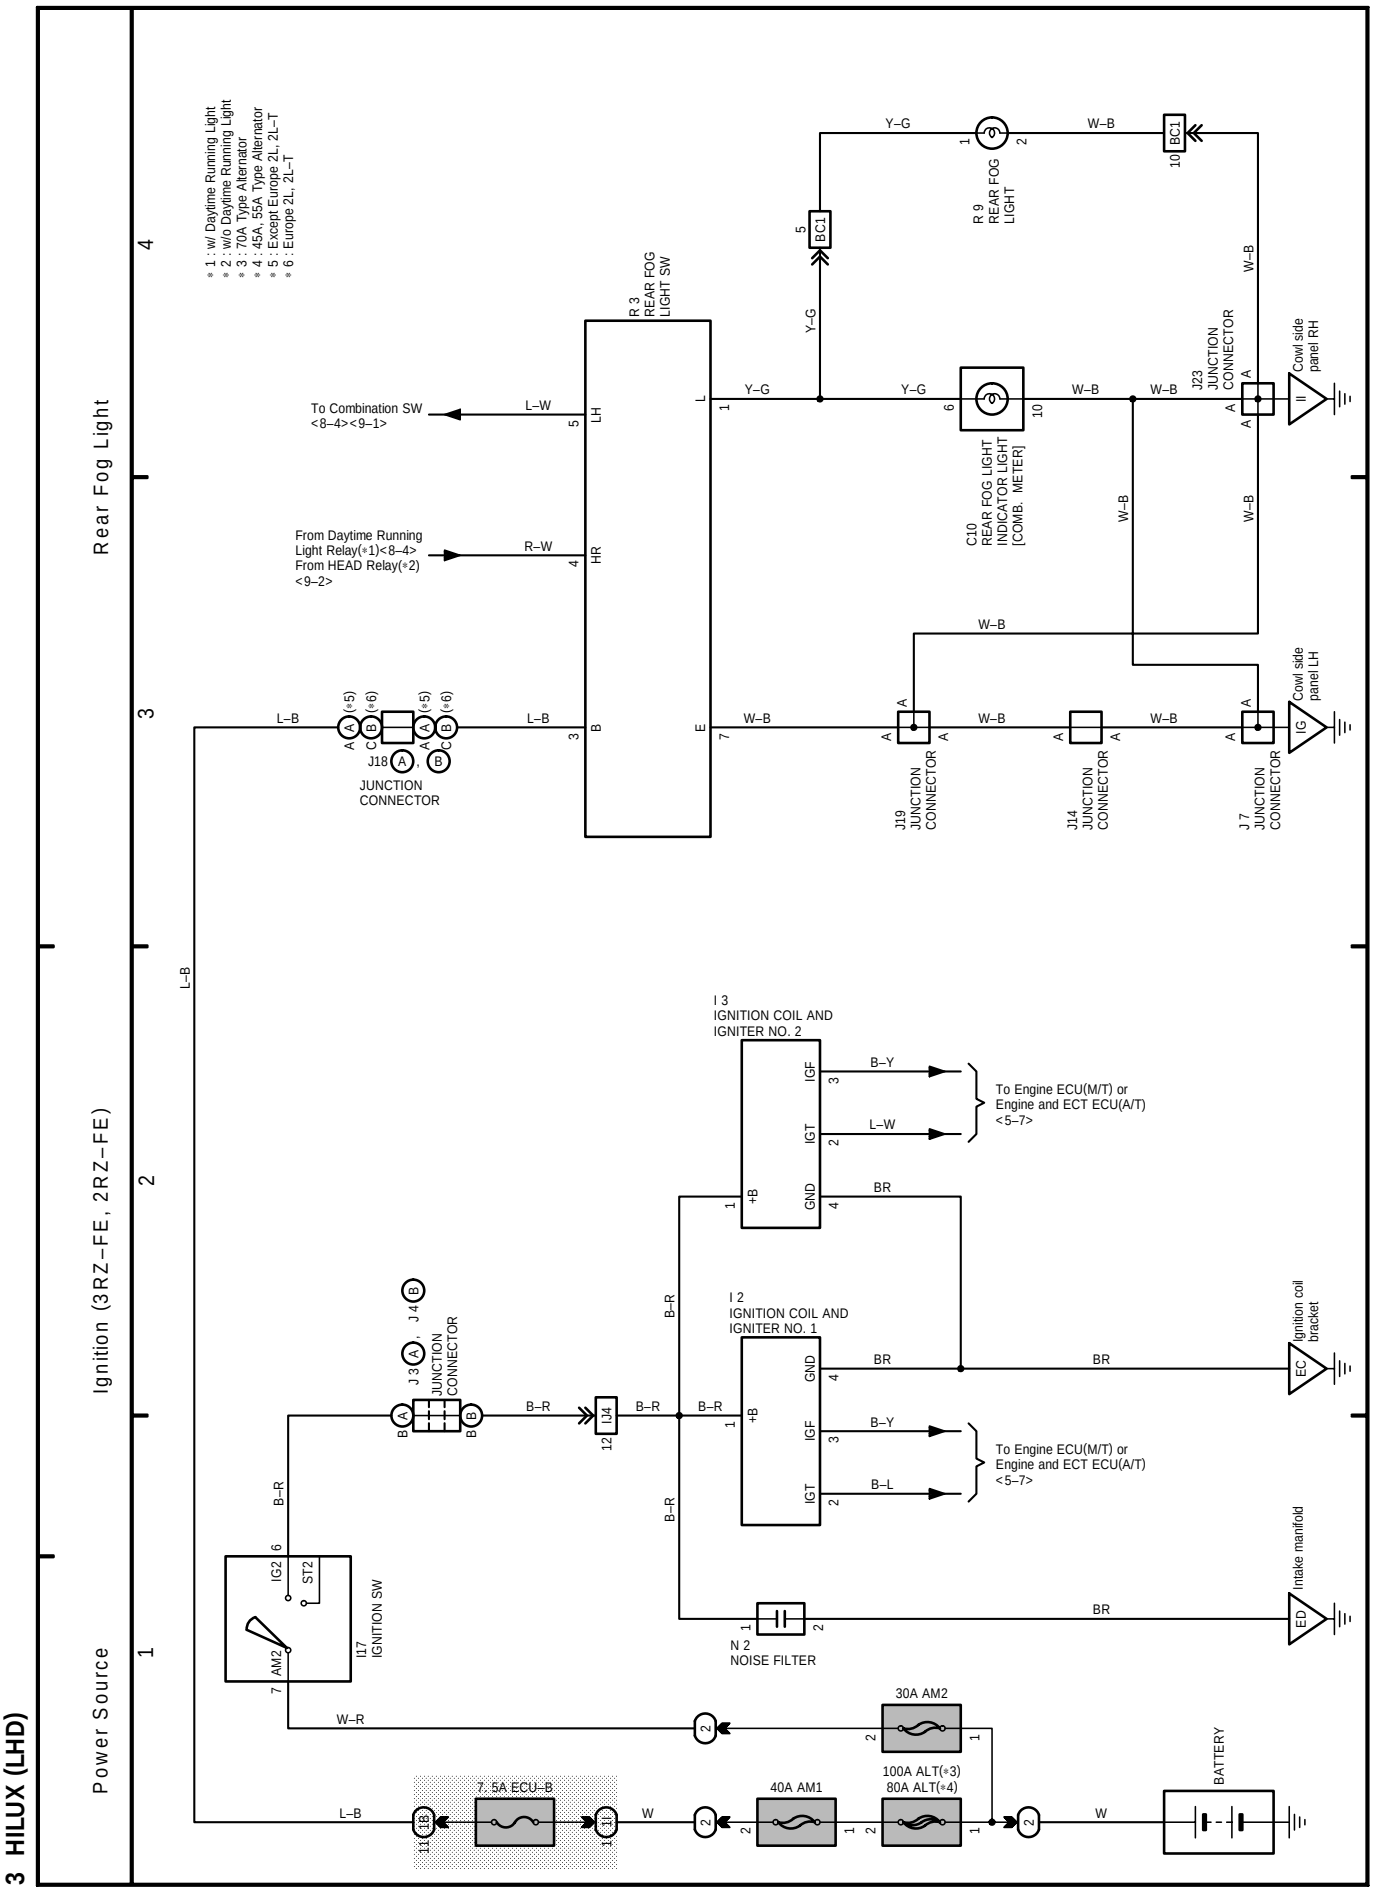

3 HILUX (LHD)
Power Source
Ignition (3RZ–FE, 2RZ–FE)
Rear Fog Light
1
2
3
4
* 1 : w/ Daytime Running Light
* 2 : w/o Daytime Running Light
* 3 : 70A Type Alternator
* 4 : 45A, 55A Type Alternator
* 5 : Except Europe 2L, 2L–T
* 6 : Europe 2L, 2L–T
R 3
REAR FOG
LIGHT SW
To Combination SW
<8–4><9–1>
From Daytime Running
Light Relay(*1)<8–4>
From HEAD Relay(*2)
<9–2>
L–W
R–W
Y–G
W–B
L–B
B–R
B–Y
B–L
BR
W–R
W
R 9
REAR FOG
LIGHT
C10
REAR FOG LIGHT
INDICATOR LIGHT
[COMB. METER]
J23
JUNCTION
CONNECTOR
Cowl side
panel RH
Cowl side
panel LH
J18
JUNCTION
CONNECTOR
J19
JUNCTION
CONNECTOR
J14
JUNCTION
CONNECTOR
J7
JUNCTION
CONNECTOR
J3
J4
JUNCTION
CONNECTOR
I 3
IGNITION COIL AND
IGNITER NO. 2
I 2
IGNITION COIL AND
IGNITER NO. 1
IGF
IGT
+B
GND
To Engine ECU(M/T) or
Engine and ECT ECU(A/T)
<5–7>
Ignition coil
bracket
Intake manifold
I17
IGNITION SW
IG2
ST2
AM2
N 2
NOISE FILTER
30A AM2
40A AM1
100A ALT(*3)
80A ALT(*4)
7. 5A ECU–B
BATTERY