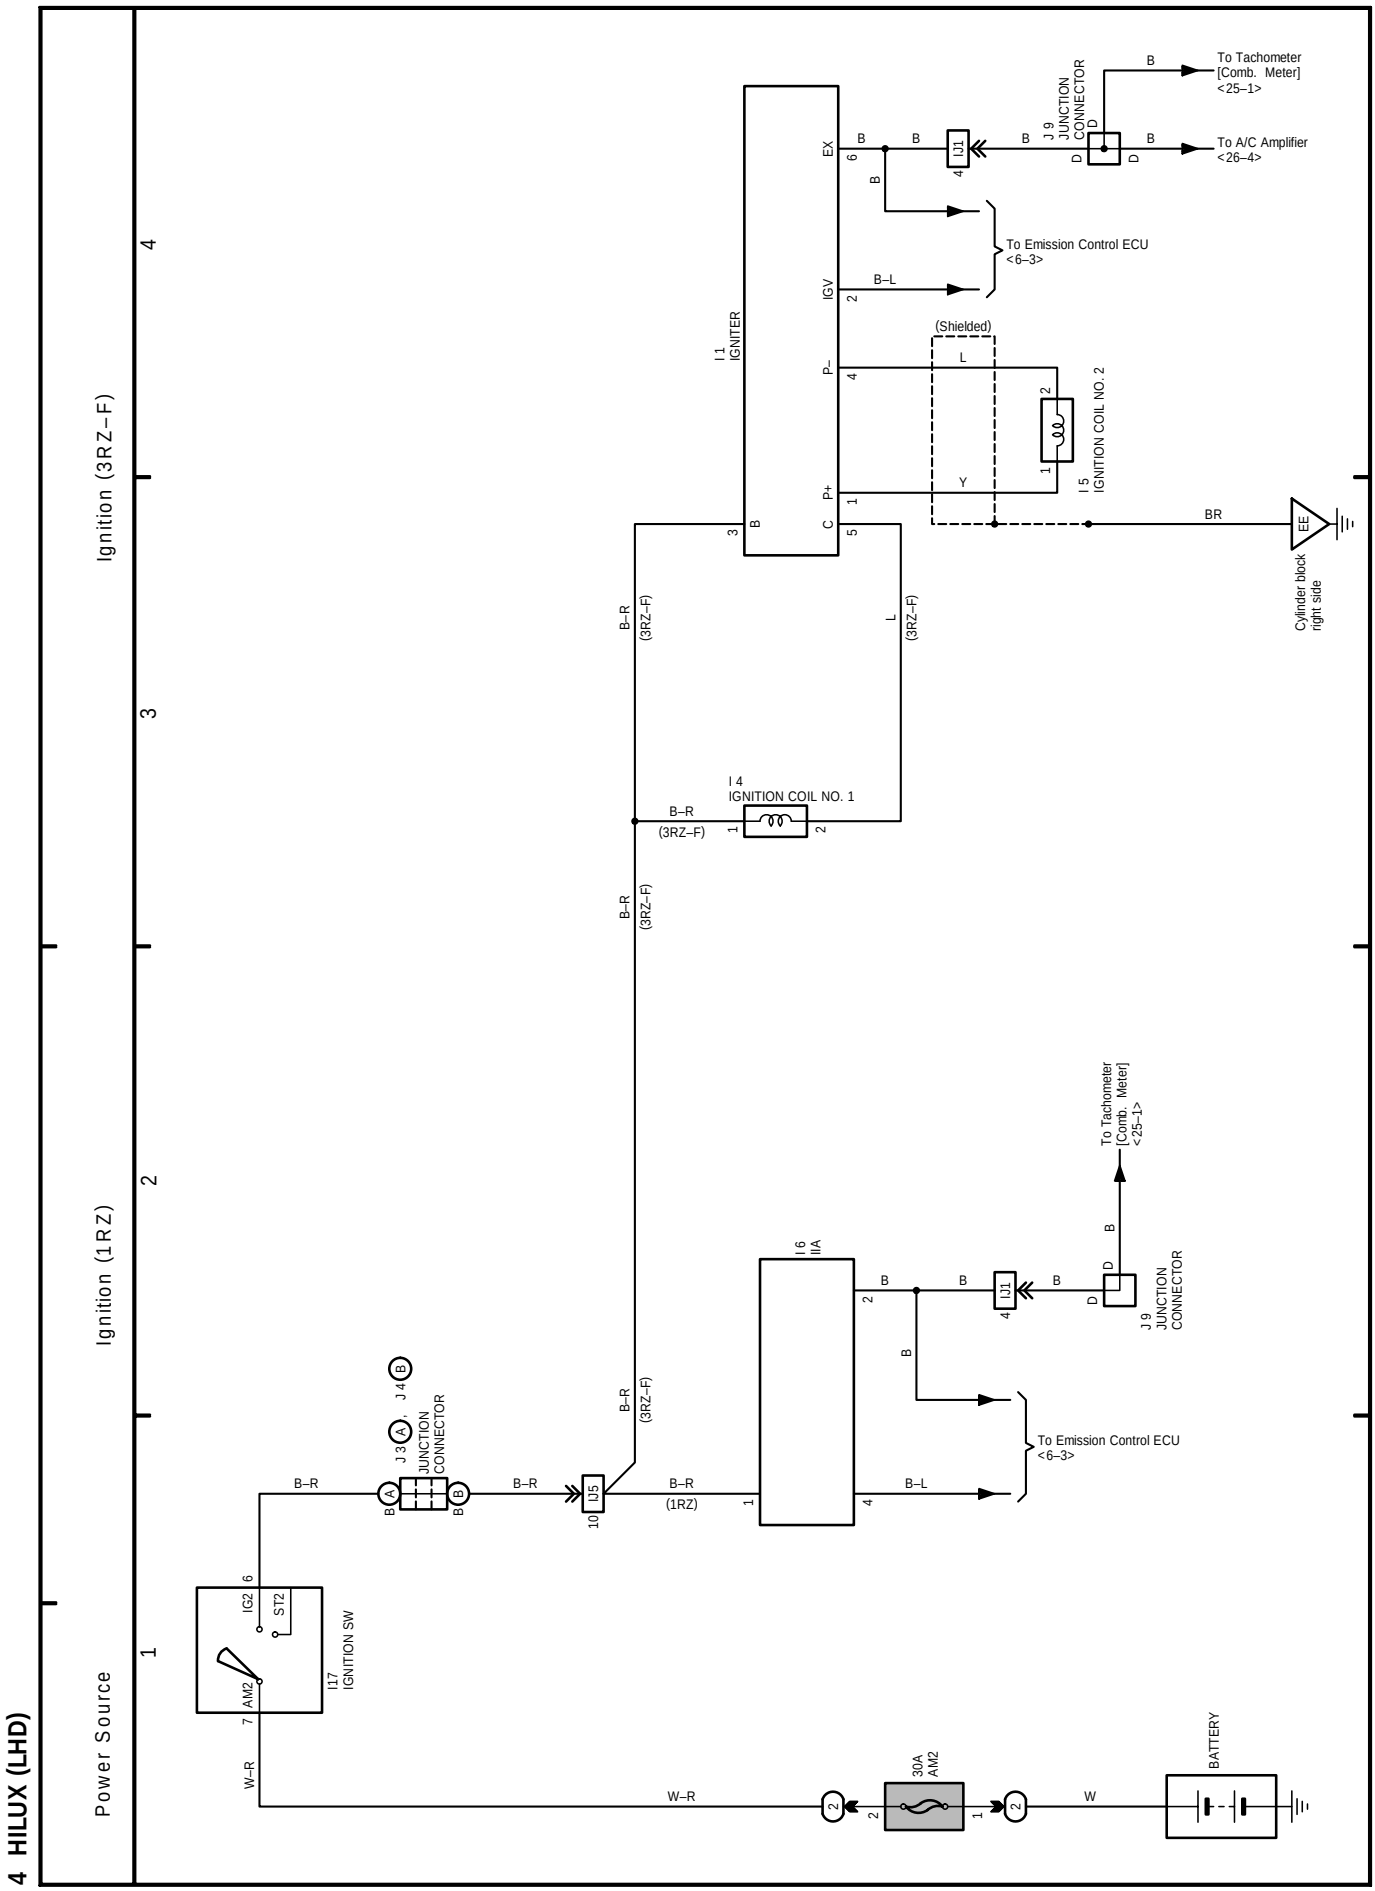

4 HILUX (LHD)
Power Source
Ignition (1RZ)
Ignition (3RZ–F)
1
2
3
4
I17 IGNITION SW
IG2
ST2
AM2
W–R
30A AM2
BATTERY
W
J3 JUNCTION CONNECTOR
J4
I5 IGNITION COIL NO. 2
I4 IGNITION COIL NO. 1
I1 IGNITER
I6 IIA
IJ5
IJ1
J9 JUNCTION CONNECTOR
To Tachometer [Comb. Meter] <25–1>
To A/C Amplifier <26–4>
To Emission Control ECU <6–3>
(Shielded)
Cylinder block right side
EE
B–R
B–L
BR
L
Y
B
(3RZ–F)
(1RZ)