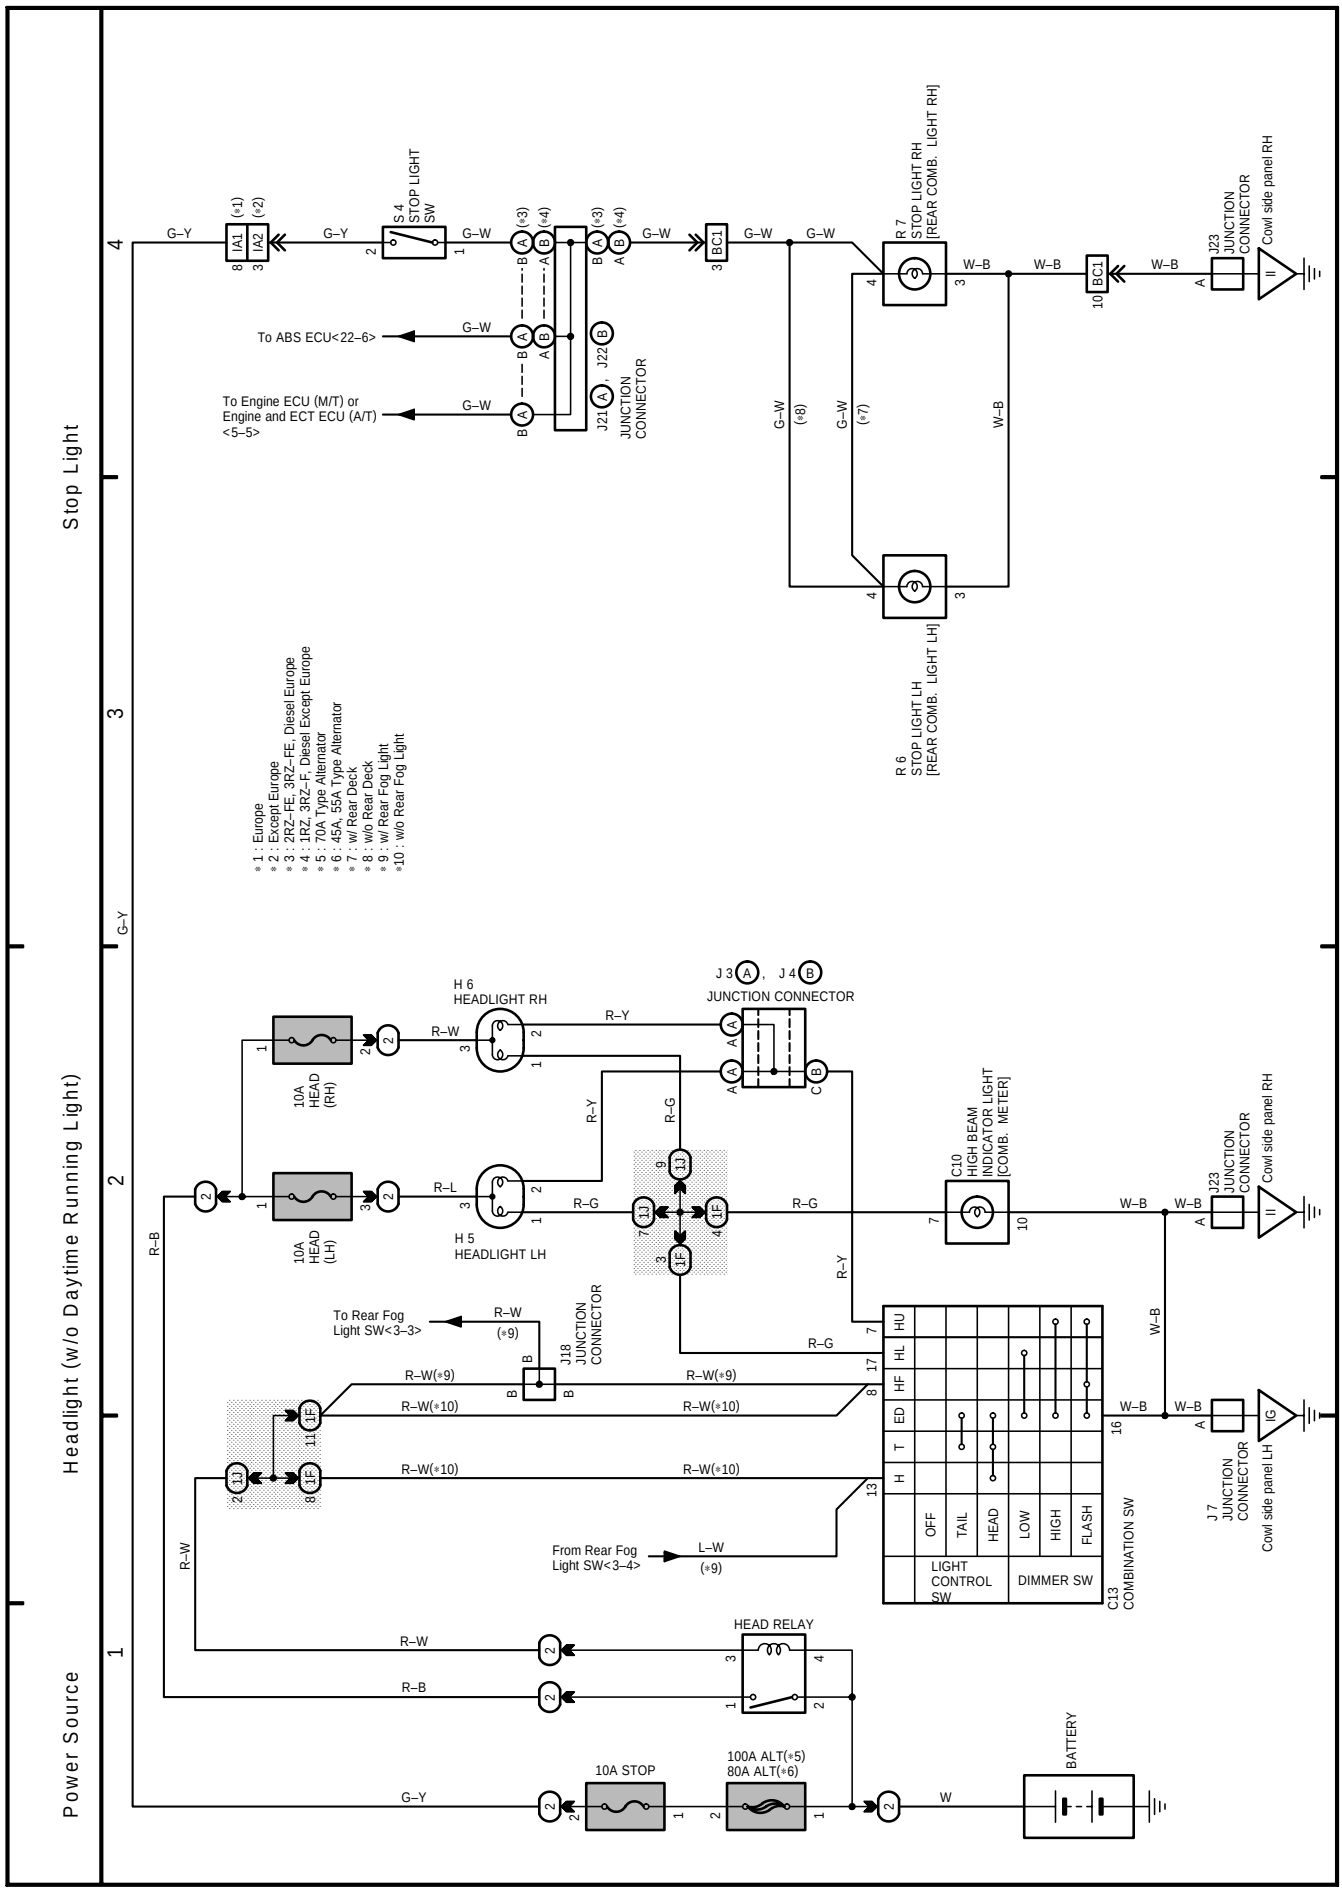

Power Source
Headlight (w/o Daytime Running Light)
Stop Light
1
2
3
4
G–Y
R–B
R–W
R–L
R–Y
R–G
G–W
W–B
L–W
W
S 4
STOP LIGHT SW
R 7
STOP LIGHT RH
[REAR COMB. LIGHT RH]
R 6
STOP LIGHT LH
[REAR COMB. LIGHT LH]
J23
JUNCTION CONNECTOR
Cowl side panel RH
J 7
JUNCTION CONNECTOR
Cowl side panel LH
To ABS ECU<22–6>
To Engine ECU (M/T) or
Engine and ECT ECU (A/T)
<5–5>
J21, J22
JUNCTION CONNECTOR
H 6
HEADLIGHT RH
H 5
HEADLIGHT LH
J 3, J 4
JUNCTION CONNECTOR
10A
HEAD
(RH)
10A
HEAD
(LH)
C10
HIGH BEAM
INDICATOR LIGHT
[COMB. METER]
To Rear Fog
Light SW<3–3>
J18
JUNCTION CONNECTOR
From Rear Fog
Light SW<3–4>
C13
COMBINATION SW
LIGHT CONTROL SW
DIMMER SW
OFF
TAIL
HEAD
LOW
HIGH
FLASH
HU
HL
HF
ED
T
H
HEAD RELAY
10A STOP
100A ALT(*5)
80A ALT(*6)
BATTERY
* 1 : Europe
* 2 : Except Europe
* 3 : 2RZ–FE, 3RZ–FE, Diesel Europe
* 4 : 1RZ, 3RZ–F, Diesel Except Europe
* 5 : 70A Type Alternator
* 6 : 45A, 55A Type Alternator
* 7 : w/ Rear Deck
* 8 : w/o Rear Deck
* 9 : w/ Rear Fog Light
*10 : w/o Rear Fog Light