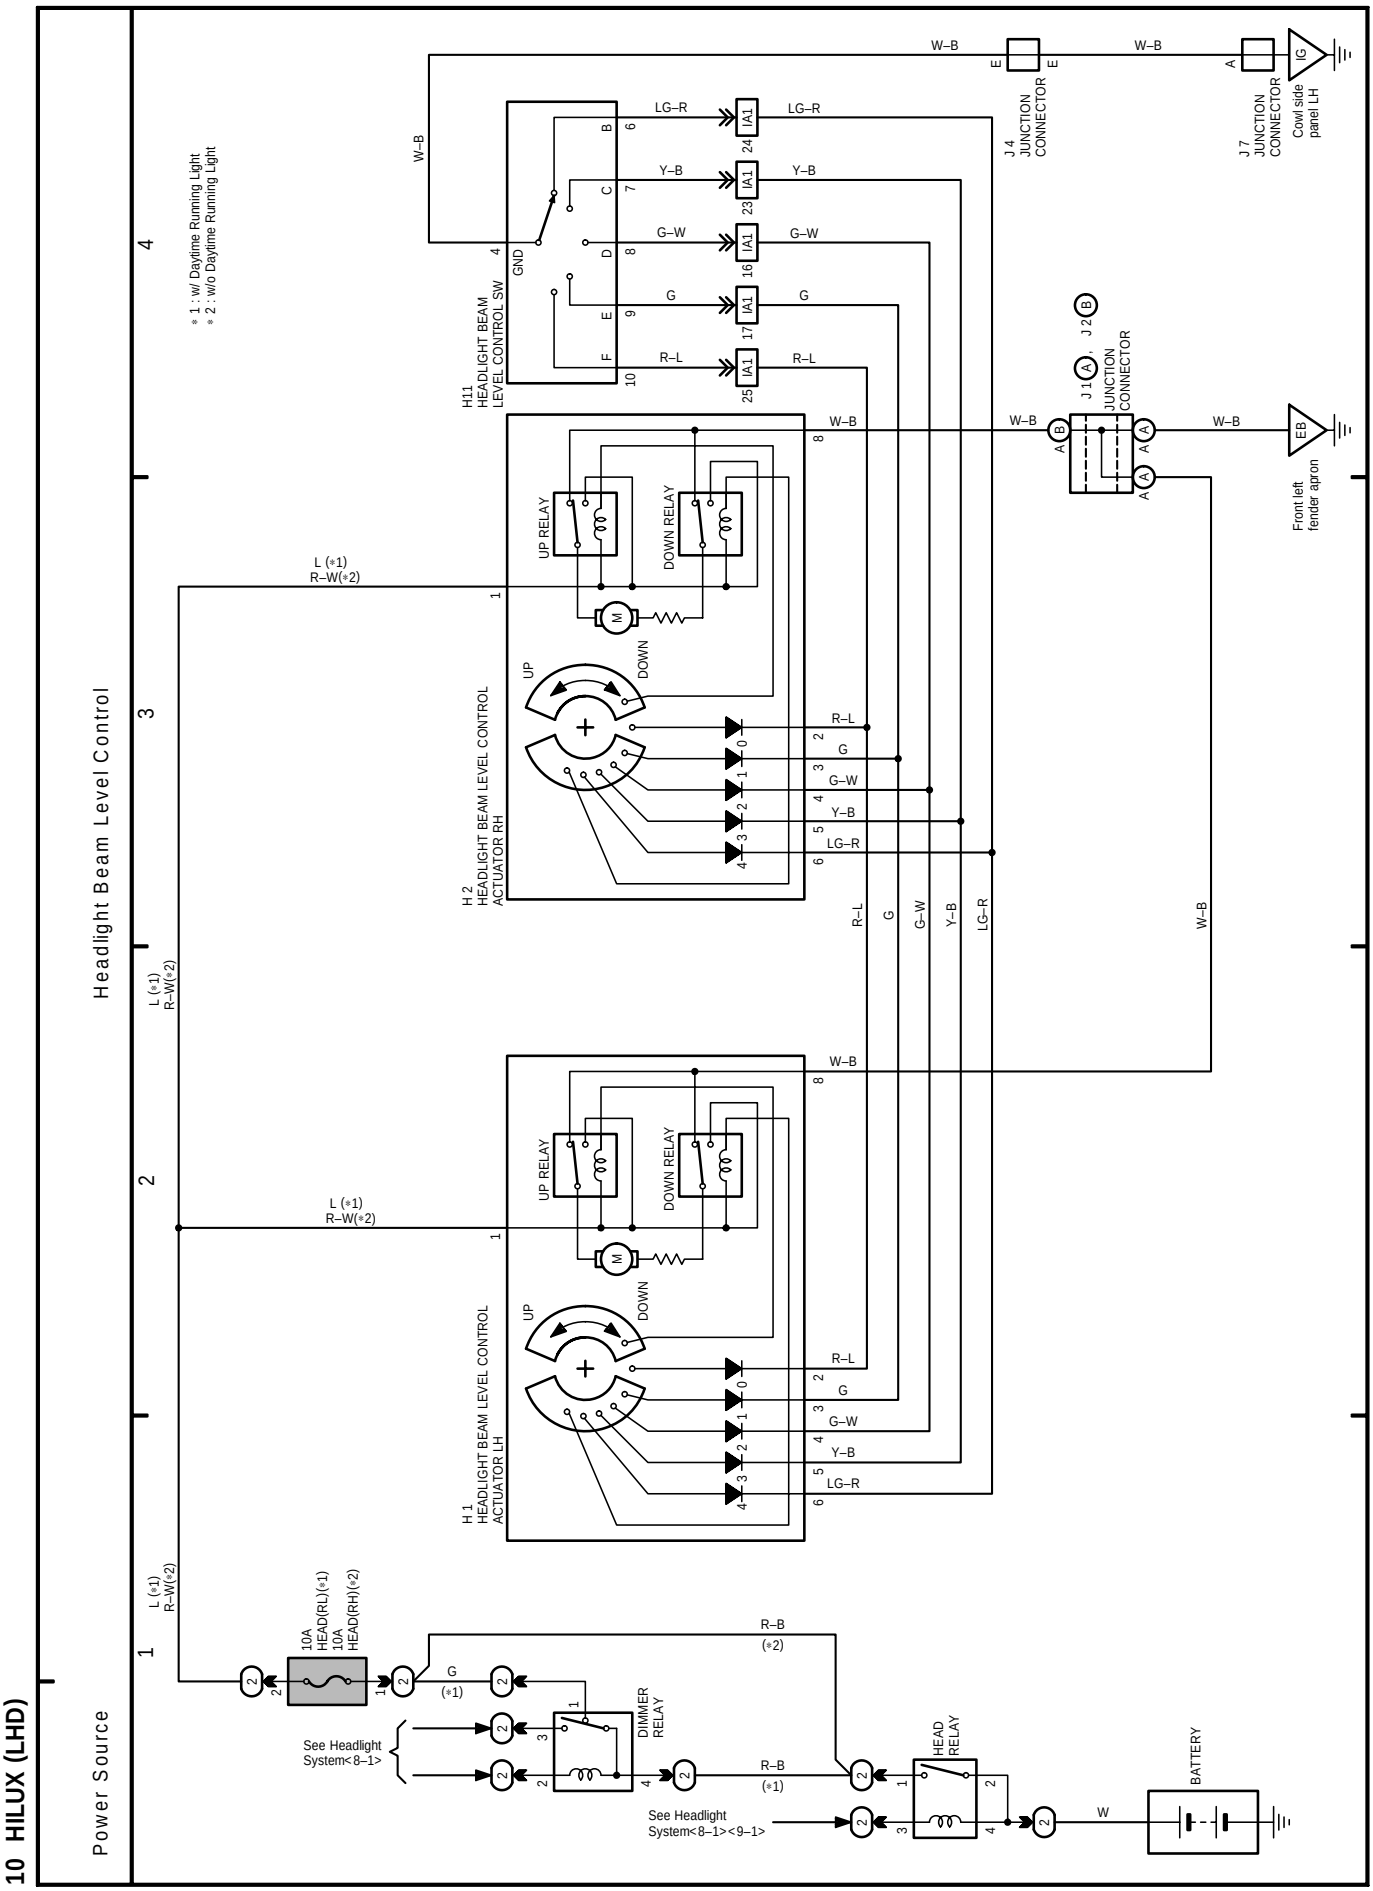

10 HILUX (LHD)
Power Source
Headlight Beam Level Control
1
2
3
4
*1 : w/ Daytime Running Light
*2 : w/o Daytime Running Light
W–B
J4 JUNCTION CONNECTOR
J7 JUNCTION CONNECTOR
Cowl side panel LH
IG
H11 HEADLIGHT BEAM LEVEL CONTROL SW
GND
LG–R
Y–B
G–W
G
R–L
IA1
J1, J2 JUNCTION CONNECTOR
EB
Front left fender apron
UP RELAY
DOWN RELAY
M
UP
DOWN
H2 HEADLIGHT BEAM LEVEL CONTROL ACTUATOR RH
H1 HEADLIGHT BEAM LEVEL CONTROL ACTUATOR LH
L (*1)
R–W(*2)
10A HEAD(RL)(*1)
10A HEAD(RH)(*2)
R–B
(*2)
G
(*1)
DIMMER RELAY
See Headlight System<8–1>
HEAD RELAY
BATTERY
W
See Headlight System<8–1><9–1>