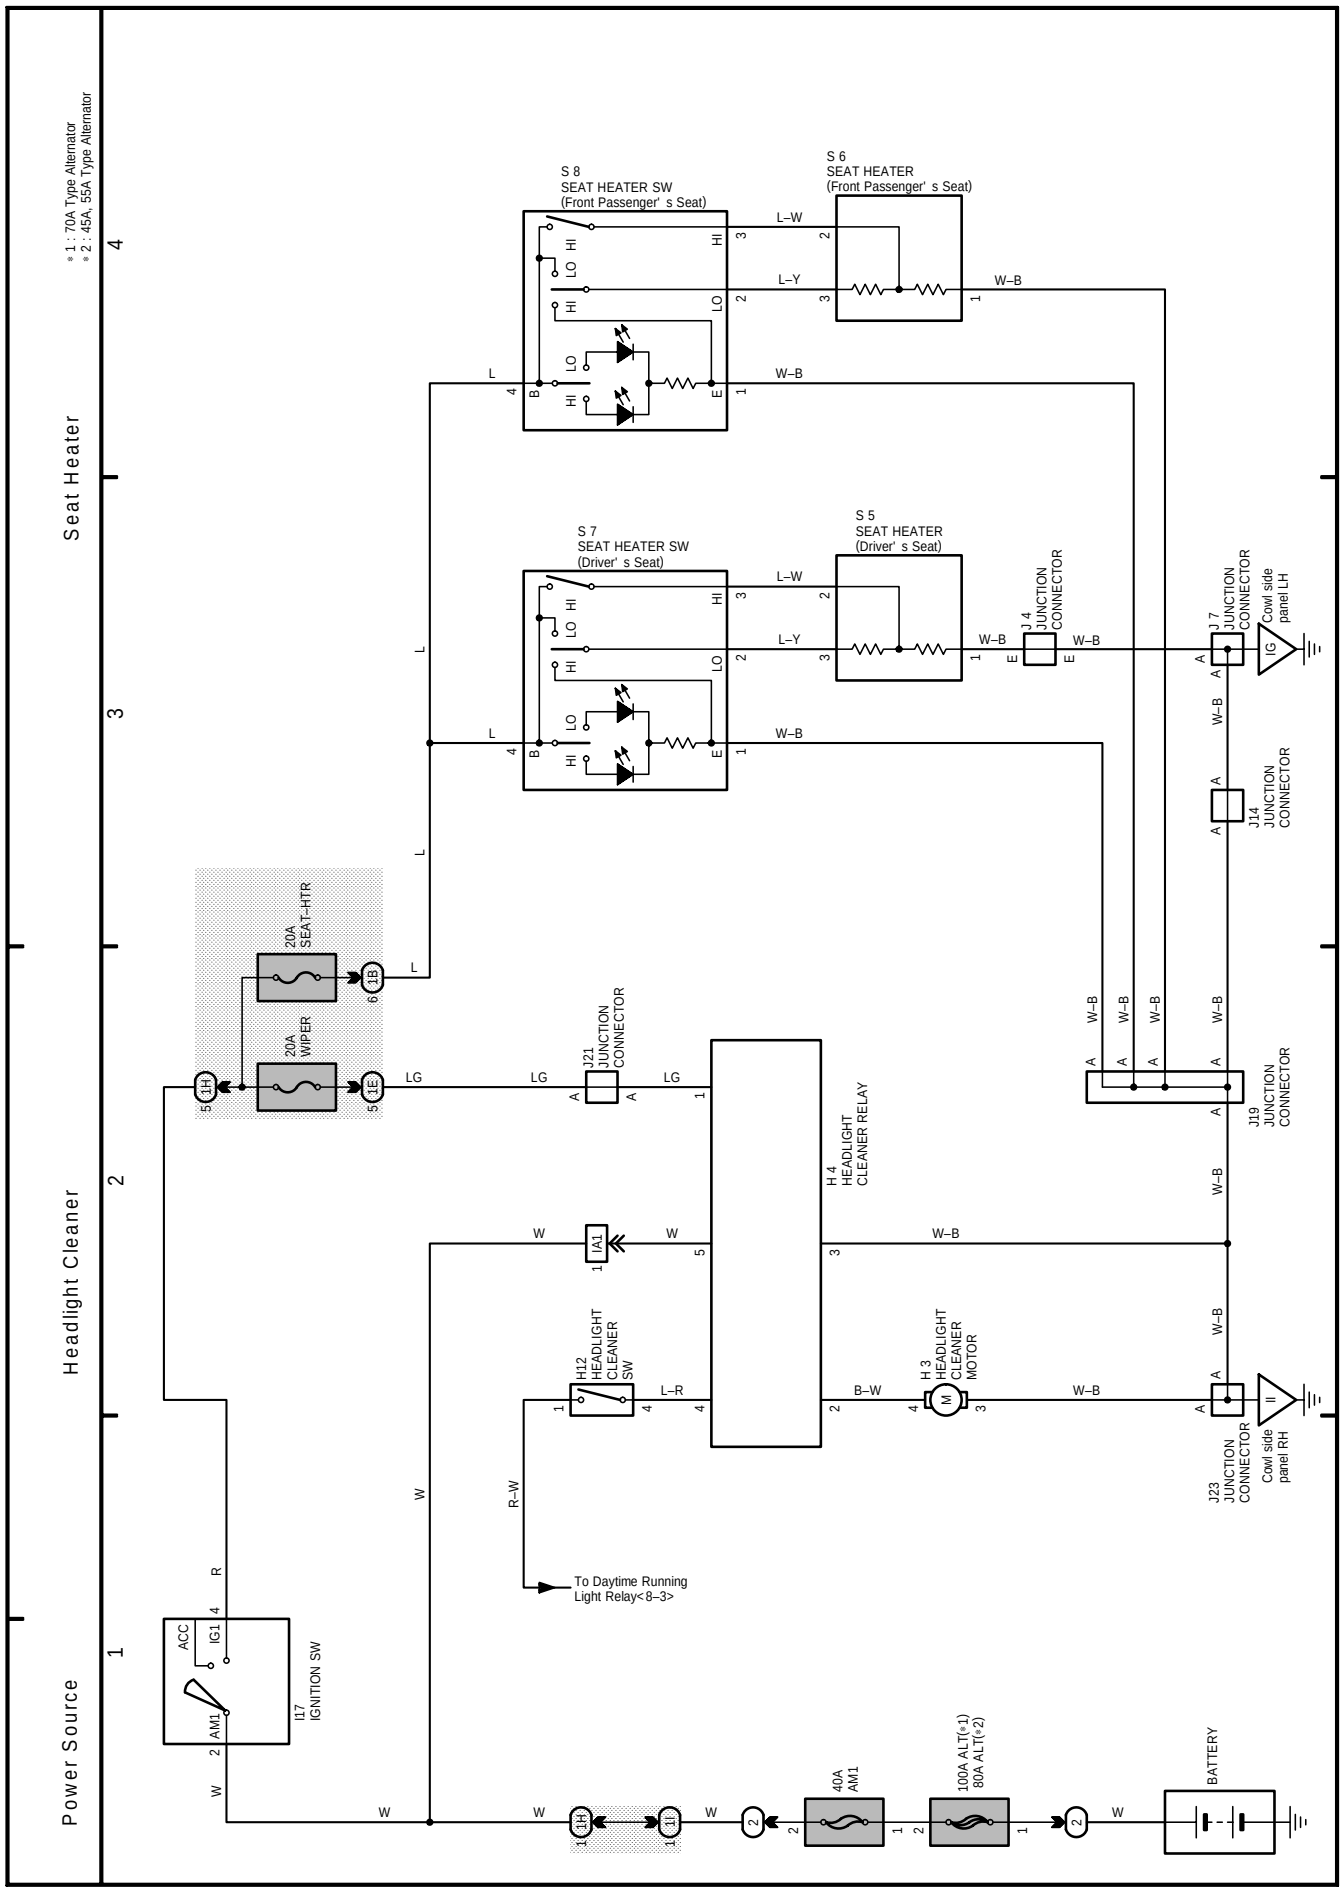

Power Source
Headlight Cleaner
Seat Heater
1
2
3
4
* 1 : 70A Type Alternator
* 2 : 45A, 55A Type Alternator
S 8
SEAT HEATER SW
(Front Passenger' s Seat)
S 6
SEAT HEATER
(Front Passenger' s Seat)
S 7
SEAT HEATER SW
(Driver' s Seat)
S 5
SEAT HEATER
(Driver' s Seat)
J 4
JUNCTION
CONNECTOR
J 7
JUNCTION
CONNECTOR
Cowl side
panel LH
J14
JUNCTION
CONNECTOR
J19
JUNCTION
CONNECTOR
J21
JUNCTION
CONNECTOR
J23
JUNCTION
CONNECTOR
Cowl side
panel RH
20A
SEAT–HTR
20A
WIPER
H 4
HEADLIGHT
CLEANER RELAY
H12
HEADLIGHT
CLEANER
SW
H 3
HEADLIGHT
CLEANER
MOTOR
I17
IGNITION SW
ACC
IG1
AM1
40A
AM1
100A ALT(*1)
80A ALT(*2)
BATTERY
To Daytime Running
Light Relay< 8–3>
L
L–W
L–Y
W–B
L–R
R–W
B–W
W
LG
R