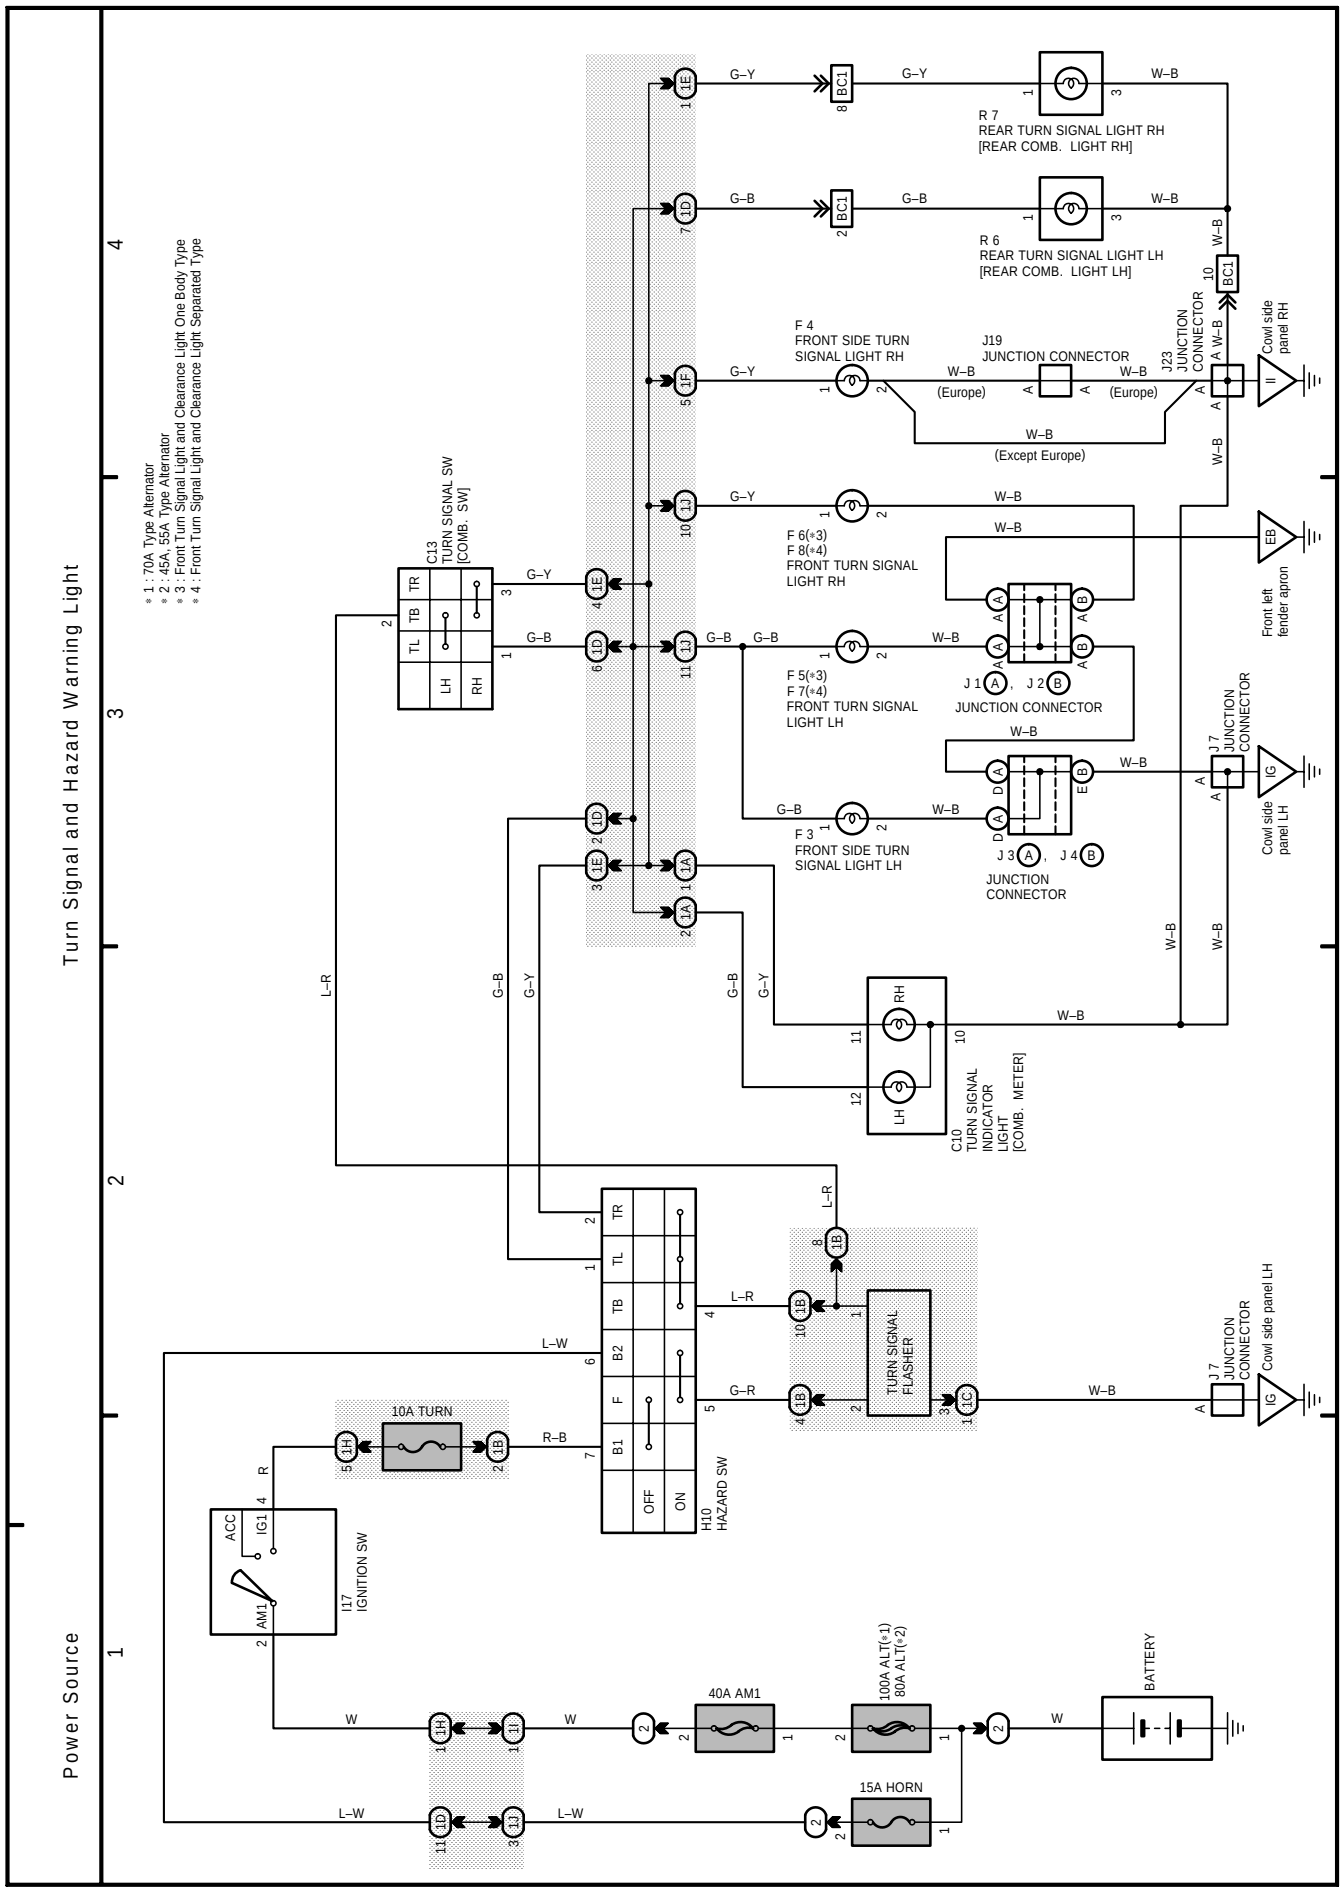

Power Source
Turn Signal and Hazard Warning Light
* 1 : 70A Type Alternator
* 2 : 45A, 55A Type Alternator
* 3 : Front Turn Signal Light and Clearance Light One Body Type
* 4 : Front Turn Signal Light and Clearance Light Separated Type
I17 IGNITION SW
ACC
IG1
AM1
H10 HAZARD SW
TR
TL
TB
B2
F
B1
OFF
ON
10A TURN
TURN SIGNAL FLASHER
C13 TURN SIGNAL SW [COMB. SW]
LH
RH
C10 TURN SIGNAL INDICATOR LIGHT [COMB. METER]
R 7 REAR TURN SIGNAL LIGHT RH [REAR COMB. LIGHT RH]
R 6 REAR TURN SIGNAL LIGHT LH [REAR COMB. LIGHT LH]
F 4 FRONT SIDE TURN SIGNAL LIGHT RH
F 6(*3) F 8(*4) FRONT TURN SIGNAL LIGHT RH
F 5(*3) F 7(*4) FRONT TURN SIGNAL LIGHT LH
F 3 FRONT SIDE TURN SIGNAL LIGHT LH
J19 JUNCTION CONNECTOR
J 1 , J 2
J 3 , J 4
JUNCTION CONNECTOR
J23 JUNCTION CONNECTOR
J17 JUNCTION CONNECTOR
(Europe)
(Except Europe)
Cowl side panel RH
Front left fender apron
Cowl side panel LH
Cowl side panel LH
40A AM1
100A ALT(*1) 80A ALT(*2)
15A HORN
BATTERY
G–Y
G–B
W–B
L–R
L–W
G–R
R–B
W