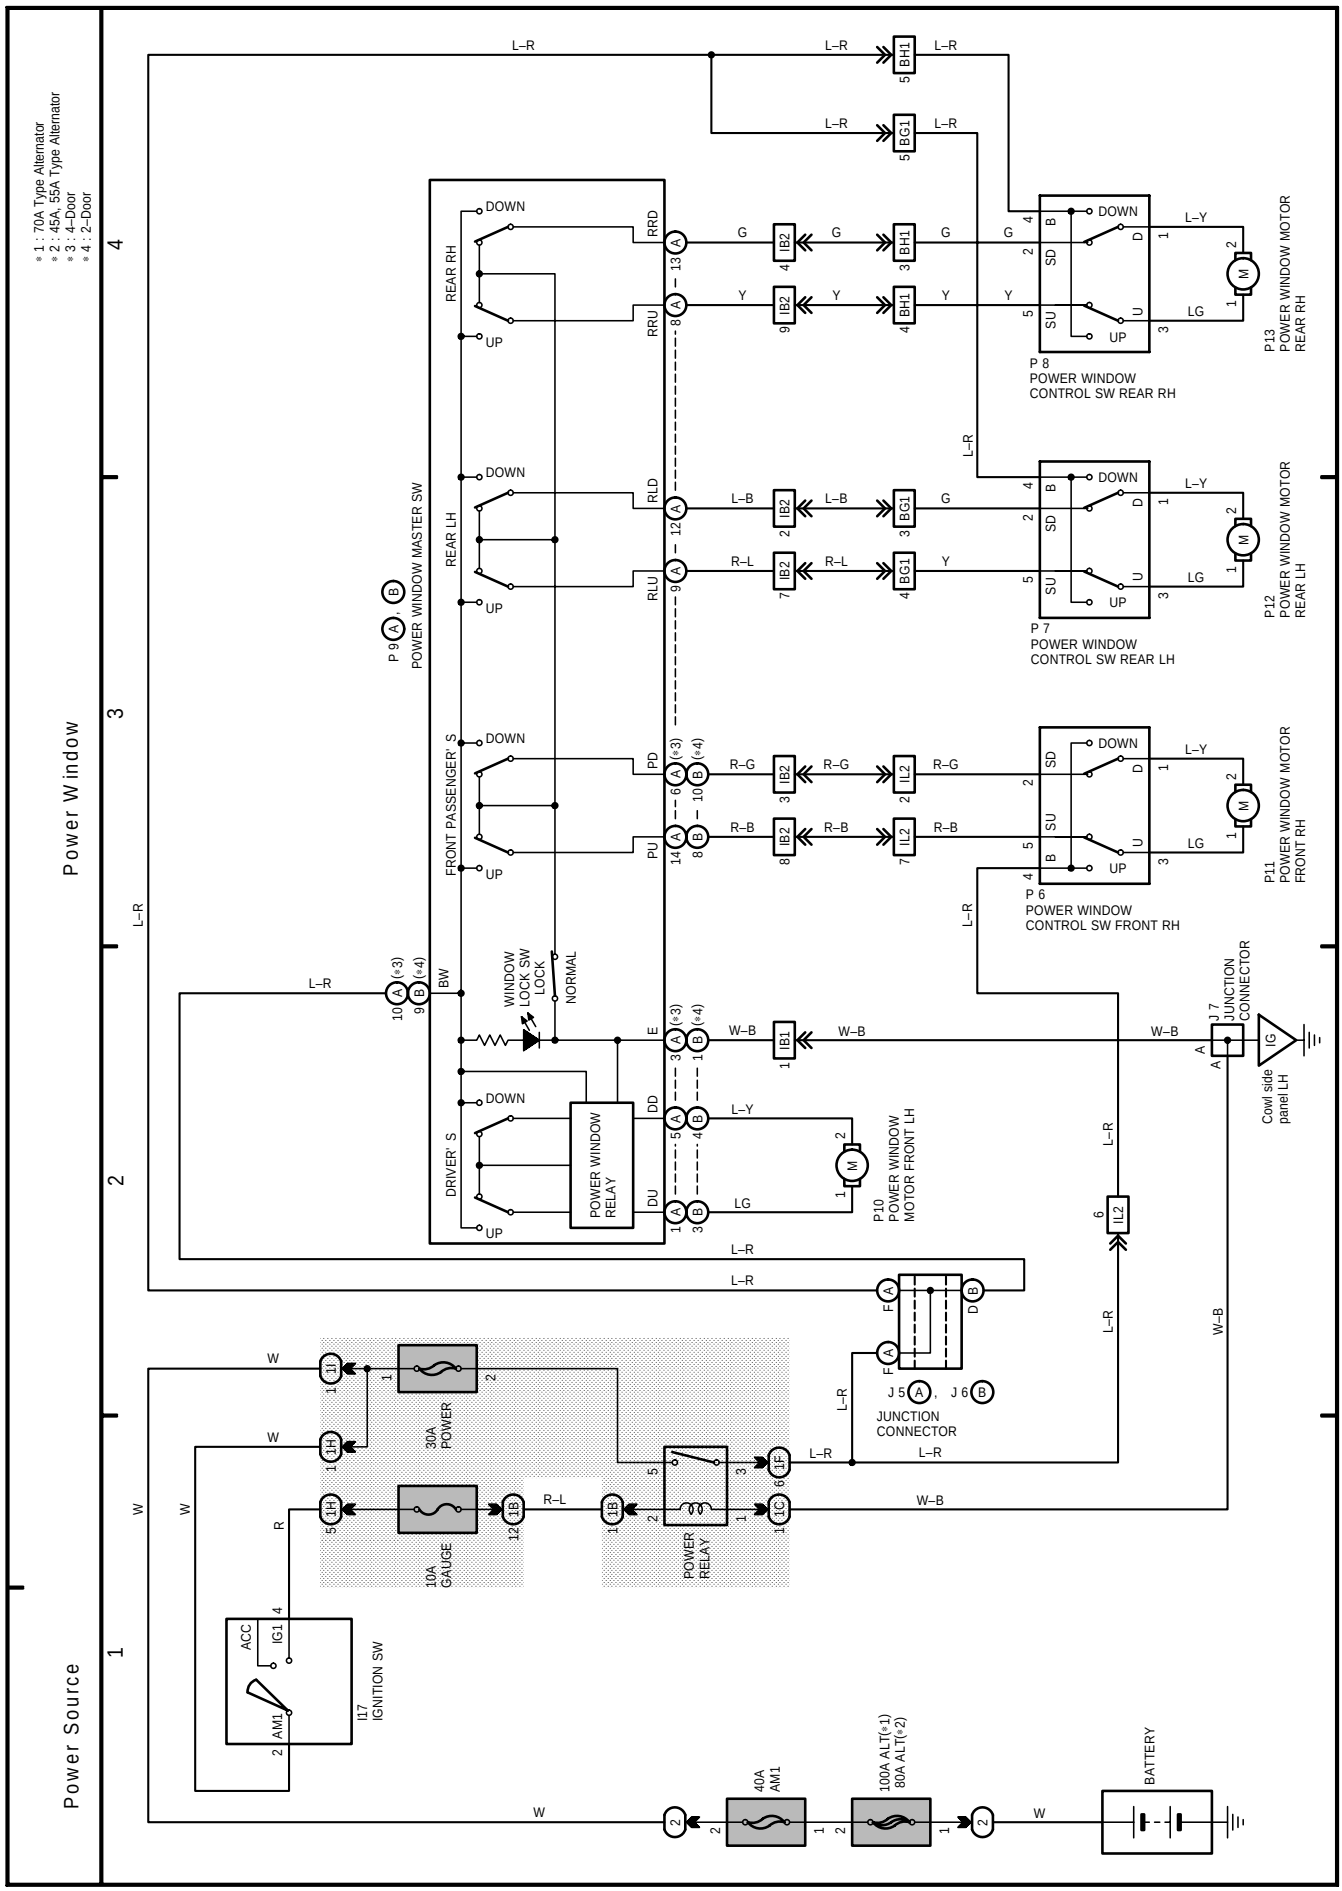

Power Source
Power Window
1
2
3
4
* 1 : 70A Type Alternator
* 2 : 45A, 55A Type Alternator
* 3 : 4–Door
* 4 : 2–Door
BATTERY
100A ALT(*1)
80A ALT(*2)
40A
AM1
I17
IGNITION SW
ACC
IG1
AM1
10A
GAUGE
30A
POWER
POWER
RELAY
J 5 A , J 6 B
JUNCTION
CONNECTOR
J 7
JUNCTION
CONNECTOR
Cowl side
panel LH
POWER WINDOW MASTER SW
P 9 A , B
REAR RH
REAR LH
FRONT PASSENGER' S
DRIVER' S
DOWN
UP
WINDOW
LOCK SW
LOCK
NORMAL
POWER WINDOW
RELAY
P 8
POWER WINDOW
CONTROL SW REAR RH
P 7
POWER WINDOW
CONTROL SW REAR LH
P 6
POWER WINDOW
CONTROL SW FRONT RH
P13
POWER WINDOW MOTOR
REAR RH
P12
POWER WINDOW MOTOR
REAR LH
P11
POWER WINDOW MOTOR
FRONT RH
P10
POWER WINDOW
MOTOR FRONT LH