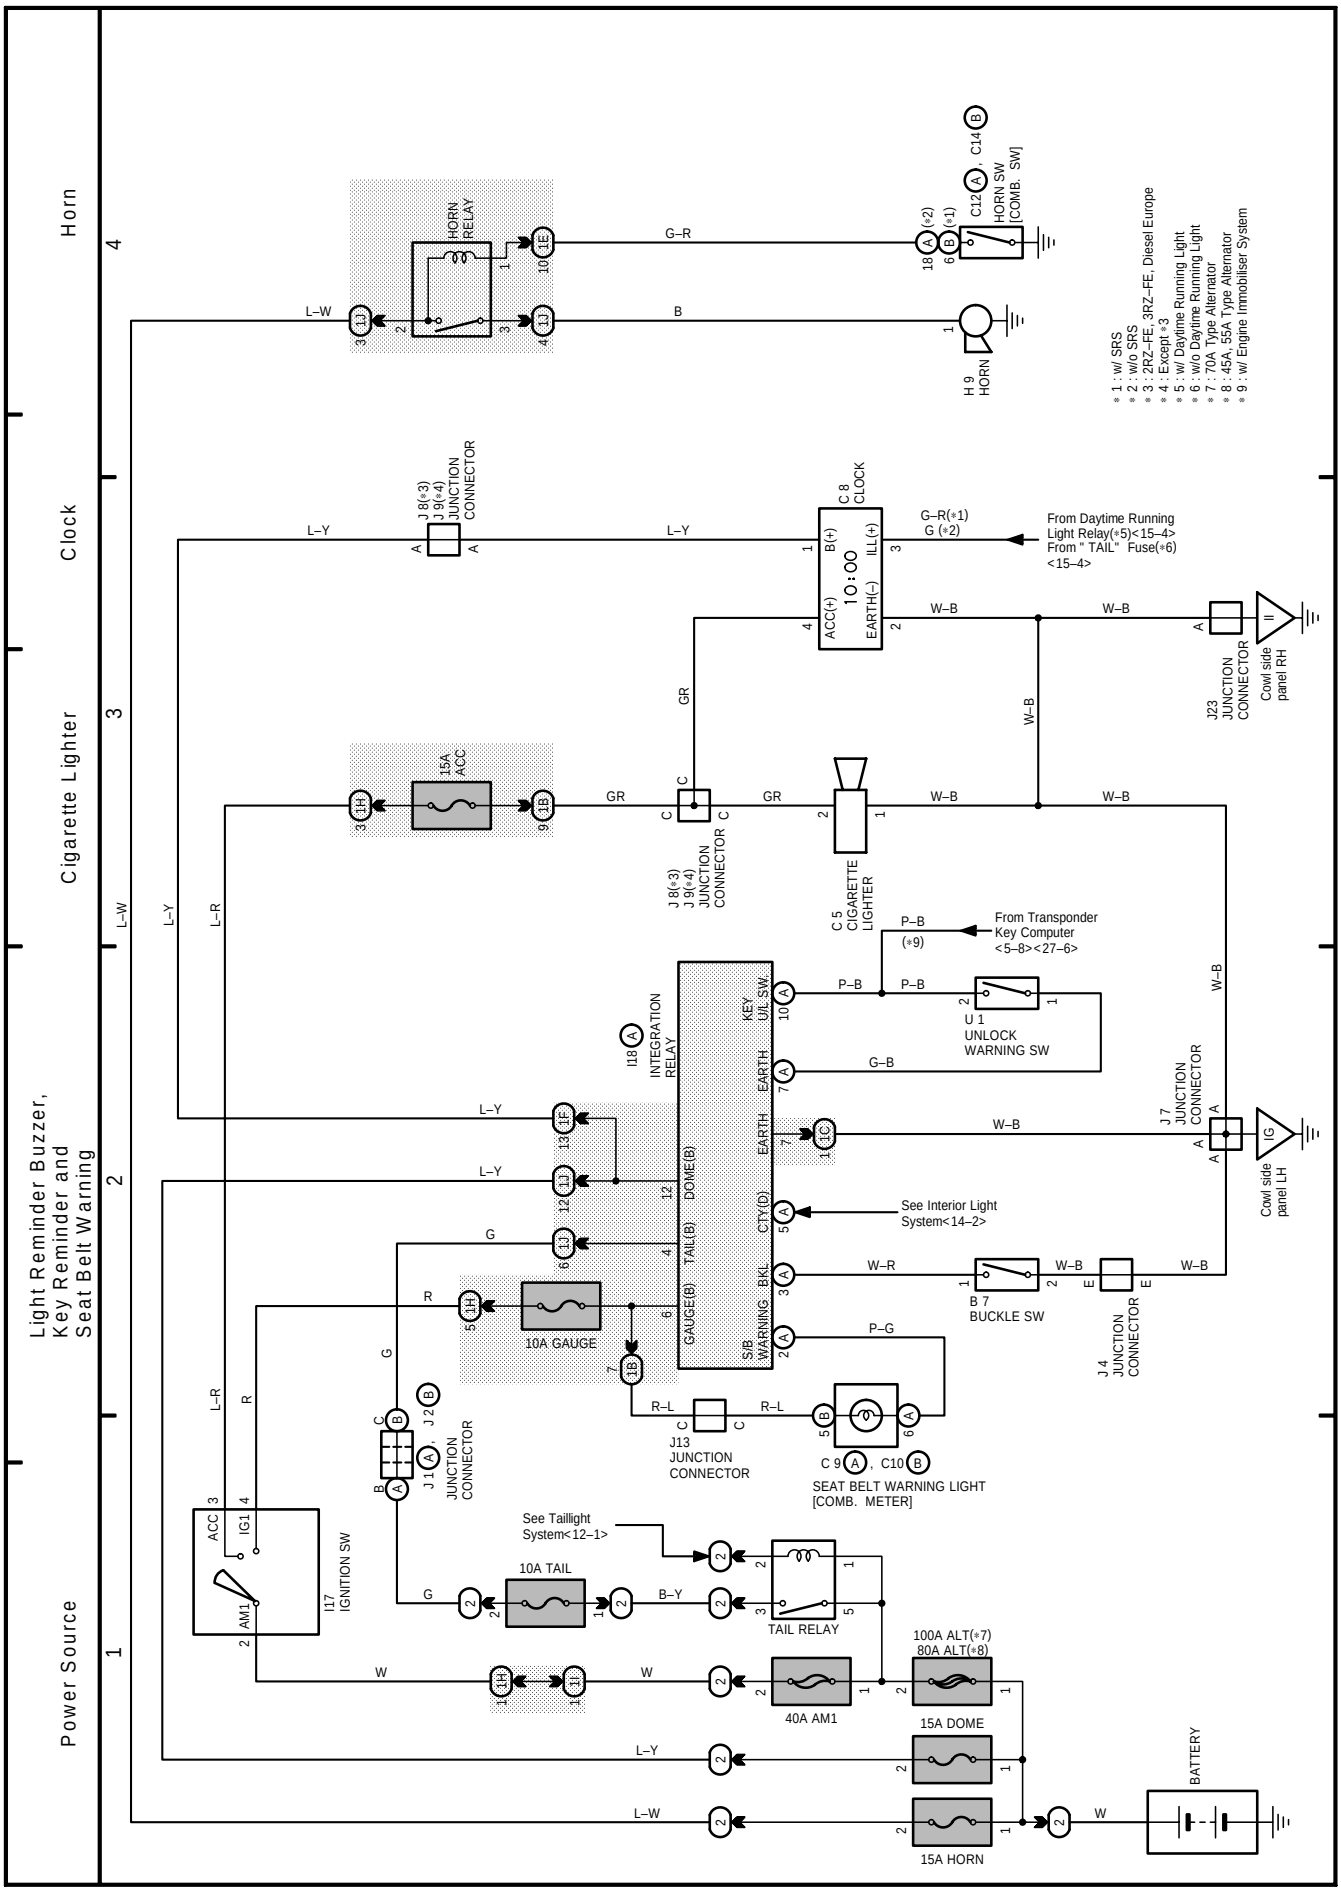

Horn
Clock
Cigarette Lighter
Light Reminder Buzzer, Key Reminder and Seat Belt Warning
Power Source
HORN RELAY
HORN SW [COMB. SW]
H 9 HORN
J 8(*3) J 9(*4) JUNCTION CONNECTOR
C 8 CLOCK
10:00
From Daytime Running Light Relay(*5)<15–4>
From " TAIL" Fuse(*6) <15–4>
J23 JUNCTION CONNECTOR
Cowl side panel RH
15A ACC
C 5 CIGARETTE LIGHTER
From Transponder Key Computer <5–8><27–6>
I18 INTEGRATION RELAY
KEY UNLOCK SW.
EARTH
DOME(B)
CTY(D)
TAIL(B)
BKL
GAUGE(B)
WARNING
S/B
U 1 UNLOCK WARNING SW
J 7 JUNCTION CONNECTOR
See Interior Light System<14–2>
B 7 BUCKLE SW
J 4 JUNCTION CONNECTOR
10A GAUGE
J13 JUNCTION CONNECTOR
C 9, C10
SEAT BELT WARNING LIGHT [COMB. METER]
J1, J2 JUNCTION CONNECTOR
I17 IGNITION SW
ACC
IG1
AM1
See Taillight System<12–1>
10A TAIL
TAIL RELAY
100A ALT(*7) 80A ALT(*8)
40A AM1
15A DOME
15A HORN
BATTERY
* 1 : w/ SRS
* 2 : w/o SRS
* 3 : 2RZ–FE, 3RZ–FE, Diesel Europe
* 4 : Except *3
* 5 : w/ Daytime Running Light
* 6 : w/o Daytime Running Light
* 7 : 70A Type Alternator
* 8 : 45A Type Alternator
* 9 : w/ Engine Immobiliser System