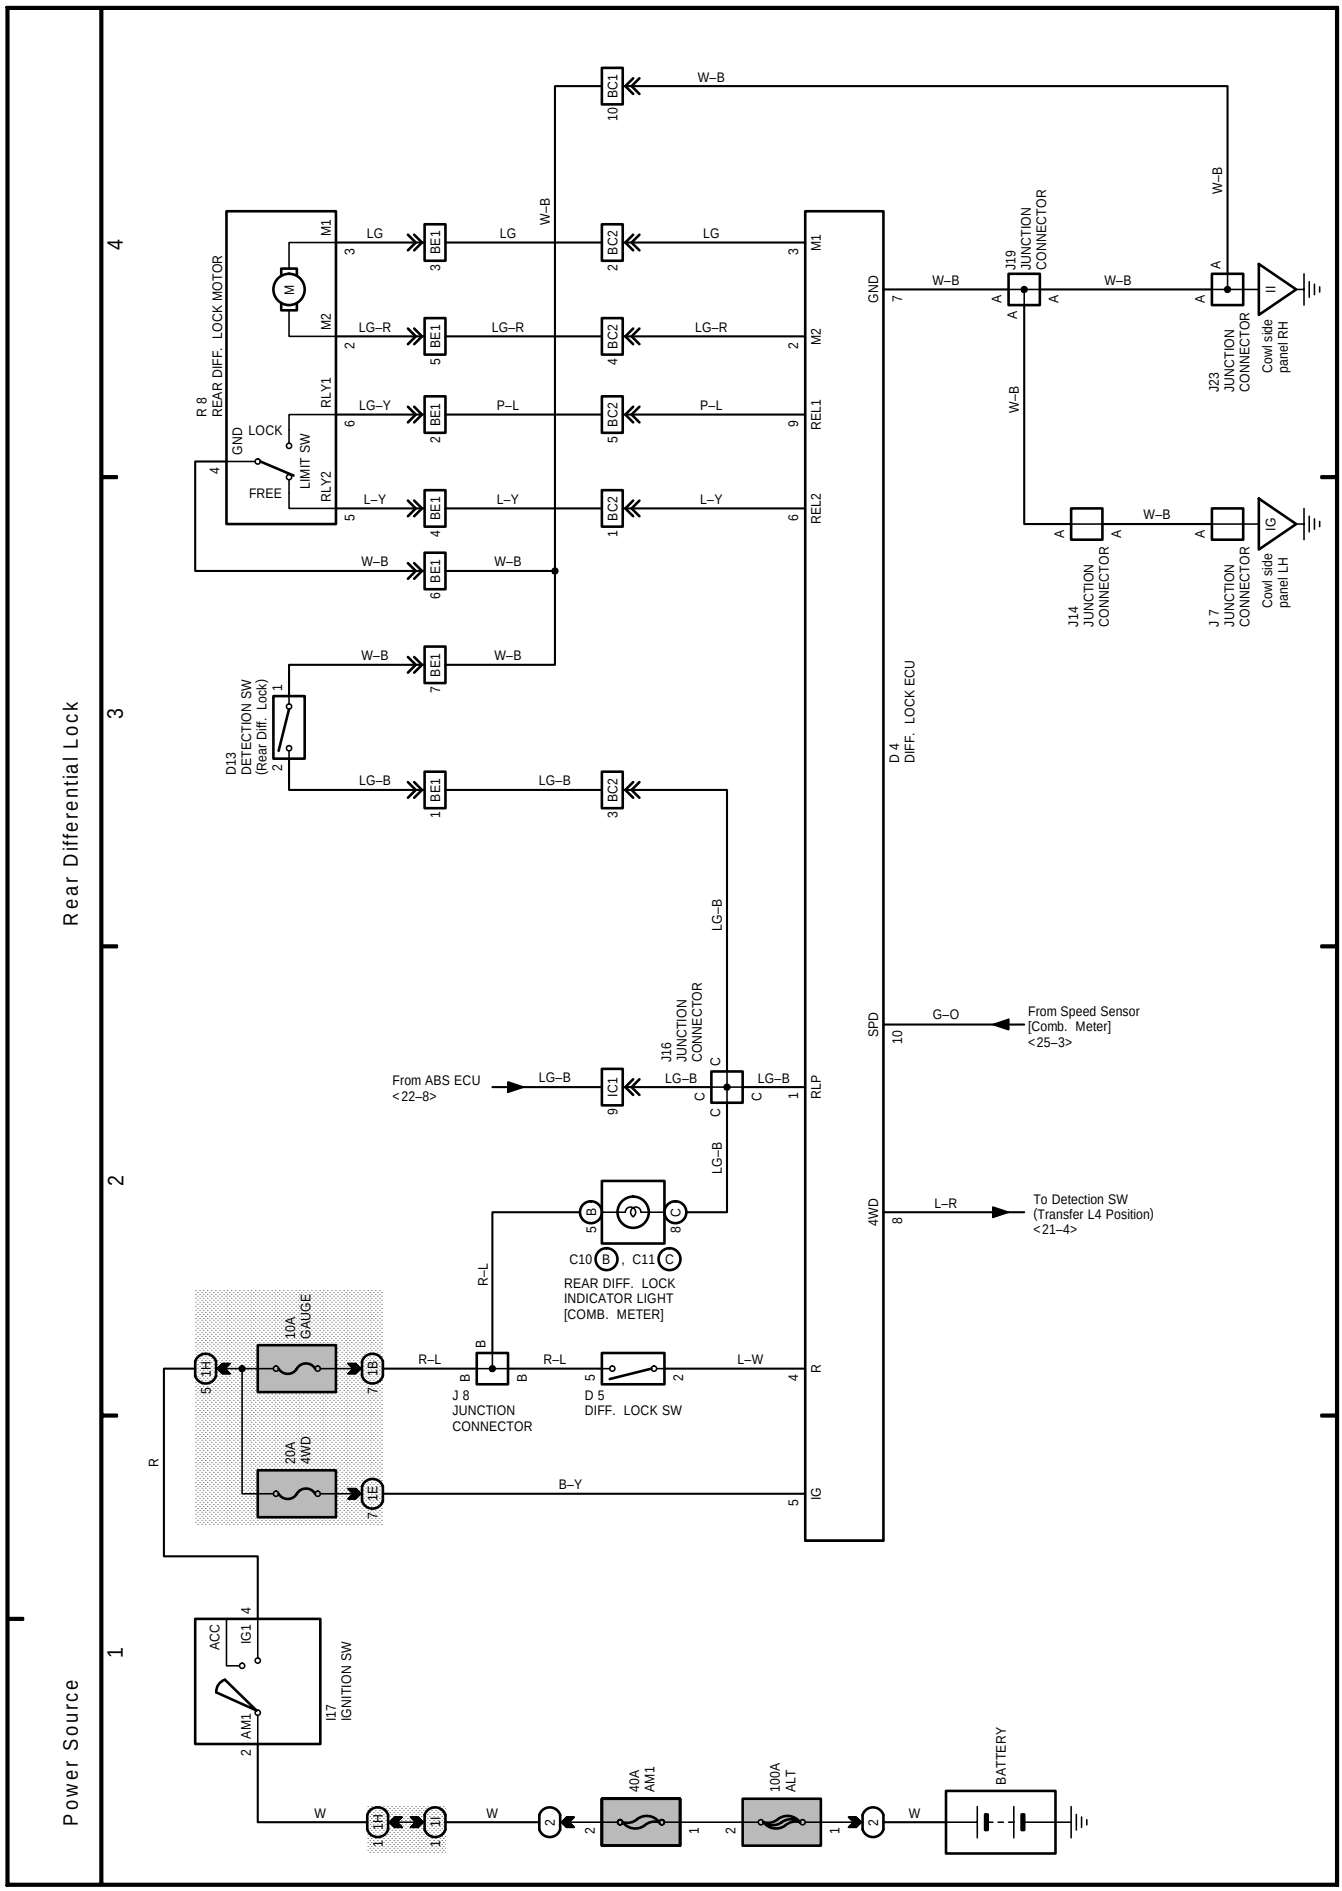

Power Source
Rear Differential Lock
1
2
3
4
R 8
REAR DIFF. LOCK MOTOR
M
M1
M2
RLY1
RLY2
GND
LOCK
FREE
LIMIT SW
LG
LG–R
LG–Y
L–Y
W–B
LG–B
BE1
BC1
BC2
D13
DETECTION SW
(Rear Diff. Lock)
D 4
DIFF. LOCK ECU
M1
M2
REL1
REL2
RLP
SPD
4WD
IG
GND
J19
JUNCTION
CONNECTOR
J23
JUNCTION
CONNECTOR
Cowl side
panel RH
J14
JUNCTION
CONNECTOR
J 7
JUNCTION
CONNECTOR
Cowl side
panel LH
J16
JUNCTION
CONNECTOR
IC1
From ABS ECU
<22–8>
G–O
From Speed Sensor
[Comb. Meter]
<25–3>
L–R
To Detection SW
(Transfer L4 Position)
<21–4>
C10
C11
REAR DIFF. LOCK
INDICATOR LIGHT
[COMB. METER]
R–L
L–W
J 8
JUNCTION
CONNECTOR
D 5
DIFF. LOCK SW
10A
GAUGE
20A
4WD
1H
1B
1E
B–Y
I17
IGNITION SW
ACC
IG1
AM1
W
40A
AM1
100A
ALT
BATTERY