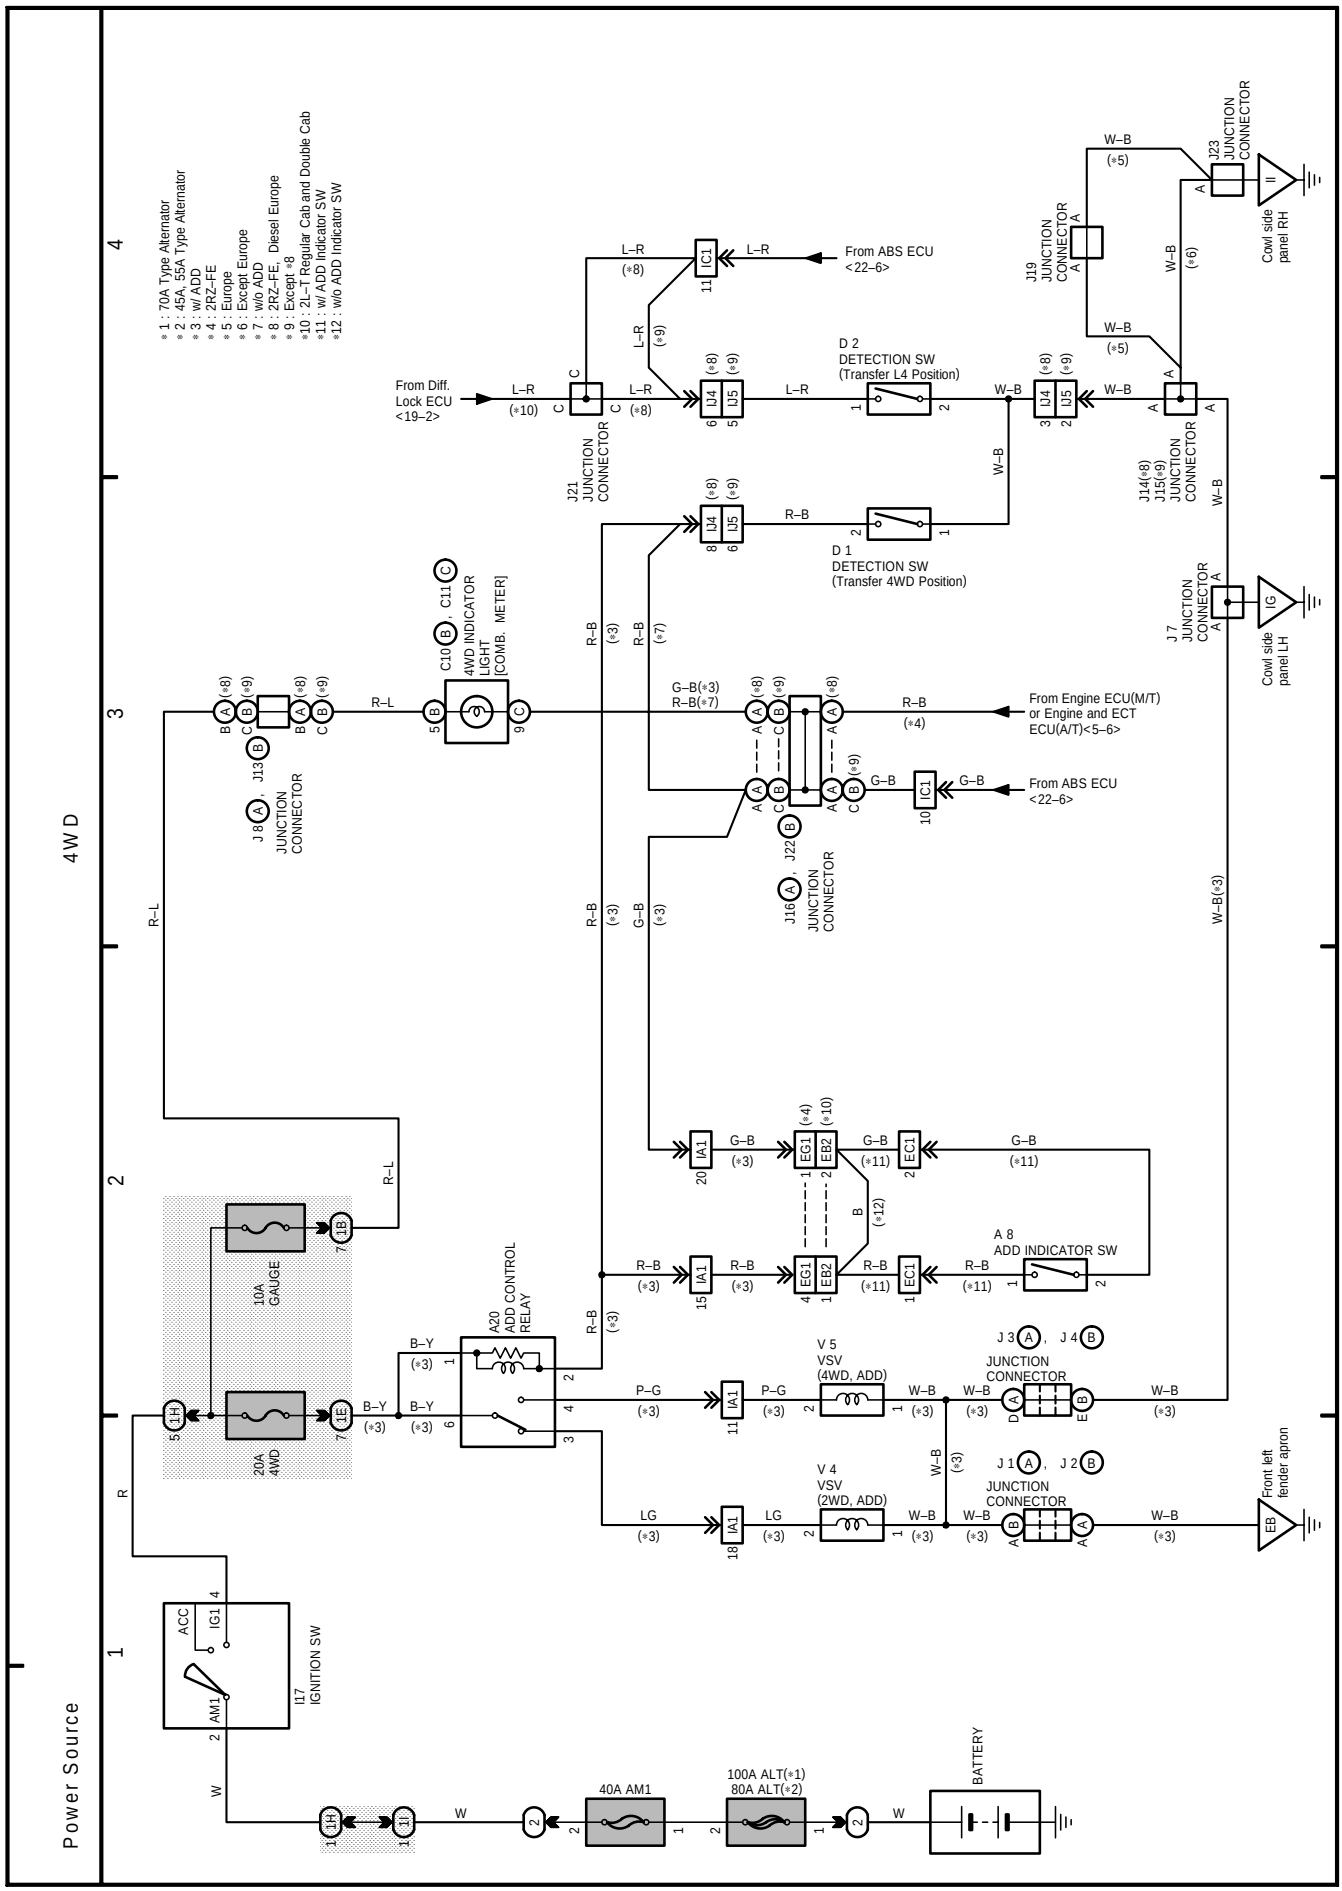

Power Source
4WD
*1 : 70A Type Alternator
*2 : 45A, 55A Type Alternator
*3 : w/ ADD
*4 : 2RZ–FE
*5 : Europe
*6 : Except Europe
*7 : w/o ADD
*8 : 2RZ–FE, Diesel Europe
*9 : Except *8
*10 : 2L–T Regular Cab and Double Cab
*11 : w/ ADD Indicator SW
*12 : w/o ADD Indicator SW
From Diff. Lock ECU <19–2>
From ABS ECU <22–6>
D 2 DETECTION SW (Transfer L4 Position)
D 1 DETECTION SW (Transfer 4WD Position)
J21 JUNCTION CONNECTOR
J19 JUNCTION CONNECTOR
J23 JUNCTION CONNECTOR
Cowl side panel RH
J14(*8) J15(*9) JUNCTION CONNECTOR
J 7 JUNCTION CONNECTOR
Cowl side panel LH
C10, C11 4WD INDICATOR LIGHT [COMB. METER]
From Engine ECU(M/T) or Engine and ECT ECU(A/T)<5–6>
From ABS ECU <22–6>
J 8, J13 JUNCTION CONNECTOR
J16, J22 JUNCTION CONNECTOR
A 8 ADD INDICATOR SW
A20 ADD CONTROL RELAY
10A GAUGE
20A 4WD
V 5 VSV (4WD, ADD)
V 4 VSV (2WD, ADD)
J 3, J 4 JUNCTION CONNECTOR
J 1, J 2 JUNCTION CONNECTOR
Front left fender apron
I17 IGNITION SW
ACC
IG1
AM1
40A AM1
100A ALT(*1) 80A ALT(*2)
BATTERY