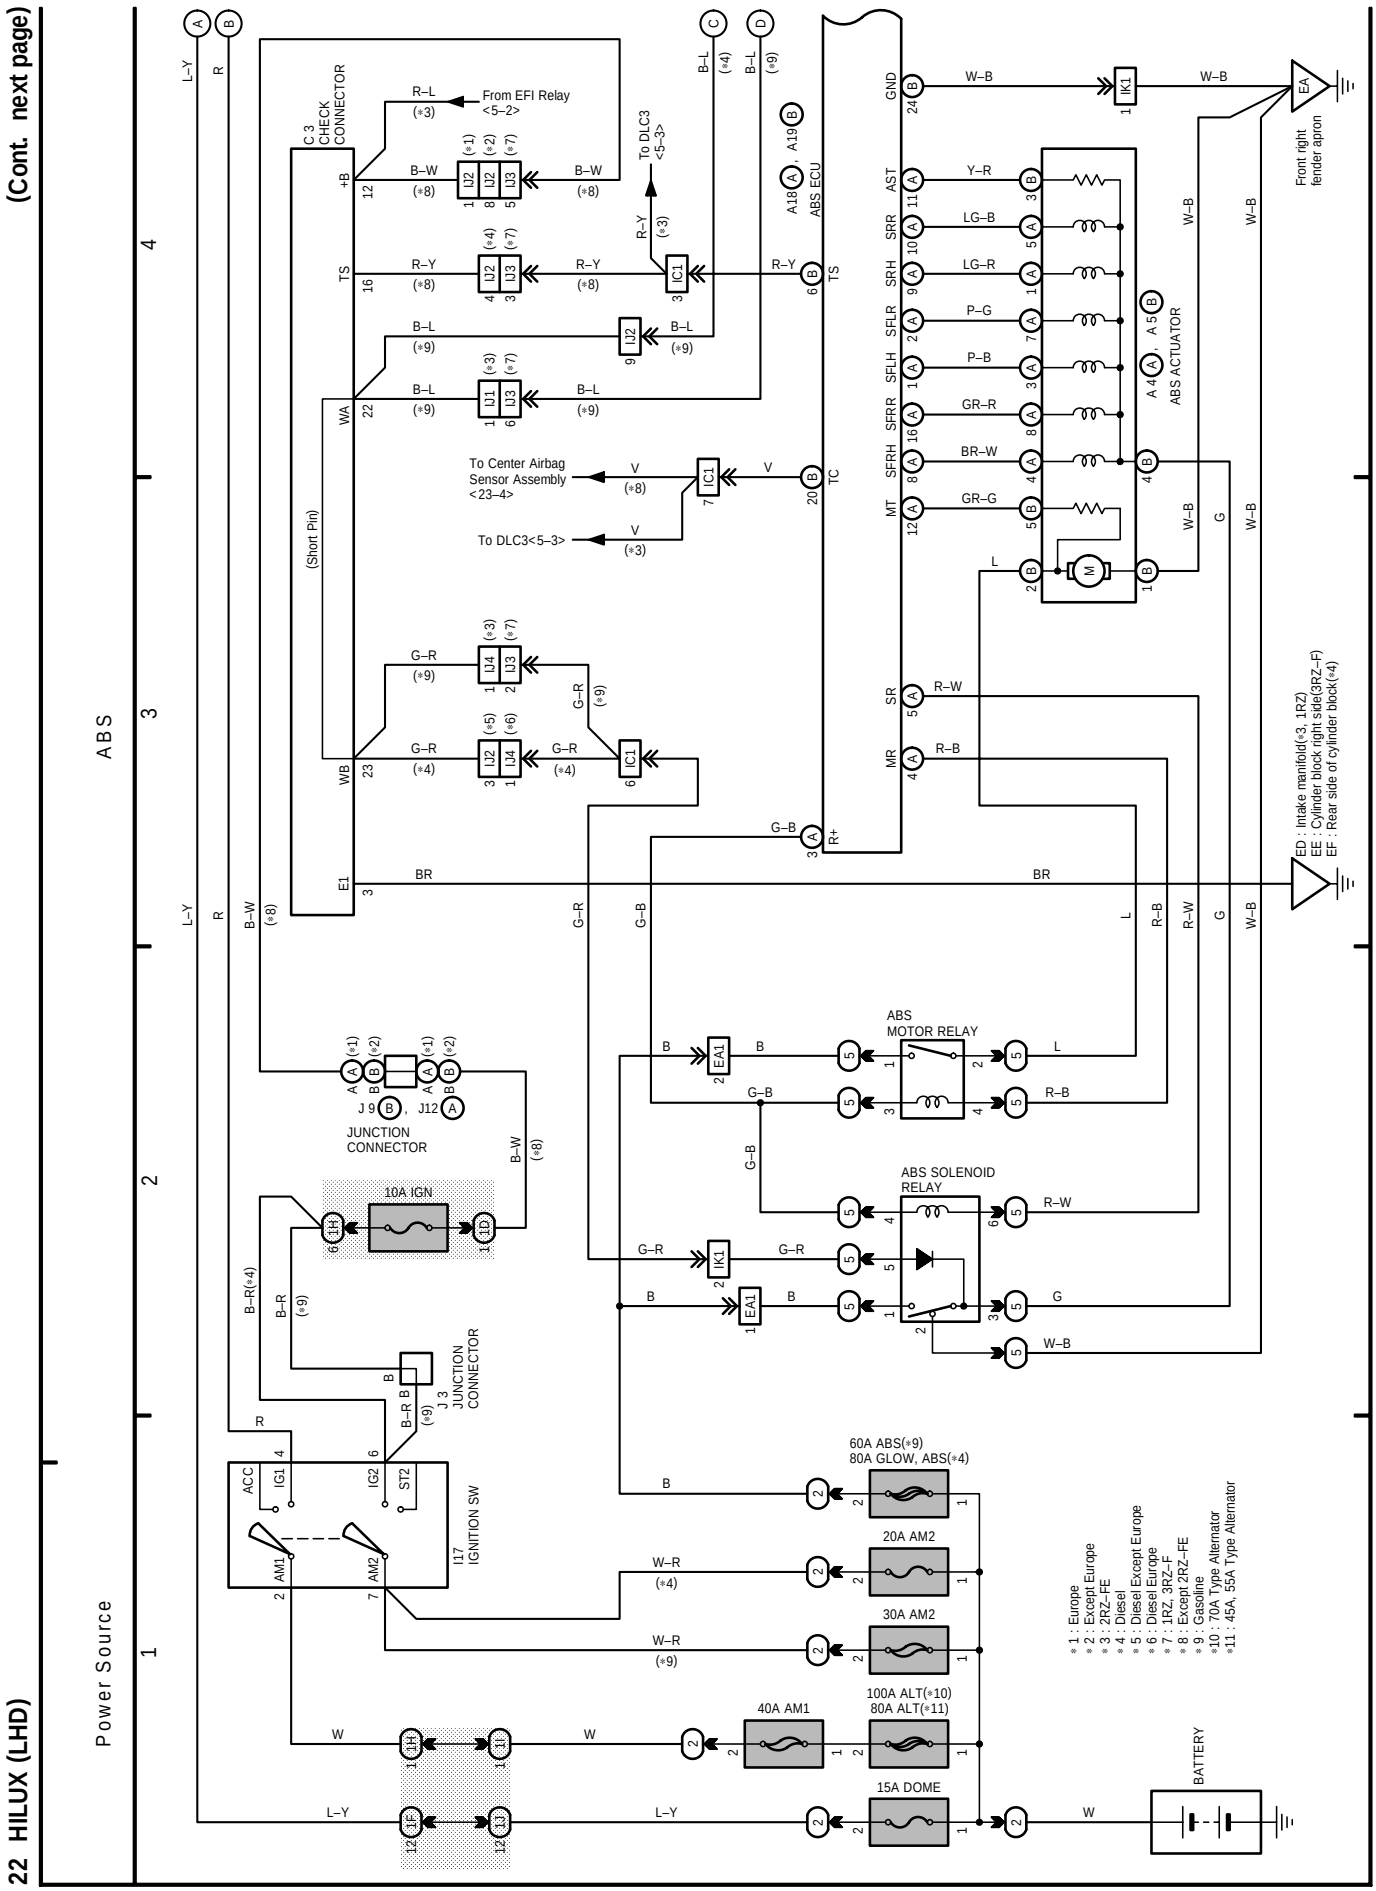
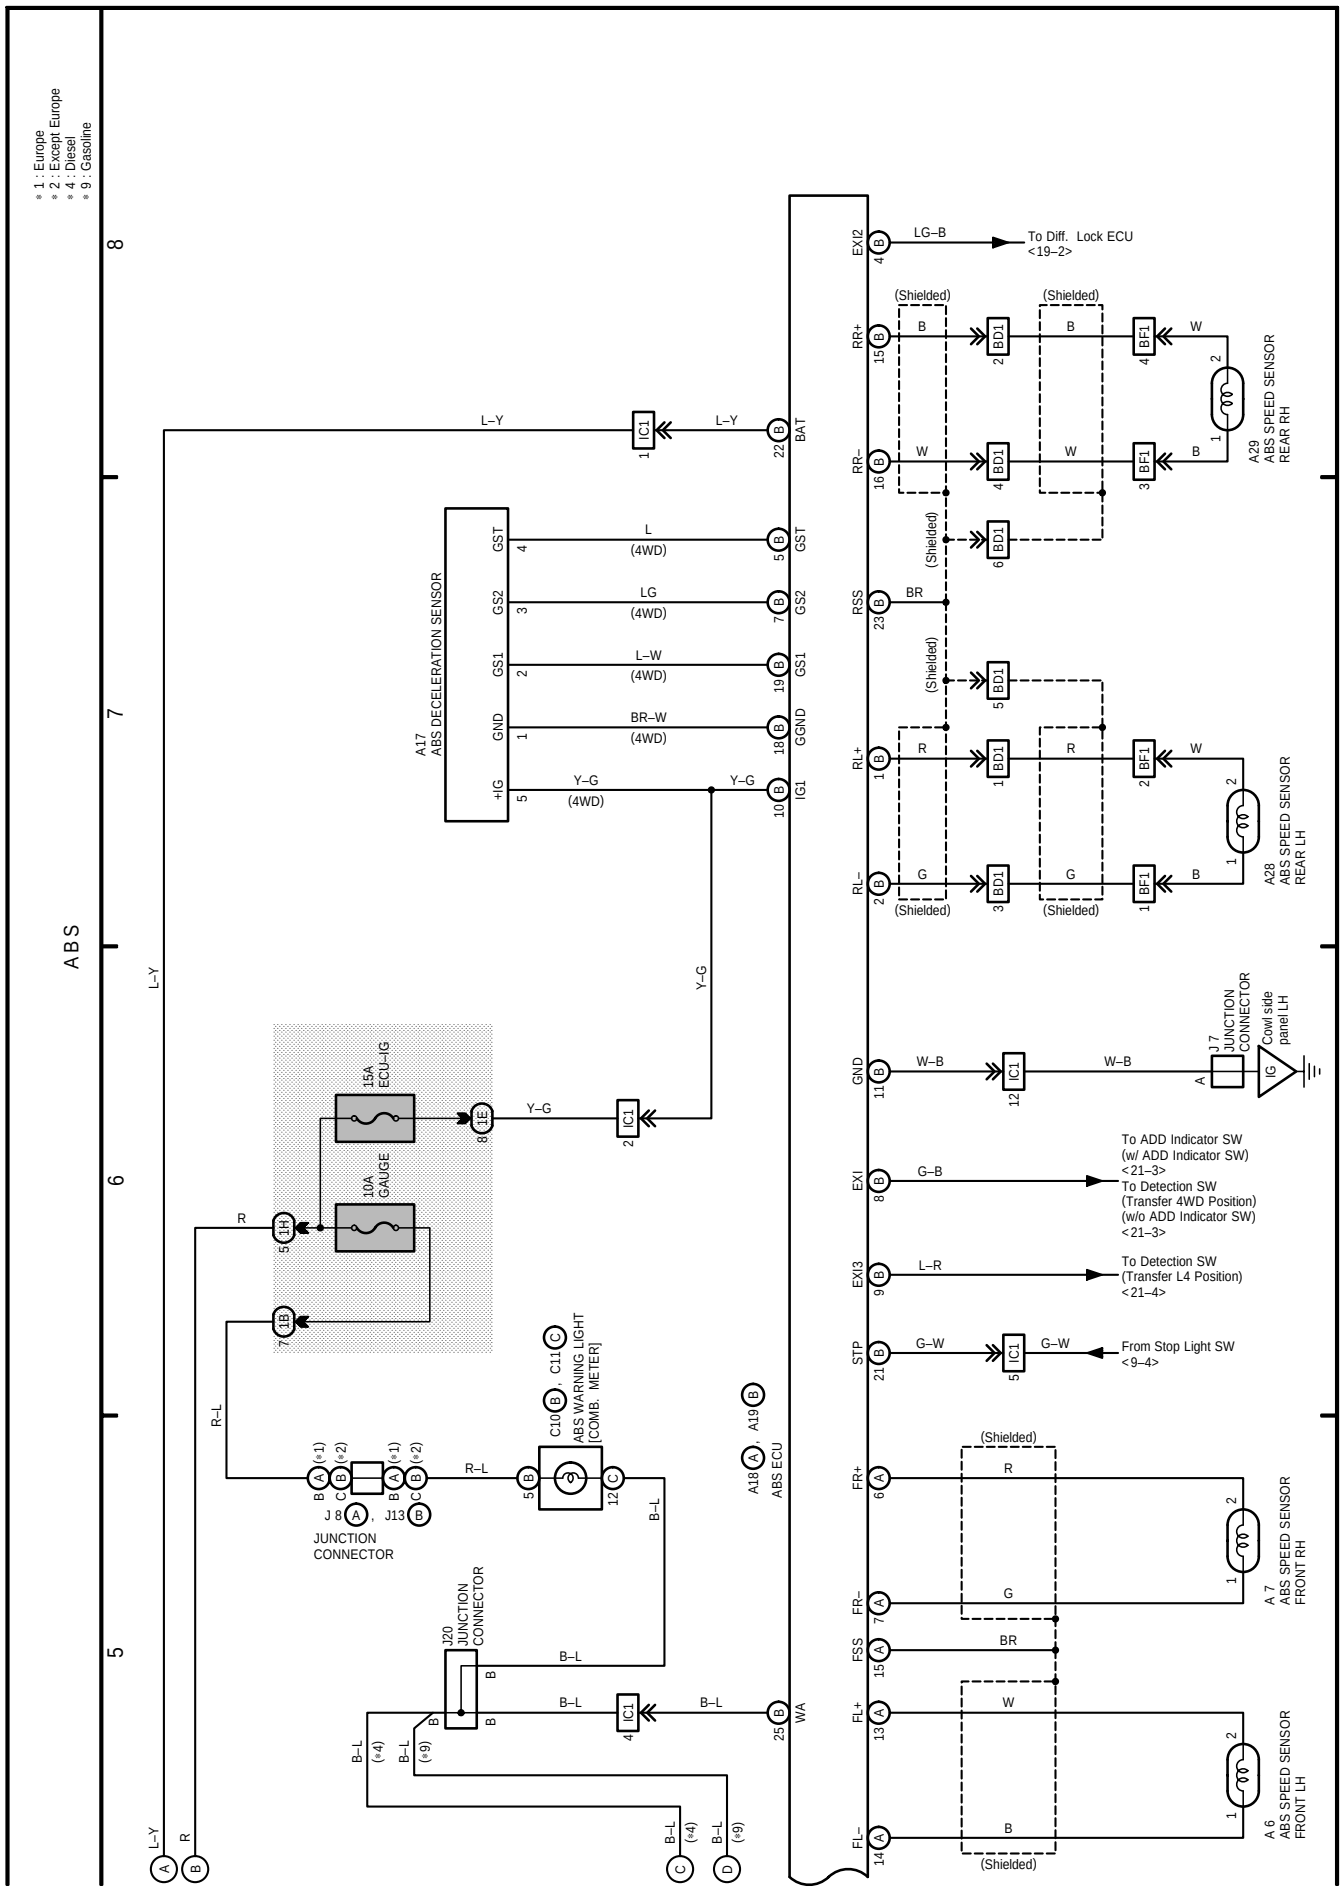

(Cont. next page)
22 HILUX (LHD)
Power Source
ABS
1
2
3
4
C 3 CHECK CONNECTOR
From EFI Relay <5–2>
To DLC3 <5–3>
To Center Airbag Sensor Assembly <23–4>
To DLC3<5–3>
(Short Pin)
ABS ECU
A18, A19
ABS ACTUATOR
A 4, A 5
Front right fender apron
ED : Intake manifold(*3, 1RZ)
EE : Cylinder block right side(3RZ–F)
EF : Rear side of cylinder block(*4)
JUNCTION CONNECTOR
J 9, J12
J 3 JUNCTION CONNECTOR
ABS MOTOR RELAY
ABS SOLENOID RELAY
10A IGN
I17 IGNITION SW
60A ABS(*9)
80A GLOW, ABS(*4)
20A AM2
30A AM2
40A AM1
100A ALT(*10)
80A ALT(*11)
15A DOME
BATTERY
*1 : Europe
*2 : Except Europe
*3 : 2RZ–FE
*4 : Diesel
*5 : Diesel Except Europe
*6 : Diesel Europe
*7 : 1RZ, 3RZ–F
*8 : Except 2RZ–FE
*9 : Gasoline
*10 : 70A Type Alternator
*11 : 45A, 55A Type Alternator


* 1 : Europe
* 2 : Except Europe
* 4 : Diesel
* 9 : Gasoline
ABS
A17 ABS DECELERATION SENSOR
GST
GS2
GS1
GND
+IG
L (4WD)
LG (4WD)
L–W (4WD)
BR–W (4WD)
Y–G (4WD)
BAT
GST
GS2
GS1
GGND
IG1
L–Y
Y–G
15A ECU–IG
10A GAUGE
IC1
1E
1H
1B
R
R–L
B–L
J 8 , J13
JUNCTION CONNECTOR
C10 , C11
ABS WARNING LIGHT [COMB. METER]
A18 , A19
ABS ECU
J20 JUNCTION CONNECTOR
WA
EXI2
LG–B
To Diff. Lock ECU <19–2>
RR+
RR–
RSS
RL+
RL–
BR
(Shielded)
BD1
BF1
A29 ABS SPEED SENSOR REAR RH
A28 ABS SPEED SENSOR REAR LH
GND
W–B
J 7 JUNCTION CONNECTOR
Cowl side panel LH
IG
EXI
G–B
To ADD Indicator SW (w/ ADD Indicator SW) <21–3>
To Detection SW (Transfer 4WD Position) (w/o ADD Indicator SW) <21–3>
EXI3
L–R
To Detection SW (Transfer L4 Position) <21–4>
STP
G–W
From Stop Light SW <9–4>
FR+
FR–
FSS
FL+
FL–
A7 ABS SPEED SENSOR FRONT RH
A6 ABS SPEED SENSOR FRONT LH