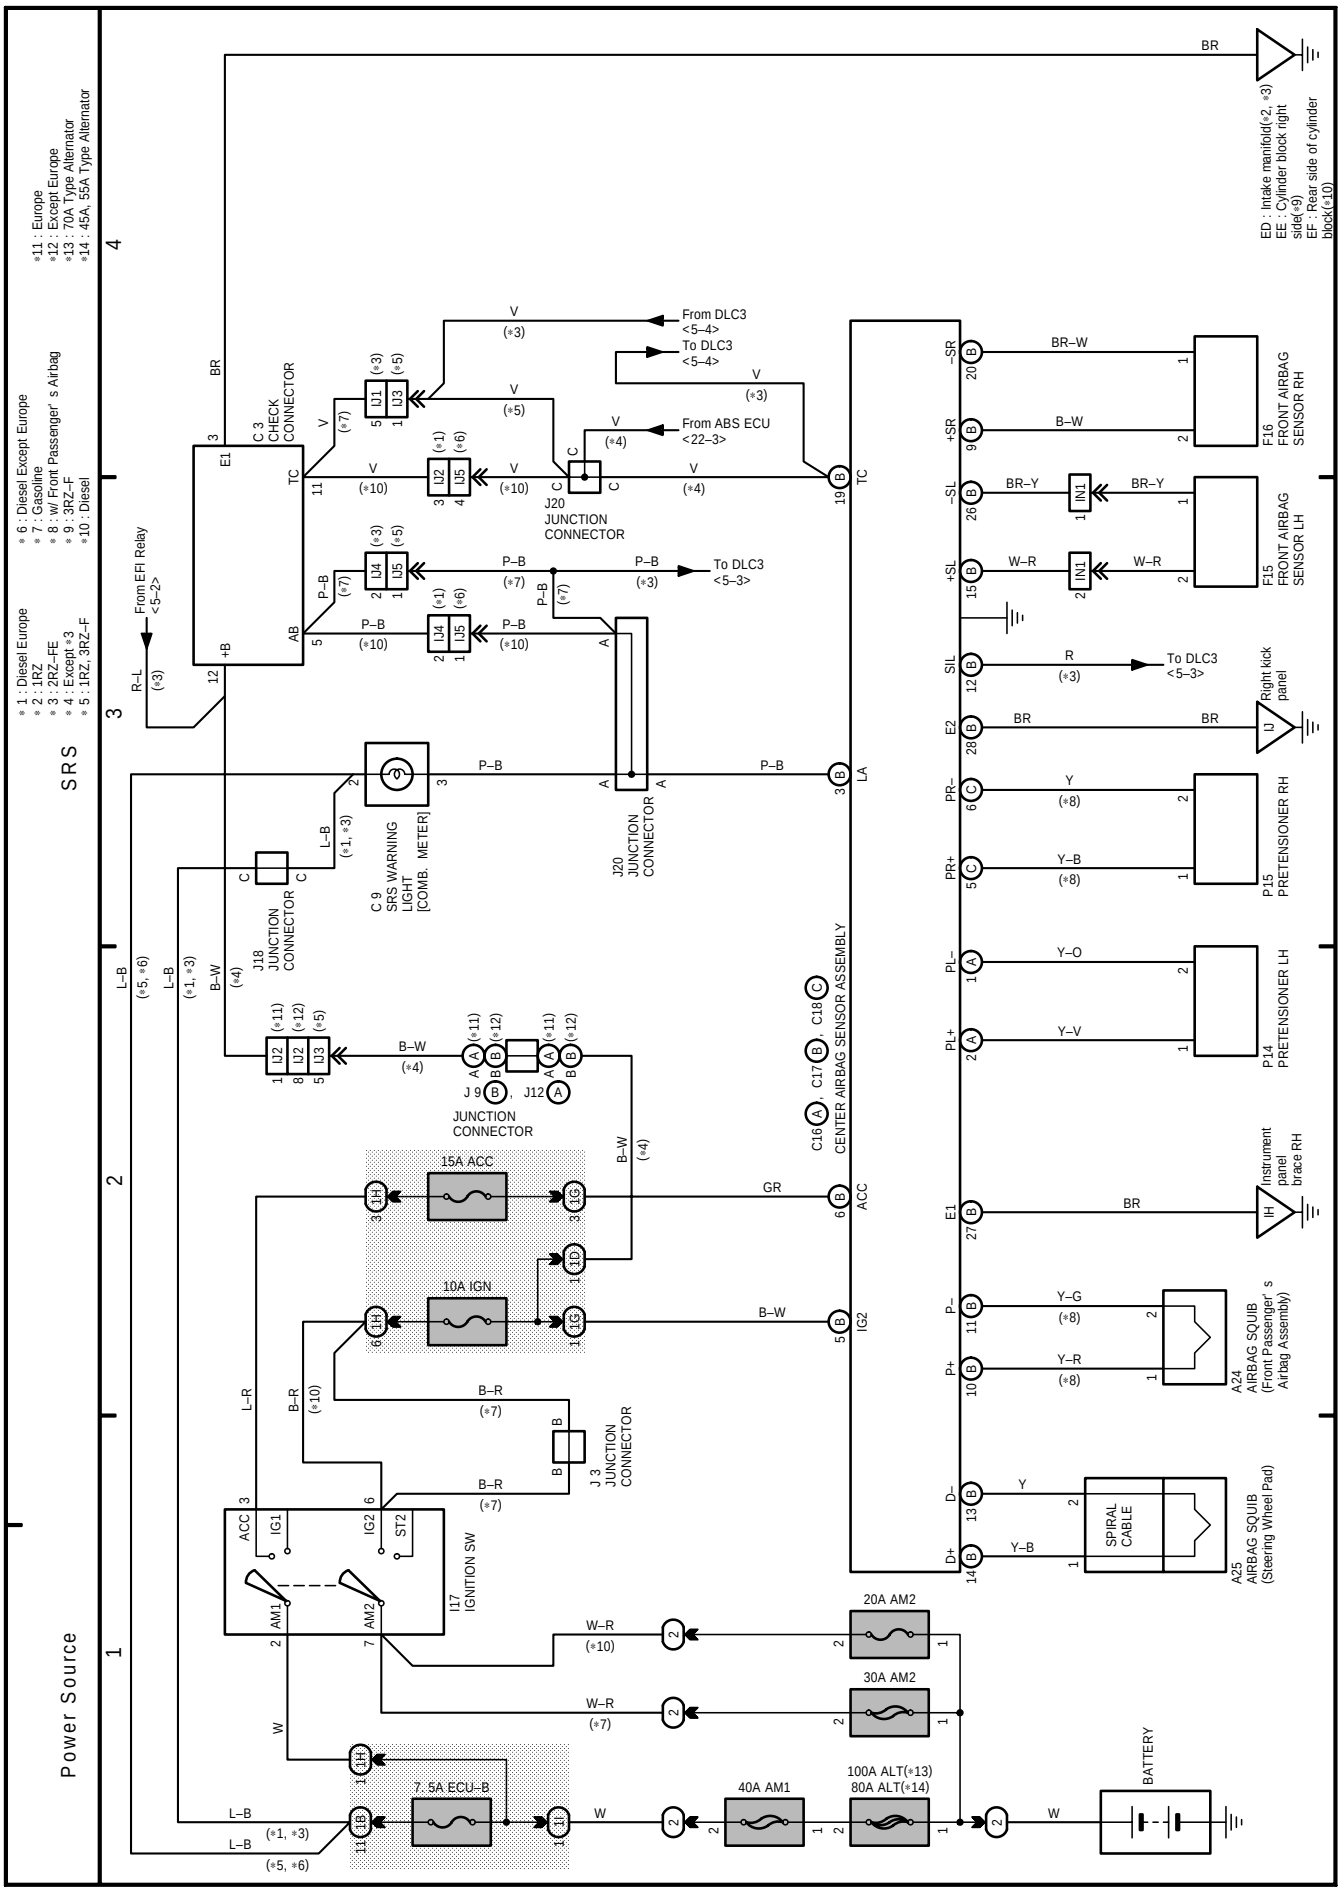

23 HILUX (LHD)
Power Source
SRS
* 1 : Diesel Europe
* 2 : 1RZ
* 3 : 2RZ–FE
* 4 : Except * 3
* 5 : 1RZ, 3RZ–F
* 6 : Diesel Except Europe
* 7 : Gasoline
* 8 : w/ Front Passenger' s Airbag
* 9 : 3RZ–F
* 10 : Diesel
* 11 : Europe
* 12 : Except Europe
* 13 : 70A Type Alternator
* 14 : 45A, 55A Type Alternator
From EFI Relay <5–2>
C 3 CHECK CONNECTOR
J20 JUNCTION CONNECTOR
From DLC3 <5–4>
To DLC3 <5–4>
From ABS ECU <22–3>
To DLC3 <5–3>
C 9 SRS WARNING LIGHT [COMB. METER]
J18 JUNCTION CONNECTOR
J 9 , J12 JUNCTION CONNECTOR
C16 , C17 , C18 CENTER AIRBAG SENSOR ASSEMBLY
J 3 JUNCTION CONNECTOR
I17 IGNITION SW
15A ACC
10A IGN
7. 5A ECU–B
20A AM2
30A AM2
40A AM1
100A ALT(*13)
80A ALT(*14)
BATTERY
F16 FRONT AIRBAG SENSOR RH
F15 FRONT AIRBAG SENSOR LH
P15 PRETENSIONER RH
P14 PRETENSIONER LH
A24 AIRBAG SQUIB (Front Passenger' s Airbag Assembly)
A25 AIRBAG SQUIB (Steering Wheel Pad)
SPIRAL CABLE
Right kick panel
Instrument panel brace RH
ED : Intake manifold(*2, *3)
EE : Cylinder block right side(*9)
EF : Rear side of cylinder block(*10)