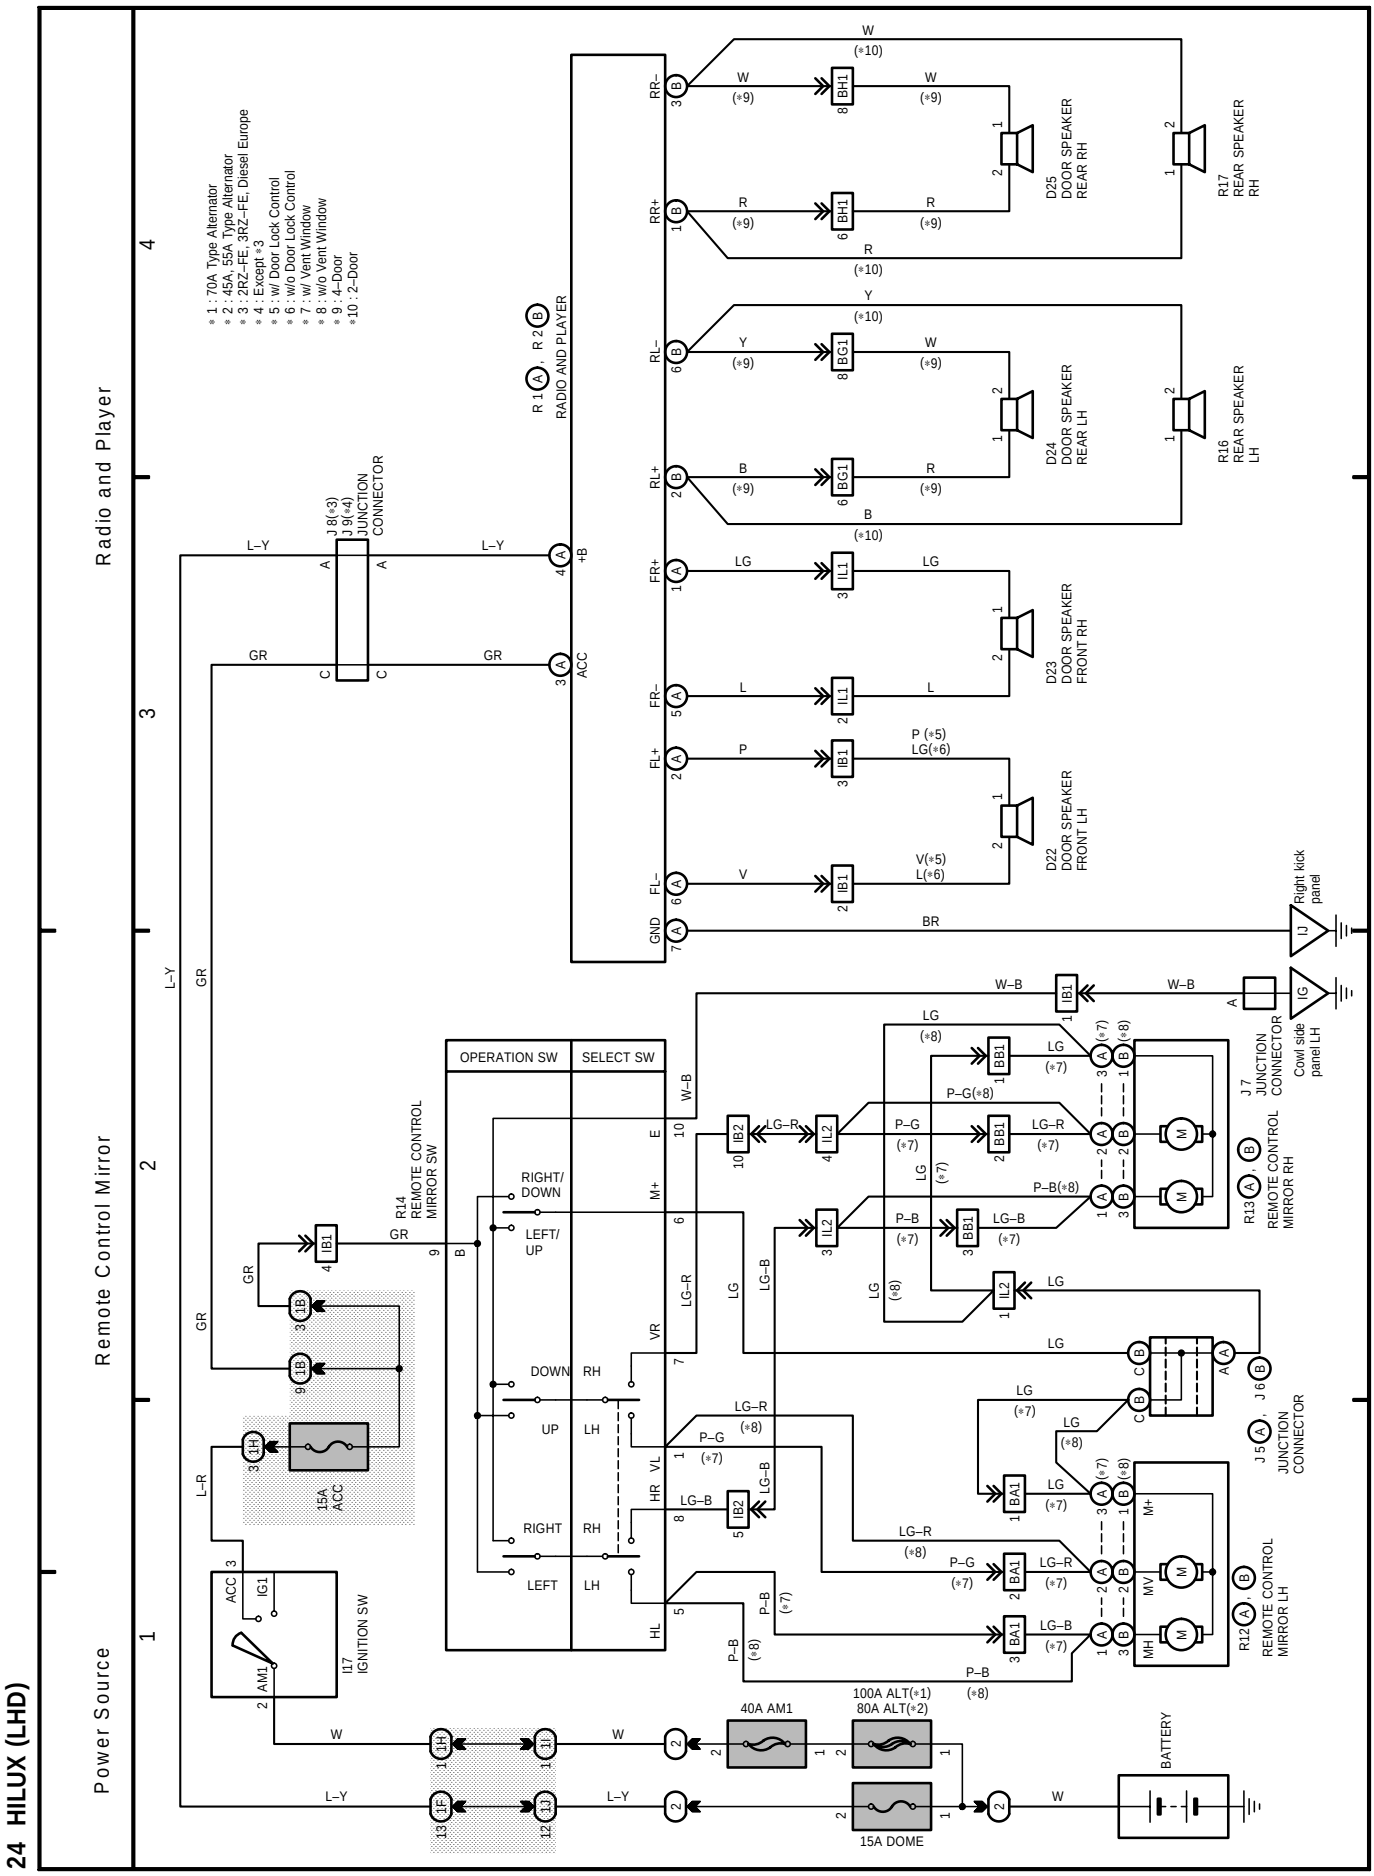

24 HILUX (LHD)
Power Source
Remote Control Mirror
Radio and Player
1
2
3
4
*1 : 70A Type Alternator
*2 : 45A, 55A Type Alternator
*3 : 2RZ–FE, 3RZ–FE, Diesel Europe
*4 : Except *3
*5 : w/ Door Lock Control
*6 : w/o Door Lock Control
*7 : w/ Vent Window
*8 : w/o Vent Window
*9 : 4–Door
*10 : 2–Door
R 1 (A), R 2 (B)
RADIO AND PLAYER
RR–
RR+
RL–
RL+
FR+
FR–
FL+
FL–
GND
ACC
+B
D25 DOOR SPEAKER REAR RH
R17 REAR SPEAKER RH
D24 DOOR SPEAKER REAR LH
R16 REAR SPEAKER LH
D23 DOOR SPEAKER FRONT RH
D22 DOOR SPEAKER FRONT LH
J8(*3) J9(*4) JUNCTION CONNECTOR
R14 REMOTE CONTROL MIRROR SW
OPERATION SW
SELECT SW
RIGHT/ DOWN
LEFT/ UP
DOWN RH
UP LH
RIGHT RH
LEFT LH
E
M+
VR
VL
HR
HL
R13 (A), (B) REMOTE CONTROL MIRROR RH
R12 (A), (B) REMOTE CONTROL MIRROR LH
J5 (A), J6 (B) JUNCTION CONNECTOR
J7 JUNCTION CONNECTOR
Cowl side panel LH
Right kick panel
I17 IGNITION SW
ACC
IG1
AM1
15A ACC
40A AM1
100A ALT(*1) 80A ALT(*2)
15A DOME
BATTERY