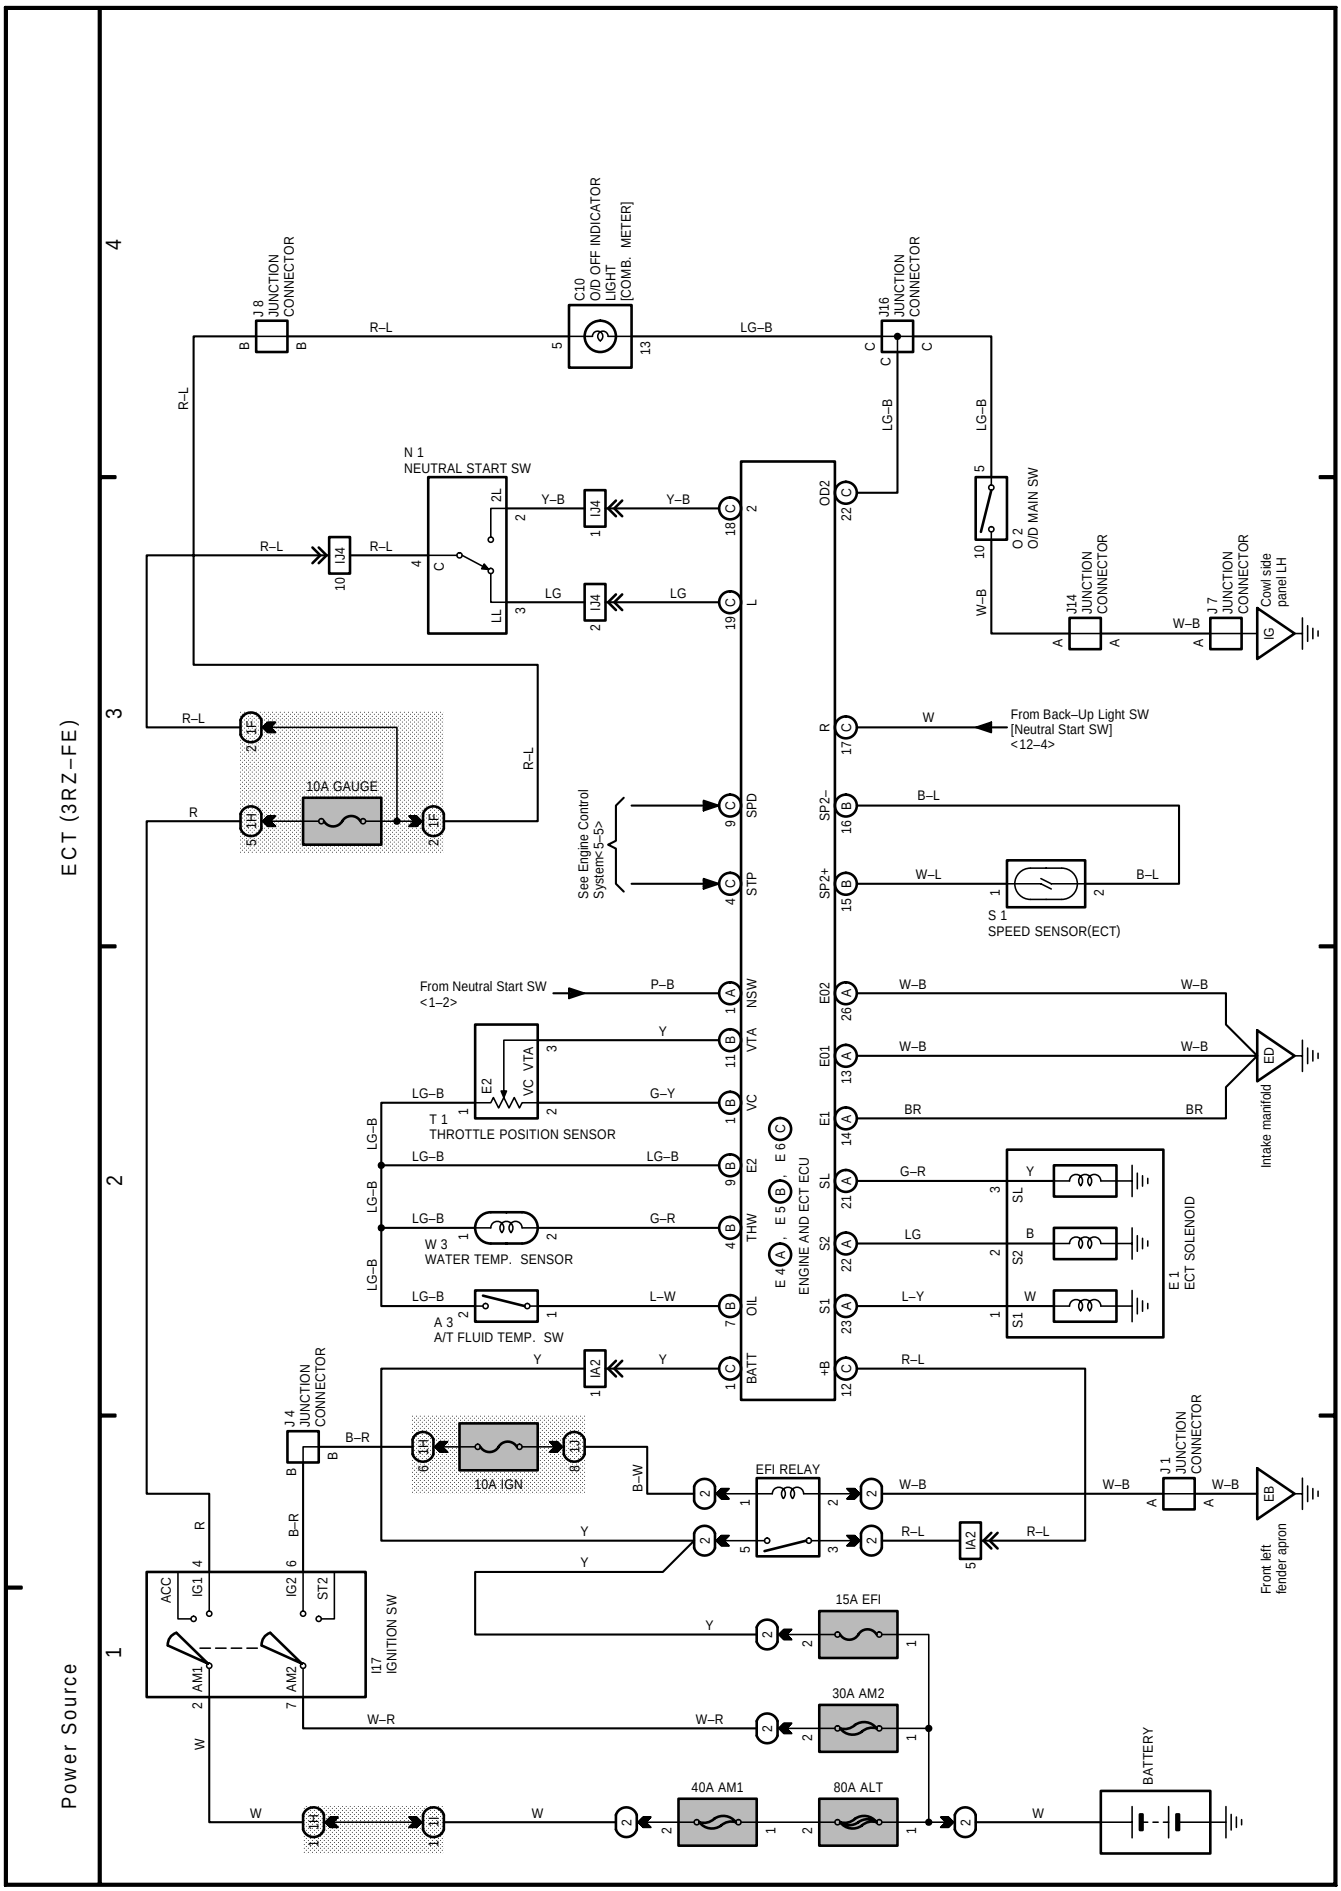

ECT (3RZ–FE)
Power Source
28 HILUX (LHD)
J 8 JUNCTION CONNECTOR
C10 O/D OFF INDICATOR LIGHT [COMB. METER]
J16 JUNCTION CONNECTOR
N 1 NEUTRAL START SW
O 2 O/D MAIN SW
J14 JUNCTION CONNECTOR
J 7 JUNCTION CONNECTOR
Cowl side panel LH
From Back–Up Light SW [Neutral Start SW] <12–4>
10A GAUGE
See Engine Control System<5–5>
S 1 SPEED SENSOR(ECT)
From Neutral Start SW <1–2>
T 1 THROTTLE POSITION SENSOR
W 3 WATER TEMP. SENSOR
A 3 A/T FLUID TEMP. SW
ENGINE AND ECT ECU
E 1 ECT SOLENOID
Intake manifold
J 4 JUNCTION CONNECTOR
10A IGN
EFI RELAY
J 1 JUNCTION CONNECTOR
Front left fender apron
I17 IGNITION SW
ACC
IG1
IG2
ST2
AM1
AM2
15A EFI
30A AM2
40A AM1
80A ALT
BATTERY