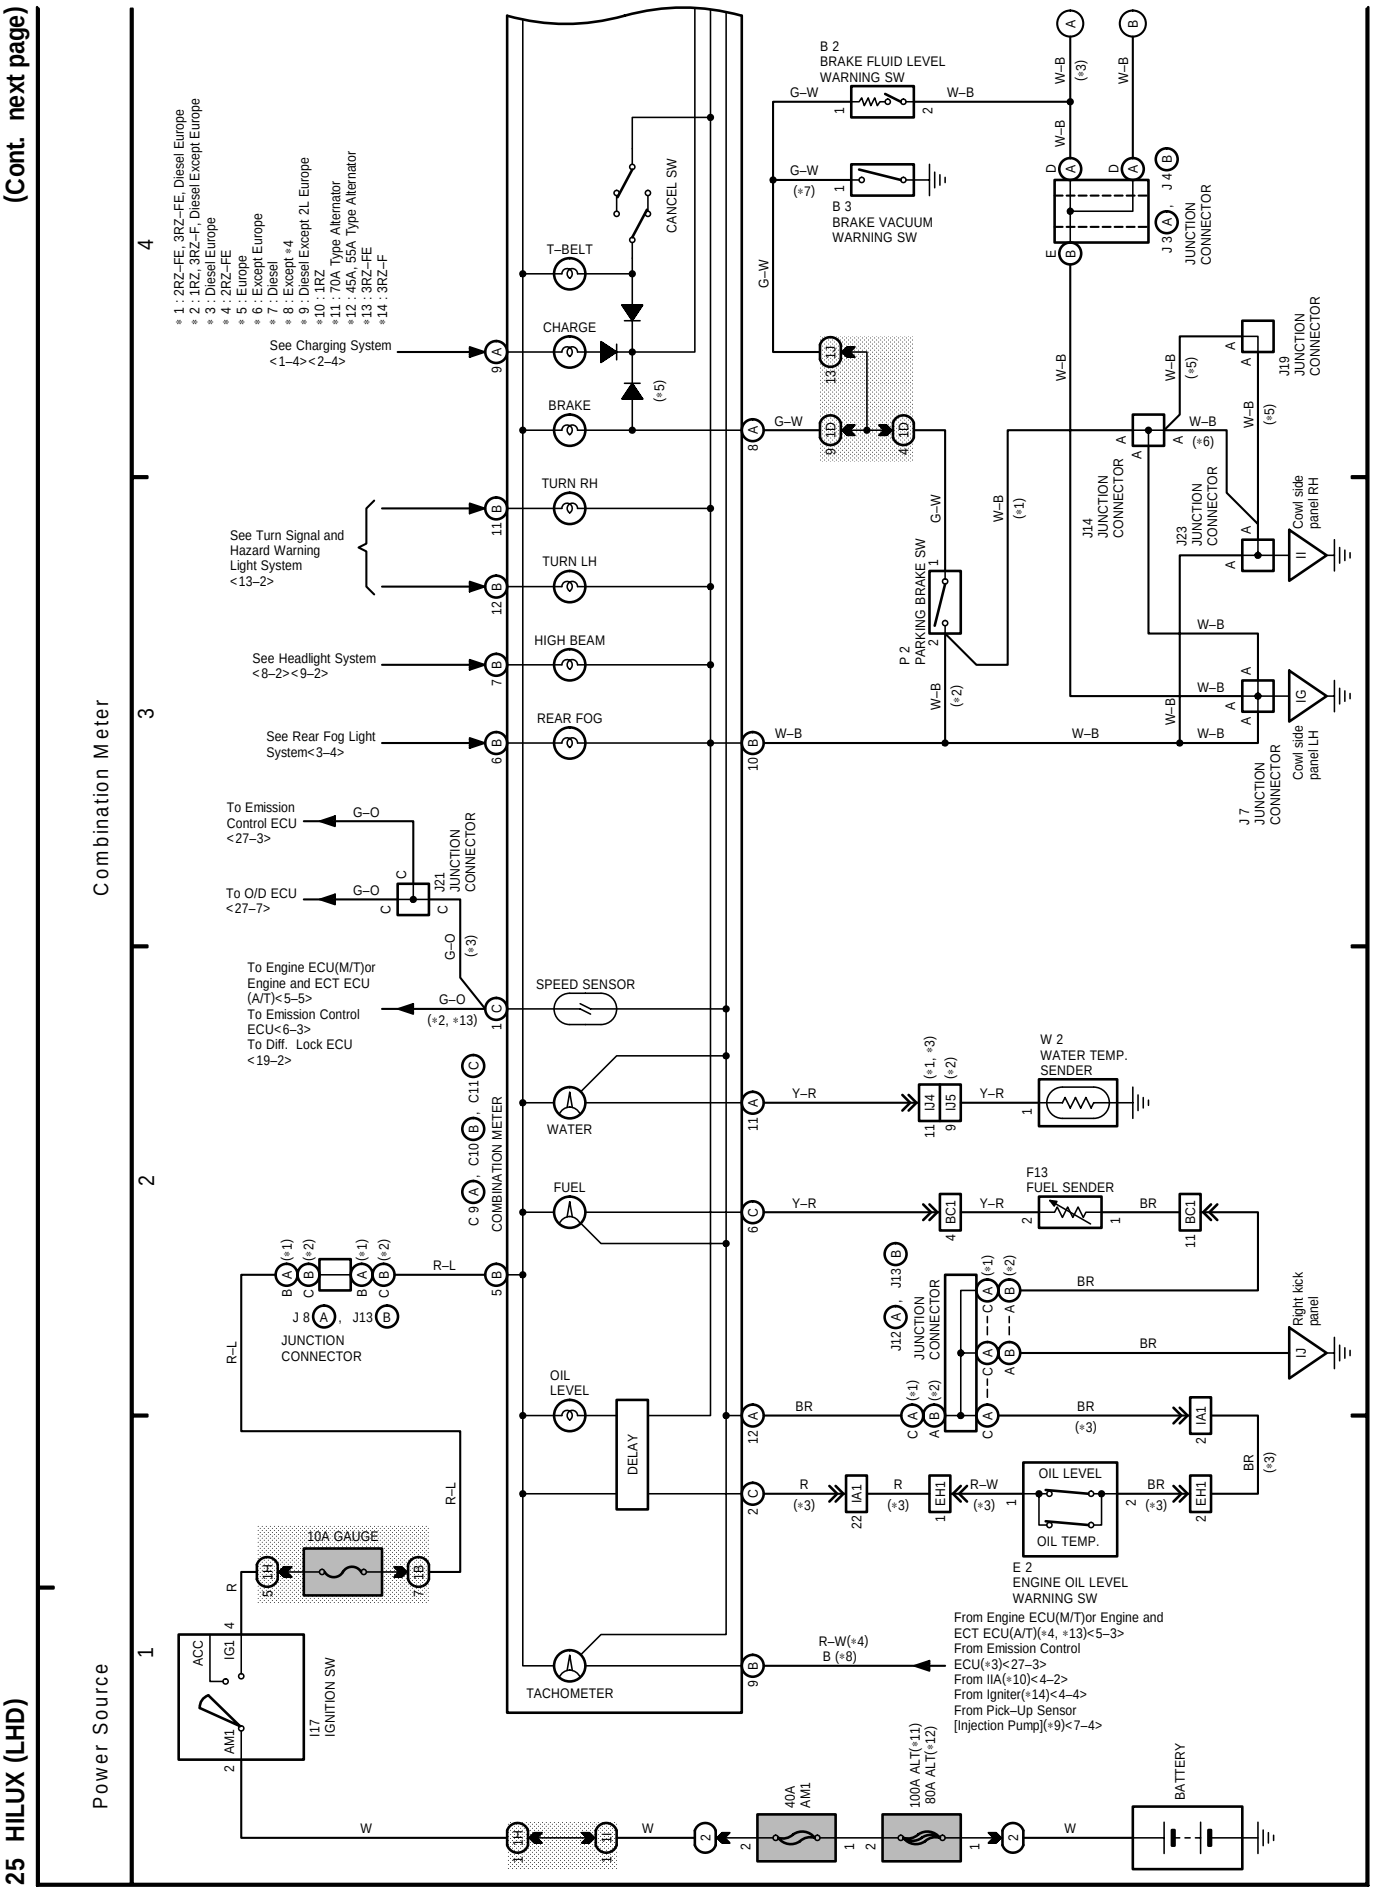
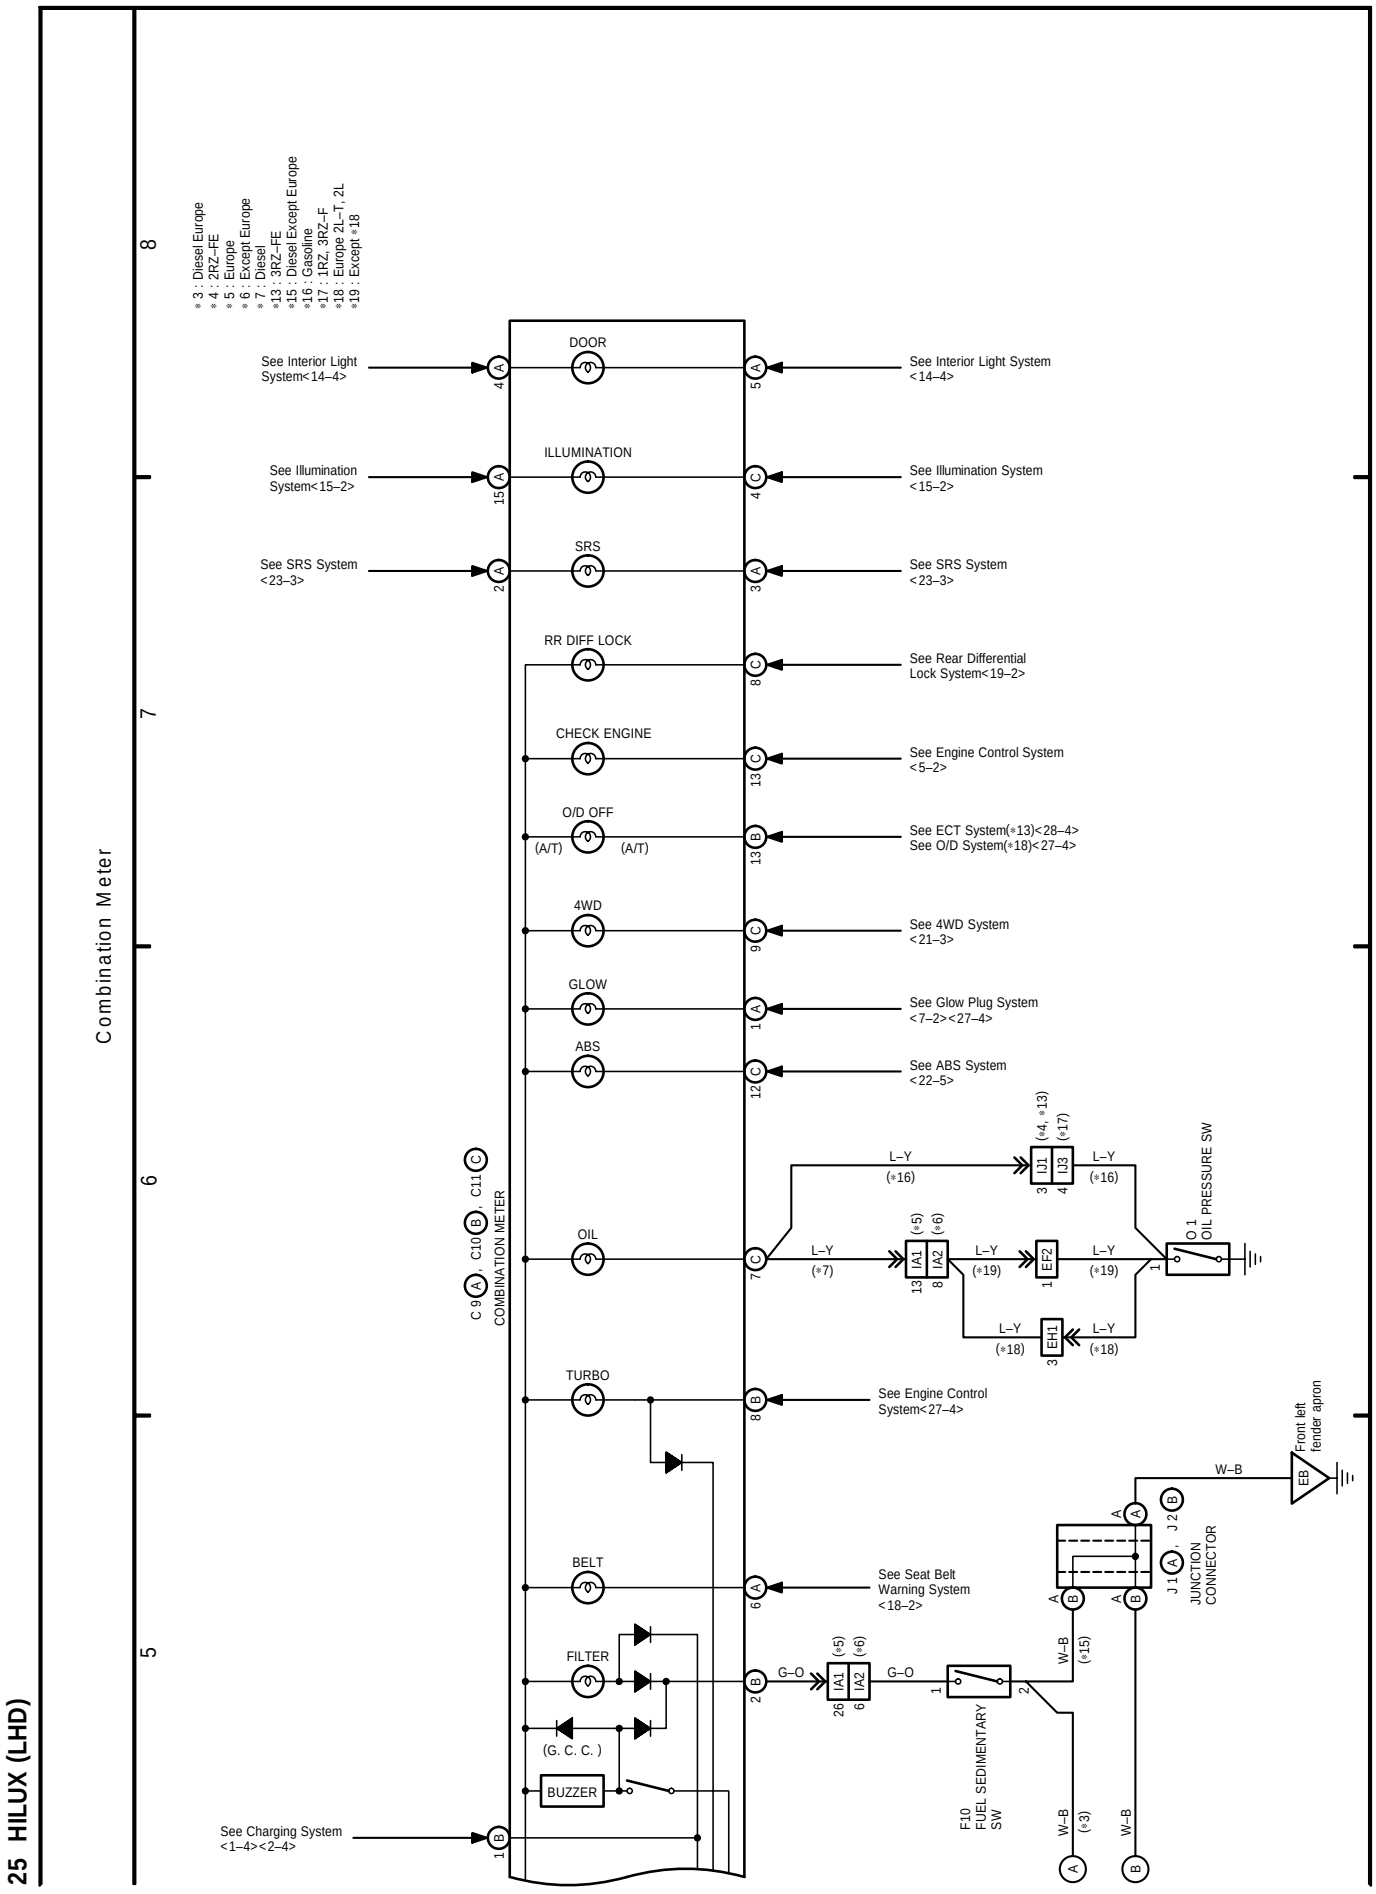

(Cont. next page)
25 HILUX (LHD)
Power Source
Combination Meter
1
2
3
4
*1 : 2RZ–FE, 3RZ–FE, Diesel Europe
*2 : 1RZ, 3RZ–F, Diesel Except Europe
*3 : Diesel Europe
*4 : 2RZ–FE
*5 : Europe
*6 : Except Europe
*7 : Diesel
*8 : Except *4
*9 : Diesel Except 2L Europe
*10 : 1RZ
*11 : 70A Type Alternator
*12 : 45A, 55A Type Alternator
*13 : 3RZ–FE
*14 : 3RZ–F
CANCEL SW
T–BELT
CHARGE
BRAKE
TURN RH
TURN LH
HIGH BEAM
REAR FOG
SPEED SENSOR
WATER
FUEL
OIL LEVEL
TACHOMETER
DELAY
See Charging System <1–4><2–4>
See Turn Signal and Hazard Warning Light System <13–2>
See Headlight System <8–2><9–2>
See Rear Fog Light System<3–4>
To Emission Control ECU <27–3>
To O/D ECU <27–7>
To Engine ECU(M/T)or Engine and ECT ECU (A/T)<5–5>
To Emission Control ECU<6–3>
To Diff. Lock ECU <19–2>
B 2
BRAKE FLUID LEVEL WARNING SW
B 3
BRAKE VACUUM WARNING SW
P 2
PARKING BRAKE SW
W 2
WATER TEMP. SENDER
F13
FUEL SENDER
E 2
ENGINE OIL LEVEL WARNING SW
OIL LEVEL
OIL TEMP.
J 3 , J 4
JUNCTION CONNECTOR
J 8 , J13
JUNCTION CONNECTOR
J12 , J13
JUNCTION CONNECTOR
J14
JUNCTION CONNECTOR
J23
JUNCTION CONNECTOR
J19
JUNCTION CONNECTOR
J 7
JUNCTION CONNECTOR
J21
JUNCTION CONNECTOR
C 9 , C10 , C11
COMBINATION METER
Cowl side panel RH
Cowl side panel LH
Right kick panel
10A GAUGE
I17
IGNITION SW
ACC
IG1
AM1
40A AM1
100A ALT(*11) 80A ALT(*12)
BATTERY
From Engine ECU(M/T)or Engine and ECT ECU(A/T)(*4, *13)<5–3>
From Emission Control ECU(*3)<27–3>
From IIA(*10)<4–2>
From Igniter(*14)<4–4>
From Pick–Up Sensor [Injection Pump](*9)<7–4>


25 HILUX (LHD)
Combination Meter
8
7
6
5
*3 : Diesel Europe
*4 : 2RZ–FE
*5 : Europe
*6 : Except Europe
*7 : Diesel
*13 : 3RZ–FE
*15 : Diesel Except Europe
*16 : Gasoline
*17 : 1RZ, 3RZ–F
*18 : Europe 2L–T, 2L
*19 : Except *18
DOOR
ILLUMINATION
SRS
RR DIFF LOCK
CHECK ENGINE
O/D OFF
(A/T)
(A/T)
4WD
GLOW
ABS
OIL
TURBO
BELT
FILTER
(G. C. C.)
BUZZER
See Interior Light System<14–4>
See Illumination System<15–2>
See SRS System<23–3>
See Rear Differential Lock System<19–2>
See Engine Control System<5–2>
See ECT System(*13)<28–4>
See O/D System(*18)<27–4>
See 4WD System<21–3>
See Glow Plug System<7–2><27–4>
See ABS System<22–5>
See Engine Control System<27–4>
See Seat Belt Warning System<18–2>
See Charging System<1–4><2–4>
C 9 (A), C10 (B), C11 (C)
COMBINATION METER
L–Y
(*16)
(*4, *13)
(*17)
IJ1
IJ3
O 1
OIL PRESSURE SW
(*5)
(*6)
IA1
IA2
(*7)
(*19)
EF2
EH1
(*18)
G–O
26
6
F10
FUEL SEDIMENTARY SW
W–B
(*15)
(*3)
J1 (A), J2 (B)
JUNCTION CONNECTOR
EB
Front left fender apron