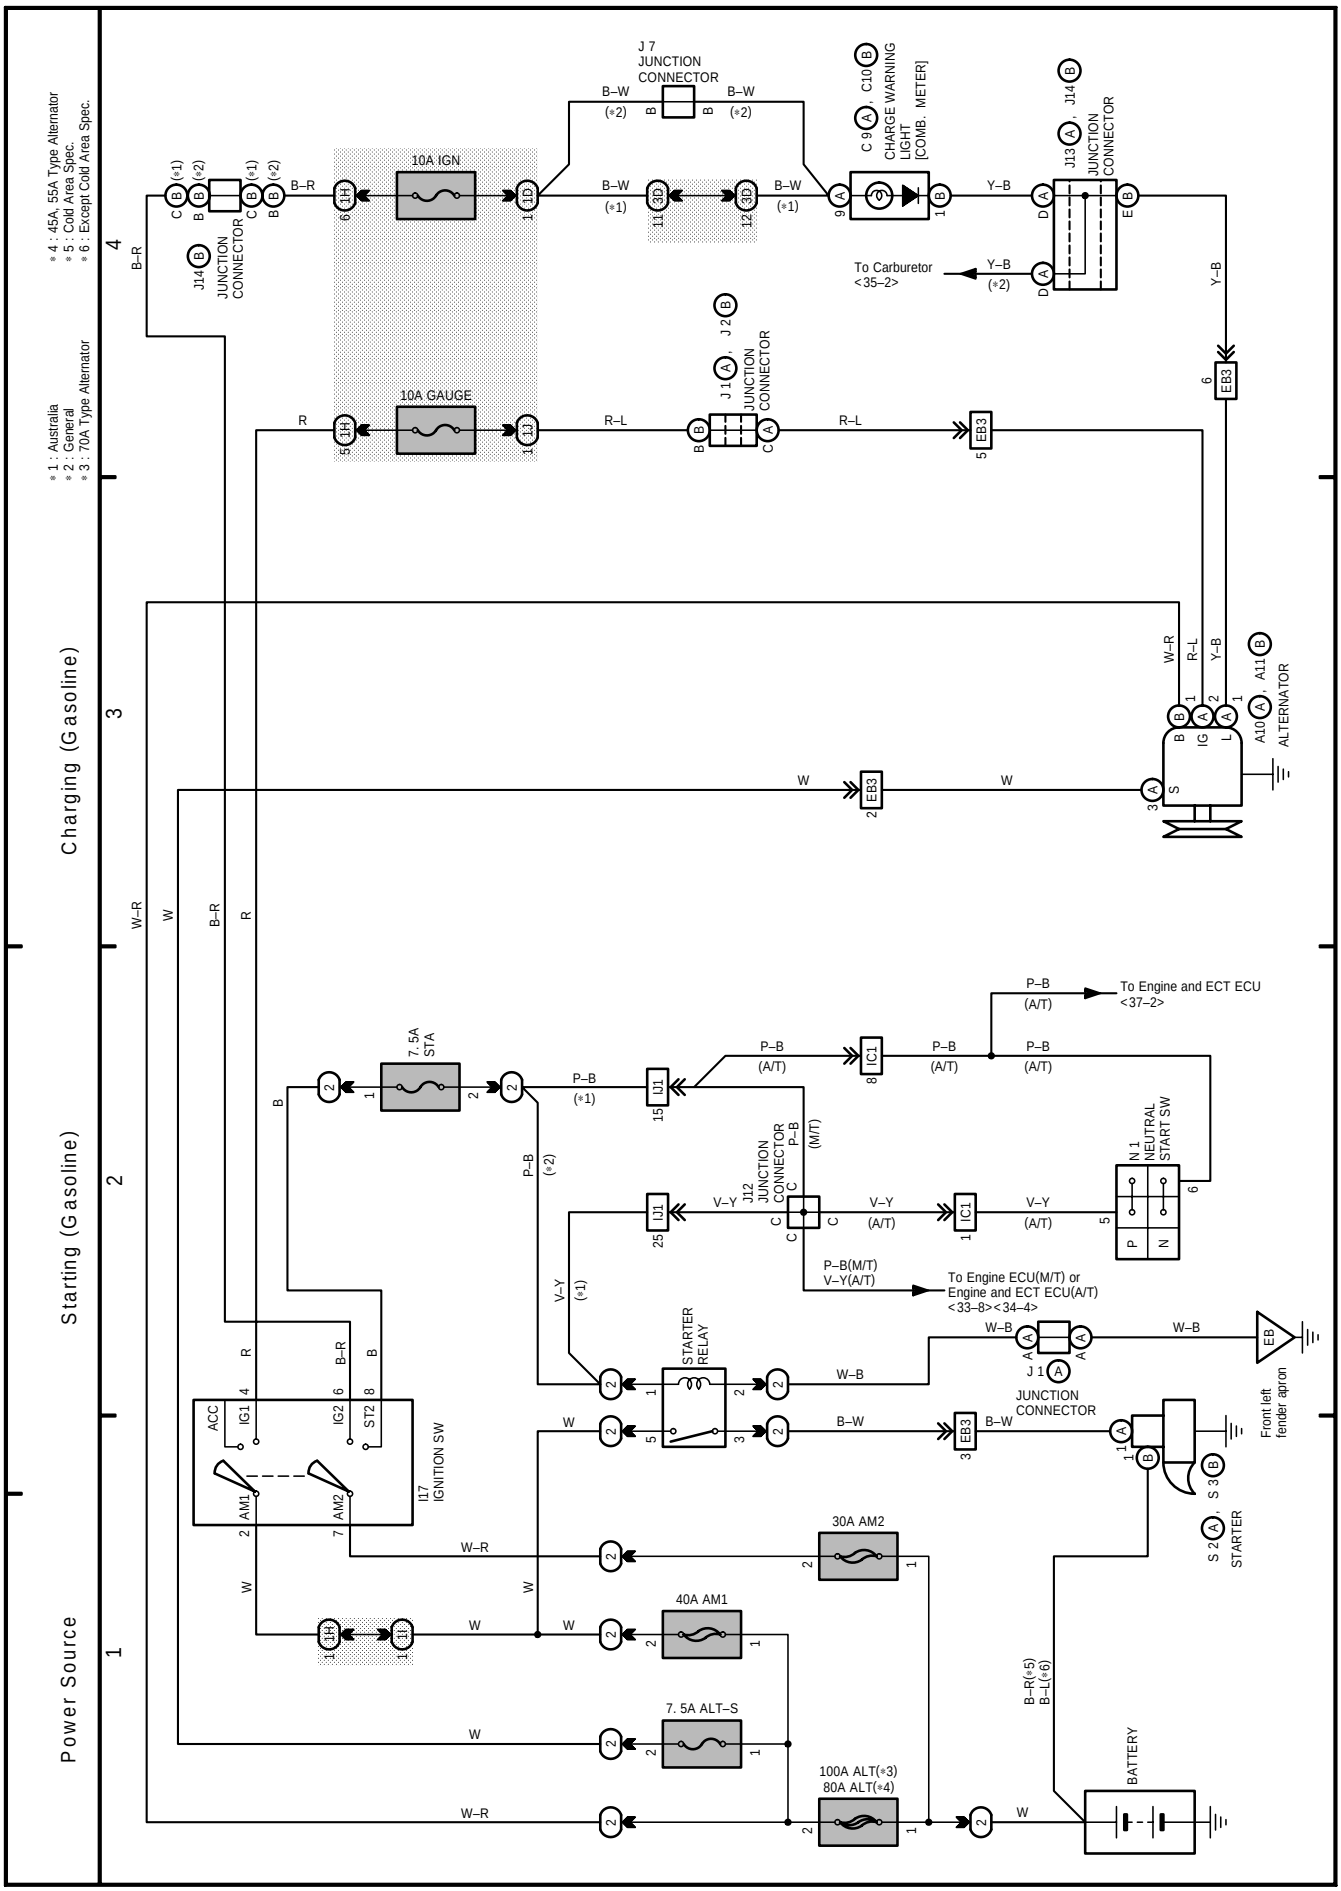

Power Source
Starting (Gasoline)
Charging (Gasoline)
1
2
3
4
*1 : Australia
*2 : General
*3 : 70A Type Alternator
*4 : 45A, 55A Type Alternator
*5 : Cold Area Spec.
*6 : Except Cold Area Spec.
10A IGN
10A GAUGE
7. 5A STA
7. 5A ALT–S
30A AM2
40A AM1
100A ALT(*3)
80A ALT(*4)
I17 IGNITION SW
ACC
IG1
IG2
ST2
AM1
AM2
STARTER RELAY
J 7 JUNCTION CONNECTOR
J 1 JUNCTION CONNECTOR
J 2 JUNCTION CONNECTOR
J12 JUNCTION CONNECTOR
J13 JUNCTION CONNECTOR
J14 JUNCTION CONNECTOR
C 9 CHARGE WARNING LIGHT [COMB. METER]
C10
N 1 NEUTRAL START SW
A10 ALTERNATOR
A11
S 2 STARTER
S 3
EB JUNCTION CONNECTOR
Front left fender apron
BATTERY
To Carburetor <35–2>
To Engine and ECT ECU <37–2>
To Engine ECU(M/T) or Engine and ECT ECU(A/T) <33–8><34–4>
P–B(M/T)
V–Y(A/T)
B–R(*5)
B–L(*6)