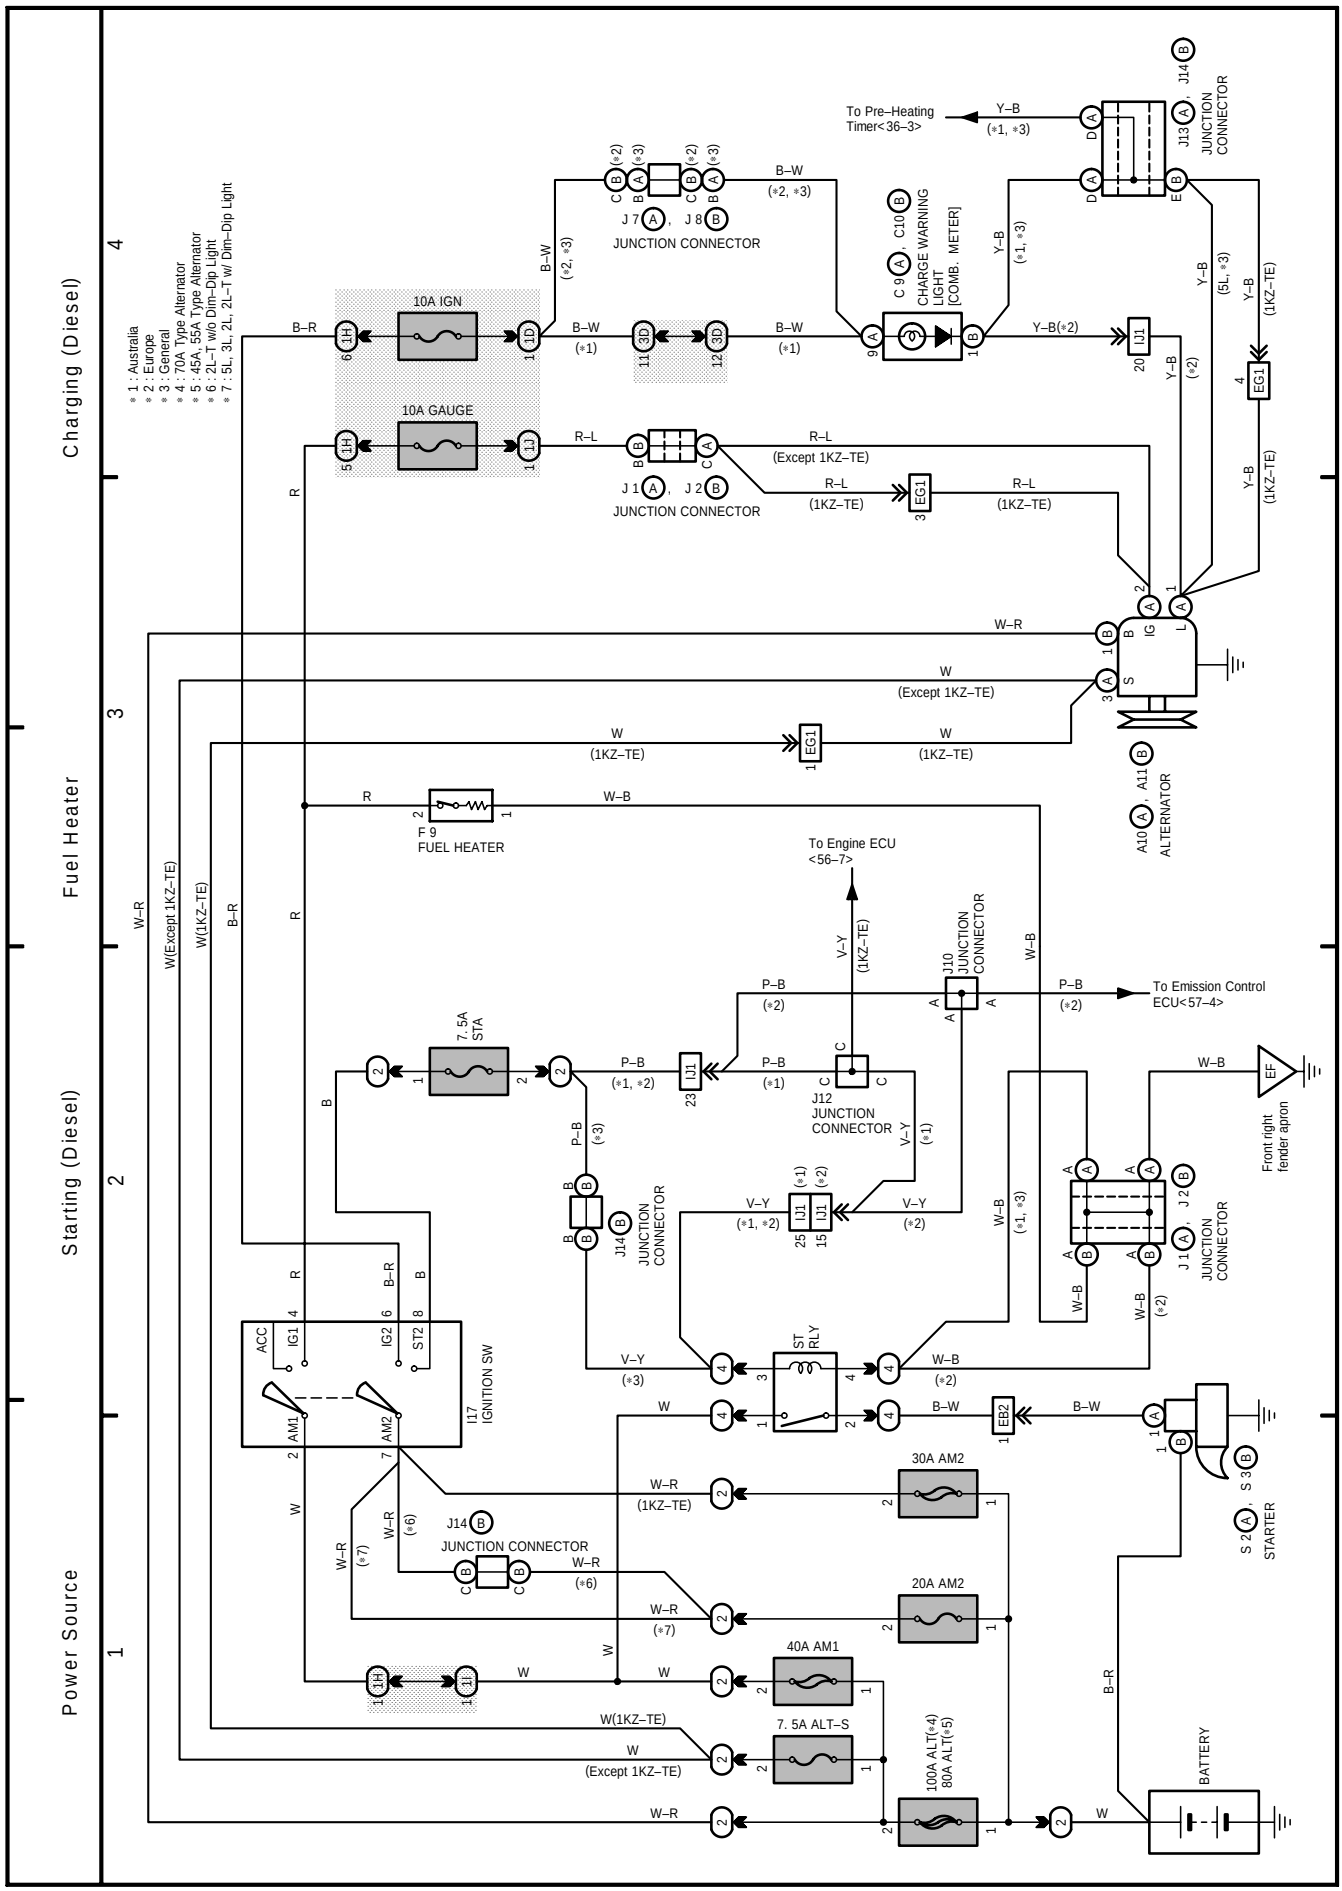

31 HILUX (RHD)
Power Source
Starting (Diesel)
Fuel Heater
Charging (Diesel)
1
2
3
4
* 1 : Australia
* 2 : Europe
* 3 : General
* 4 : 70A Type Alternator
* 5 : 45A, 55A Type Alternator
* 6 : 2L–T w/o Dim–Dip Light
* 7 : 5L, 3L, 2L, 2L–T w/ Dim–Dip Light
10A IGN
10A GAUGE
JUNCTION CONNECTOR
J 1 , J 2
J 7 , J 8
J14
J13
J10
J12
CHARGE WARNING LIGHT [COMB. METER]
C 9 , C10
To Pre–Heating Timer<36–3>
F 9
FUEL HEATER
7. 5A STA
ST RLY
I17 IGNITION SW
ACC
IG1
IG2
ST2
30A AM2
20A AM2
40A AM1
7. 5A ALT–S
100A ALT(*4) 80A ALT(*5)
BATTERY
ALTERNATOR
A10 , A11
STARTER
S 2 , S 3
To Engine ECU <56–7>
To Emission Control ECU<57–4>
Front right fender apron
EF
EB2
W(Except 1KZ–TE)
W(1KZ–TE)
W–R
B–R
R
B
W
B–W
R–L
P–B
V–Y
W–B
Y–B
Y–B(*2)
(*1)
(*2)
(*3)
(*6)
(*7)
(1KZ–TE)
(Except 1KZ–TE)