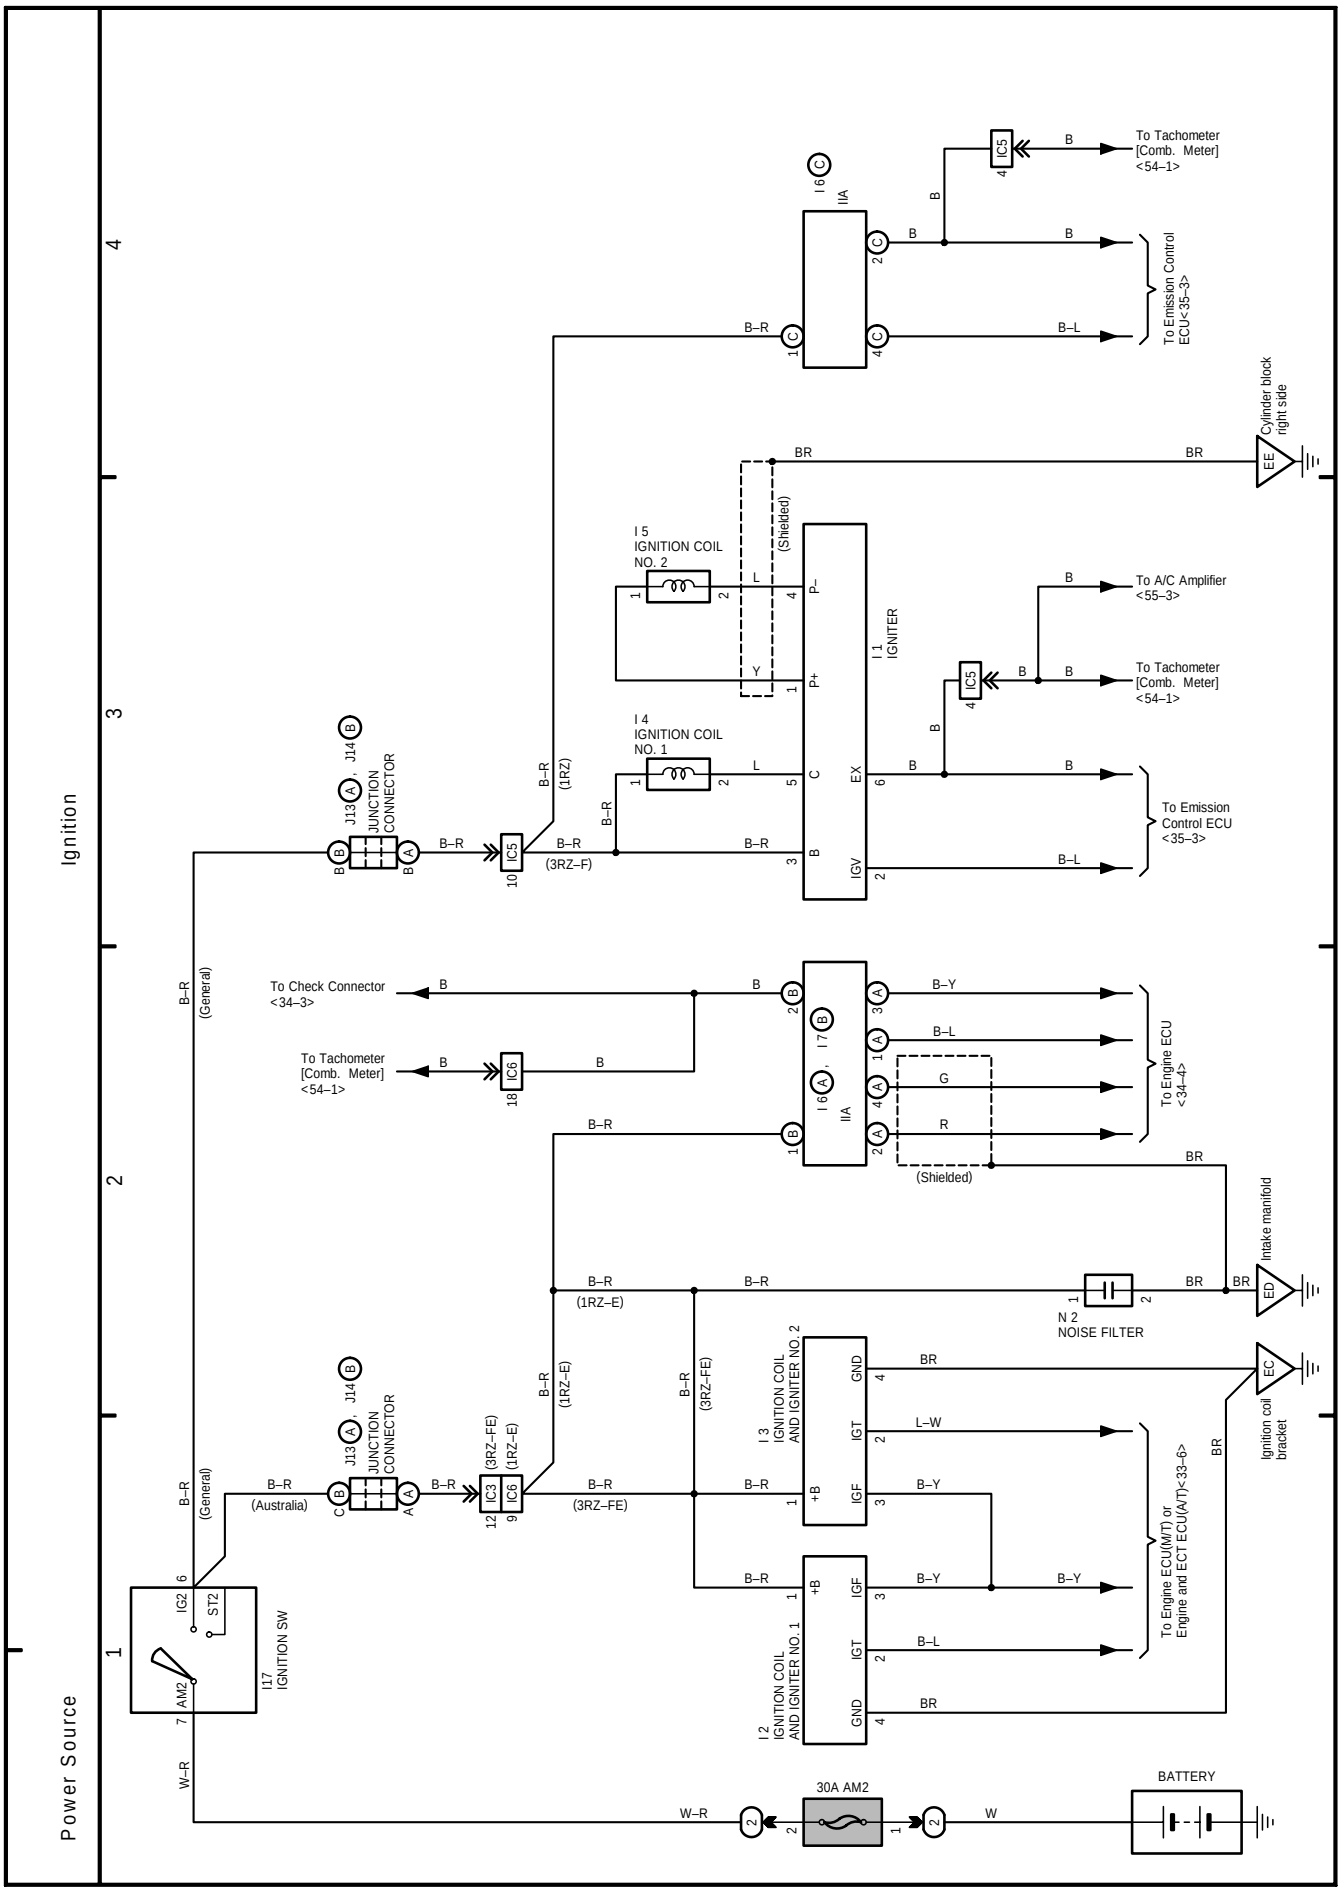

32 HILUX (RHD)
Power Source
Ignition
1
2
3
4
I7 IGNITION SW
IG2
ST2
AM2
W–R
B–R (General)
(Australia)
J13 , J14 JUNCTION CONNECTOR
IC3
IC6
IC5
(3RZ–FE)
(1RZ–E)
(1RZ)
(3RZ–F)
B–R
B
BR
L–W
B–Y
B–L
G
R
W
L
Y
(Shielded)
I 2 IGNITION COIL AND IGNITER NO. 1
I 3 IGNITION COIL AND IGNITER NO. 2
I 4 IGNITION COIL NO. 1
I 5 IGNITION COIL NO. 2
I 1 IGNITER
I 6 IIA
I 7
P–
P+
GND
IGT
IGF
+B
EX
IGV
To Tachometer [Comb. Meter] <54–1>
To Emission Control ECU<35–3>
To A/C Amplifier <55–3>
To Emission Control ECU <35–3>
To Check Connector <34–3>
To Engine ECU <34–4>
To Engine ECU(M/T) or Engine and ECT ECU(A/T)<33–6>
Cylinder block right side
Intake manifold
Ignition coil bracket
N 2 NOISE FILTER
30A AM2
BATTERY
EE
ED
EC